




INffa018V01\_US

**390-002**

**36M+**

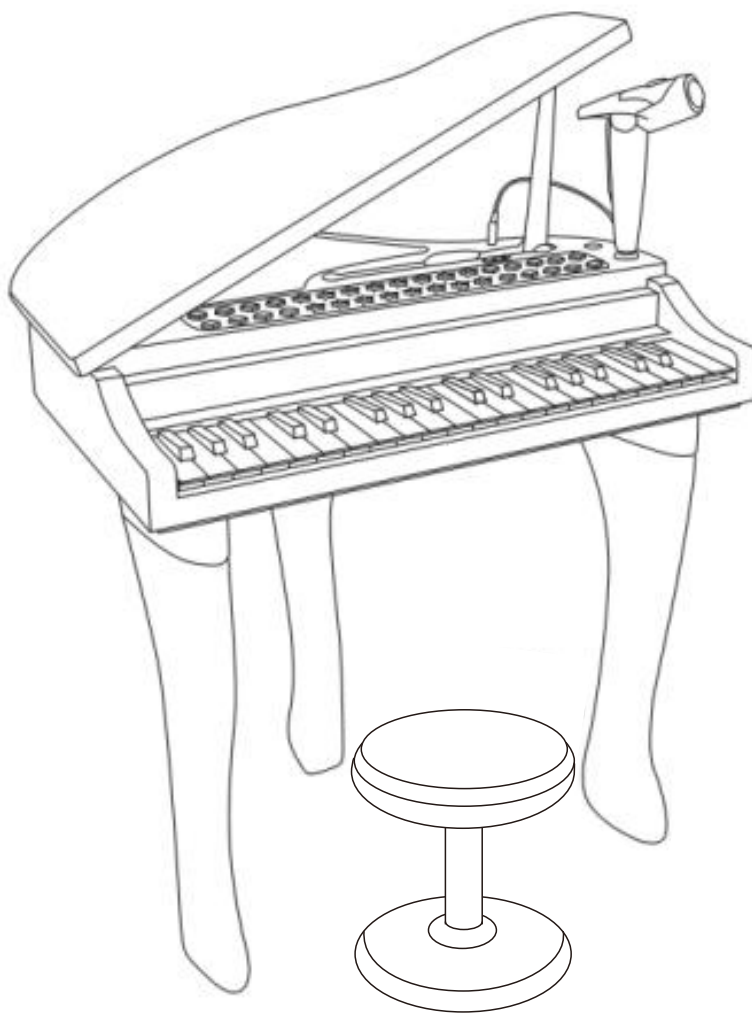

### Mini piano Musical toy



**WARNING:**


1. CHOKING HAZARD—Small parts. Not for children under 3 years.
2. Only allowed for adults to install, keep children away.
3. To be used under the direct supervision of an adult.
4. Keep away from fire! Keep away from water!
5. Max weight of Stool: 30 kg.




**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

# ASSEMBLY INSTRUCTION


01

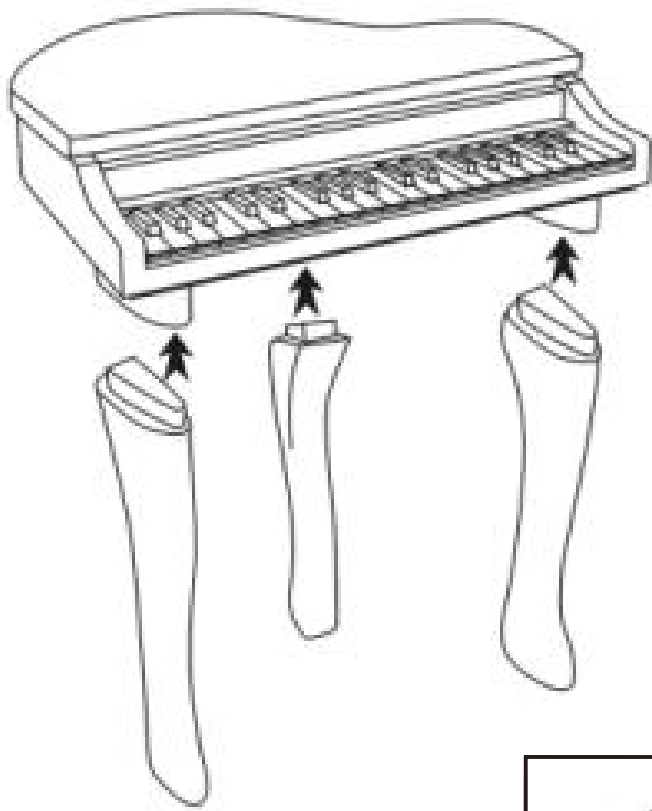

02

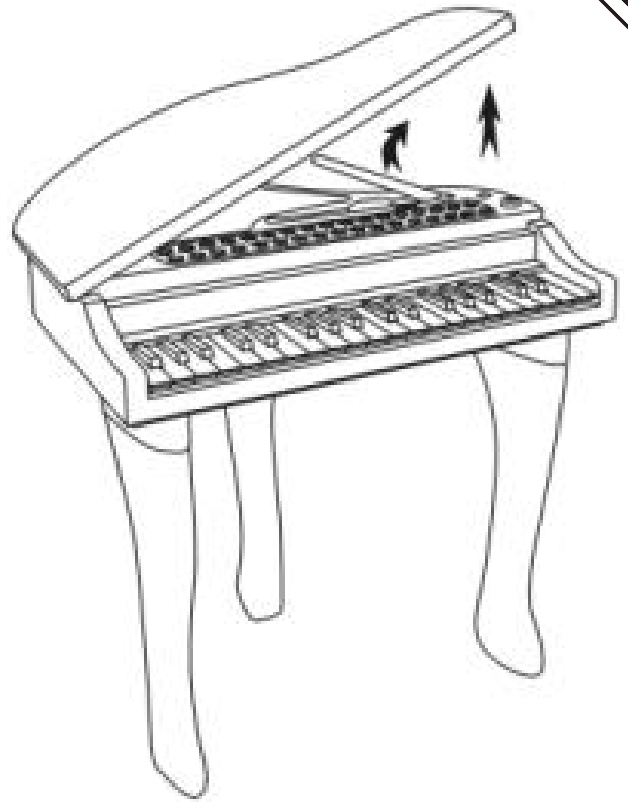


04

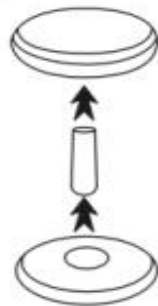

03



05

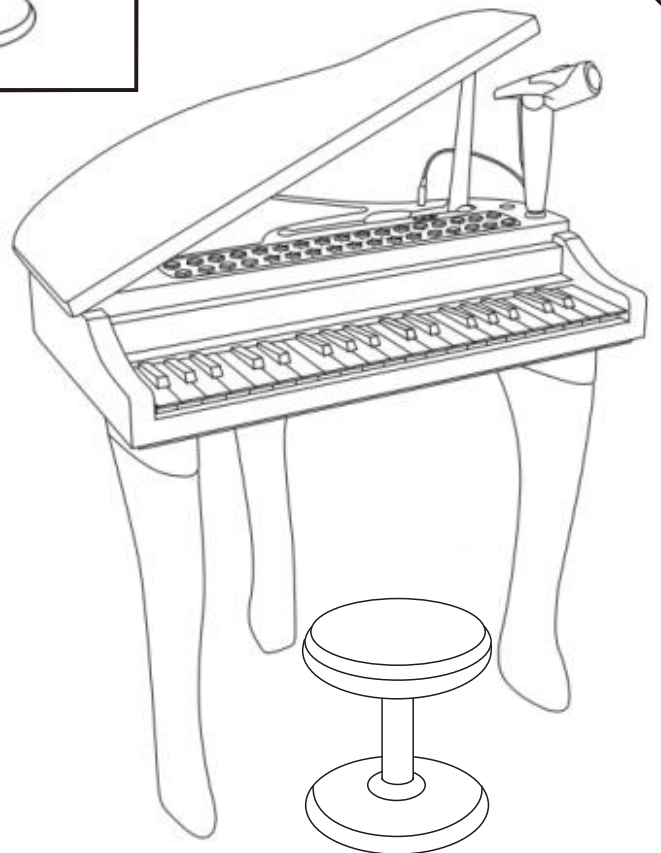

## **BEFORE USE:**

Open the back battery compartment with a screwdriver and install 4 AA batteries (not included). Close the lid. Batteries are to be inserted with the correct polarity.

## **MICROPHONE**

- Please set up microphone frame on clappers.
- Please insert microphone plug in MIC joint.

## **OPERATE**

Open the toy, pull out power switch to the "ON" position.

### **● SWITCH**

Press the key of switch and you can switch 4 drumbeats to 4 Animals.

### **● VOLUME**

Classes of volume control: press the volume UP, the volume will turn up one class; Press Volume DN, the volume will turn down one class.

### **● DEMOALL**

Press DEMOALL KEY to broadcast DEMO SONG

### **● OK/ON**

Press the One key to enter the one key function, while press the white key to select song. After the song is selected, press any key to play and repeat this song.

### **● Record/Play/Auto-stop**

This keyboard has the function of recording and can play repeatedly. This system will play a piece of music and stop automatically if you do not touch any key within three minutes.

## **MAINTAIN WITH SUPPORT**

- Avoid moisture and dust;
- Avoid conducting electricity;
- Avoid corrosive liquid or small article entering the inner part;
- Avoid collision and heavy pressure;
- Do not use corrosive liquid to wash the surface;  
Goods should not be subjected excessive heat or corrosion environment;
- Please keep the battery out and put the product in plastic bag, then put it in packing box if long turn storage;
- If any problem occurred, please send it to qualified maintainer;
- Do not assemble or repair it by your self;
- Please keep the packing bag out of the reach of children to avoid accident.

## **BATTERY WARNING AND CAUTION**

- Replacement of batteries must be done by adults.
- Do not mix alkaline, standard or rechargeable batteries.
- Never mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

