



INffa082_US_CA

3A0-015V00



3-8
years/ans



EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.
FR_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION
ULTÉRIEURE.

WARNING:

1. **CHOKING HAZARD—Small parts. Not for children under 3 years.**
2. Only allowed for adults to install, keep children away.
3. To be used under the direct supervision of an adult.
4. Keep away from fire! Keep away from water!

MAINTENANCE & CARE

- A. Keep all instructions and parts relating to this product for future reference.
- B. If any problem occurred, please sent it to qualified maintainer.
- C. Clean your toy with a clean damp cloth.

BATTERY WARNING:

1. Do not mix alkaline, standard or rechargeable batteries.
2. Never mix old and new batteries.
3. Batteries are to be inserted with the correct polarity.
4. Remove the batteries when the unit is not in use for long periods.
5. Always comply with local laws and regulations.

AVERTISSEMENT :

1. **RISQUE D'ÉTOUFFEMENT - Petites pièces. Déconseillé aux enfants de moins de 3 ans.**
2. Installation par des adultes uniquement, tenir les enfants à l'écart.
3. À utiliser sous la surveillance directe d'un adulte.
4. Loin du feu ! Loin de l'eau !

ENTRETIEN ET MAINTENANCE

- A. Conservez toutes les instructions et les pièces relatives à ce produit pour pouvoir vous y référer ultérieurement.
- B. Si un problème survient, veuillez l'envoyer à un technicien qualifié.
- C. Nettoyez votre jouet avec un chiffon propre et humide.

AVIS RELATIF AUX PILES :

1. Ne pas mélanger les piles alcalines, standard ou rechargeables.
2. Ne mélangez jamais des piles anciennes avec de nouvelles piles.
3. Les piles doivent être insérées avec la bonne polarité.
4. Retirez les piles lorsque l'appareil n'est pas utilisé pendant une longue période.
5. Respectez toujours les lois et règlements locaux.

A x 1



B x 1



C x 1




D x 1





E x 1



F x 18

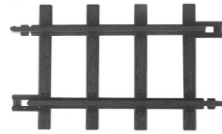

G x 12

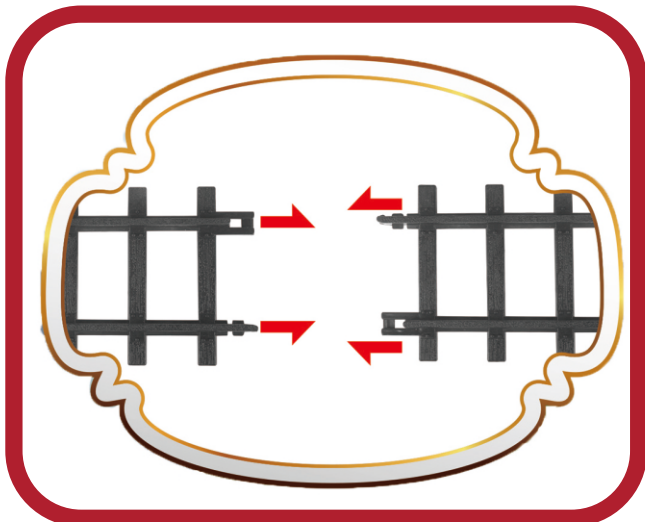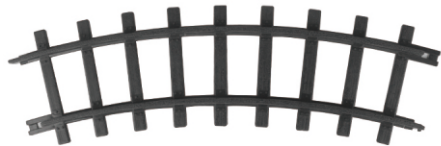

ON/OFF

Requires 6 "AA" 1.5V batteries (not included).
Fonctionne avec 6 piles "AA" (non fournies).

Battery Installation

The diagram shows the back of a red and black toy train engine with its battery compartment open. A circular inset at the top left shows a close-up of the ON/OFF switch. A screwdriver is shown on the right, having just removed the battery cover. The battery compartment contains six slots, each labeled "1.5V UM-3C". Three Toshiba AA batteries are shown being inserted into the slots. A separate inset shows three more Toshiba AA batteries. Arrows point from the battery insets to the corresponding slots in the compartment.

2 INSTALLATION METHODS / 2 MÉTHODES D'INSTALLATION

