




Assembly Instructions

WARNING: THIS TOY MUST BE ASSEMBLED BY AN ADULT. LIST OF PARTS:

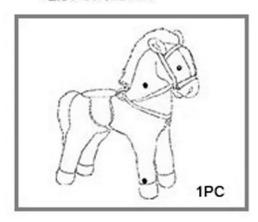

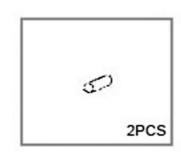

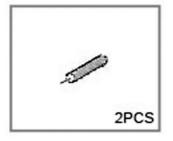

ASSEMBLY INSTRUCTIONS

STEP 1:

 
SCREW IN THE TWO HANDLES INTO THE HOLES LOCATED ON THE NECK OF THE HORSE.


STEP 2:

SCREW IN THE TWO FOOTRESTS INTO THE HOLES LOCATED ON THE LEGS OF THE HORSE.

PLAY INSTRUCTION:


HOLD THE HANDLES PRESS DOWN AND RAISE UP, THE HORSE



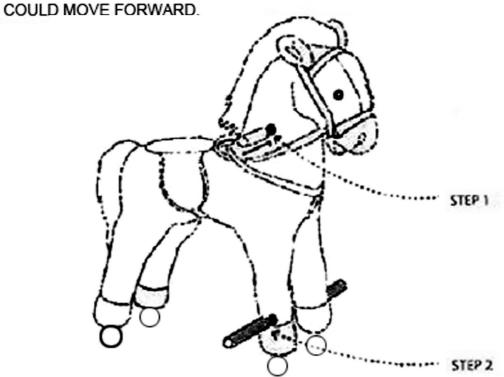



Assembly Instructions

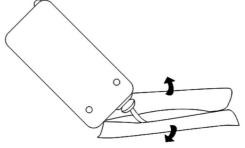



Tear off the bottom velcro and take out the battery.

Remove the safe plastic on battery.



Press the mark on animal hand, then it will make noise.

ADULT SUPERVISION IS RECOMMENDED REMOVE ALL PLASTIC **FASTENERS AND HANG TAGS** BEFORE GIVING TOY TO CHILD. THESE ATTACHMENTS ARE NOT PART OF THE TOY. COLORS AND CONTENTS MAY VARY **RATIONS**

FOR BEST PERFORMANCE:

- Use only the batteries recommended.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries together.
- · Remove batteries when toy is not in use.
- · Remove exhausted batteries from toy and dispose of in accordance with the battery manufacturer's recommendation.
- Do not attempt to recharge non-rechargeable batteries.
- Do not use rechargeable batteries.
- · Batteries are to be inserted with the correct
- The supply terminals are not to be short-circuited.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES. Max weight 60kg.

ATTENTION: The batteries included in this item are intended for in-store use. It is possible that these batteries may become weak or discharged prior to purchase and the customer may need to replace the batteries with fresh cells to insure proper operation.



Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.



FRONT BACK