



Assembly Instructions

WARNING: THIS TOY MUST BE ASSEMBLED BY AN ADULT.

54-0002 54-0003
330-033 330-034

LIST OF PARTS:

1. TOYS	1 PC
2. WOODEN ROCKER	1 PC
3. WOODEN HANDLES	2 PCS
4. WASHER RINGS	4 PCS
5. DOME NUTS	4 PCS

ASSEMBLY INSTRUCTIONS

STEP 1:

INSERT THE ATTACHED SCREWS UNDER THE TOYS LEGS INTO THE HOLES ON THE WOODEN ROCKER.

 
STEP 2:

 
PLACE THE WASHER RINGS AND WING NUTS ON THE SCREWS AND TIGHTEN BY HAND.

STEP 3:


SCREW IN THE TWO HANDLES INTO THE HOLES LOCATED ON THE NECK OF THE TOYS.

FOR EXAMPLE:

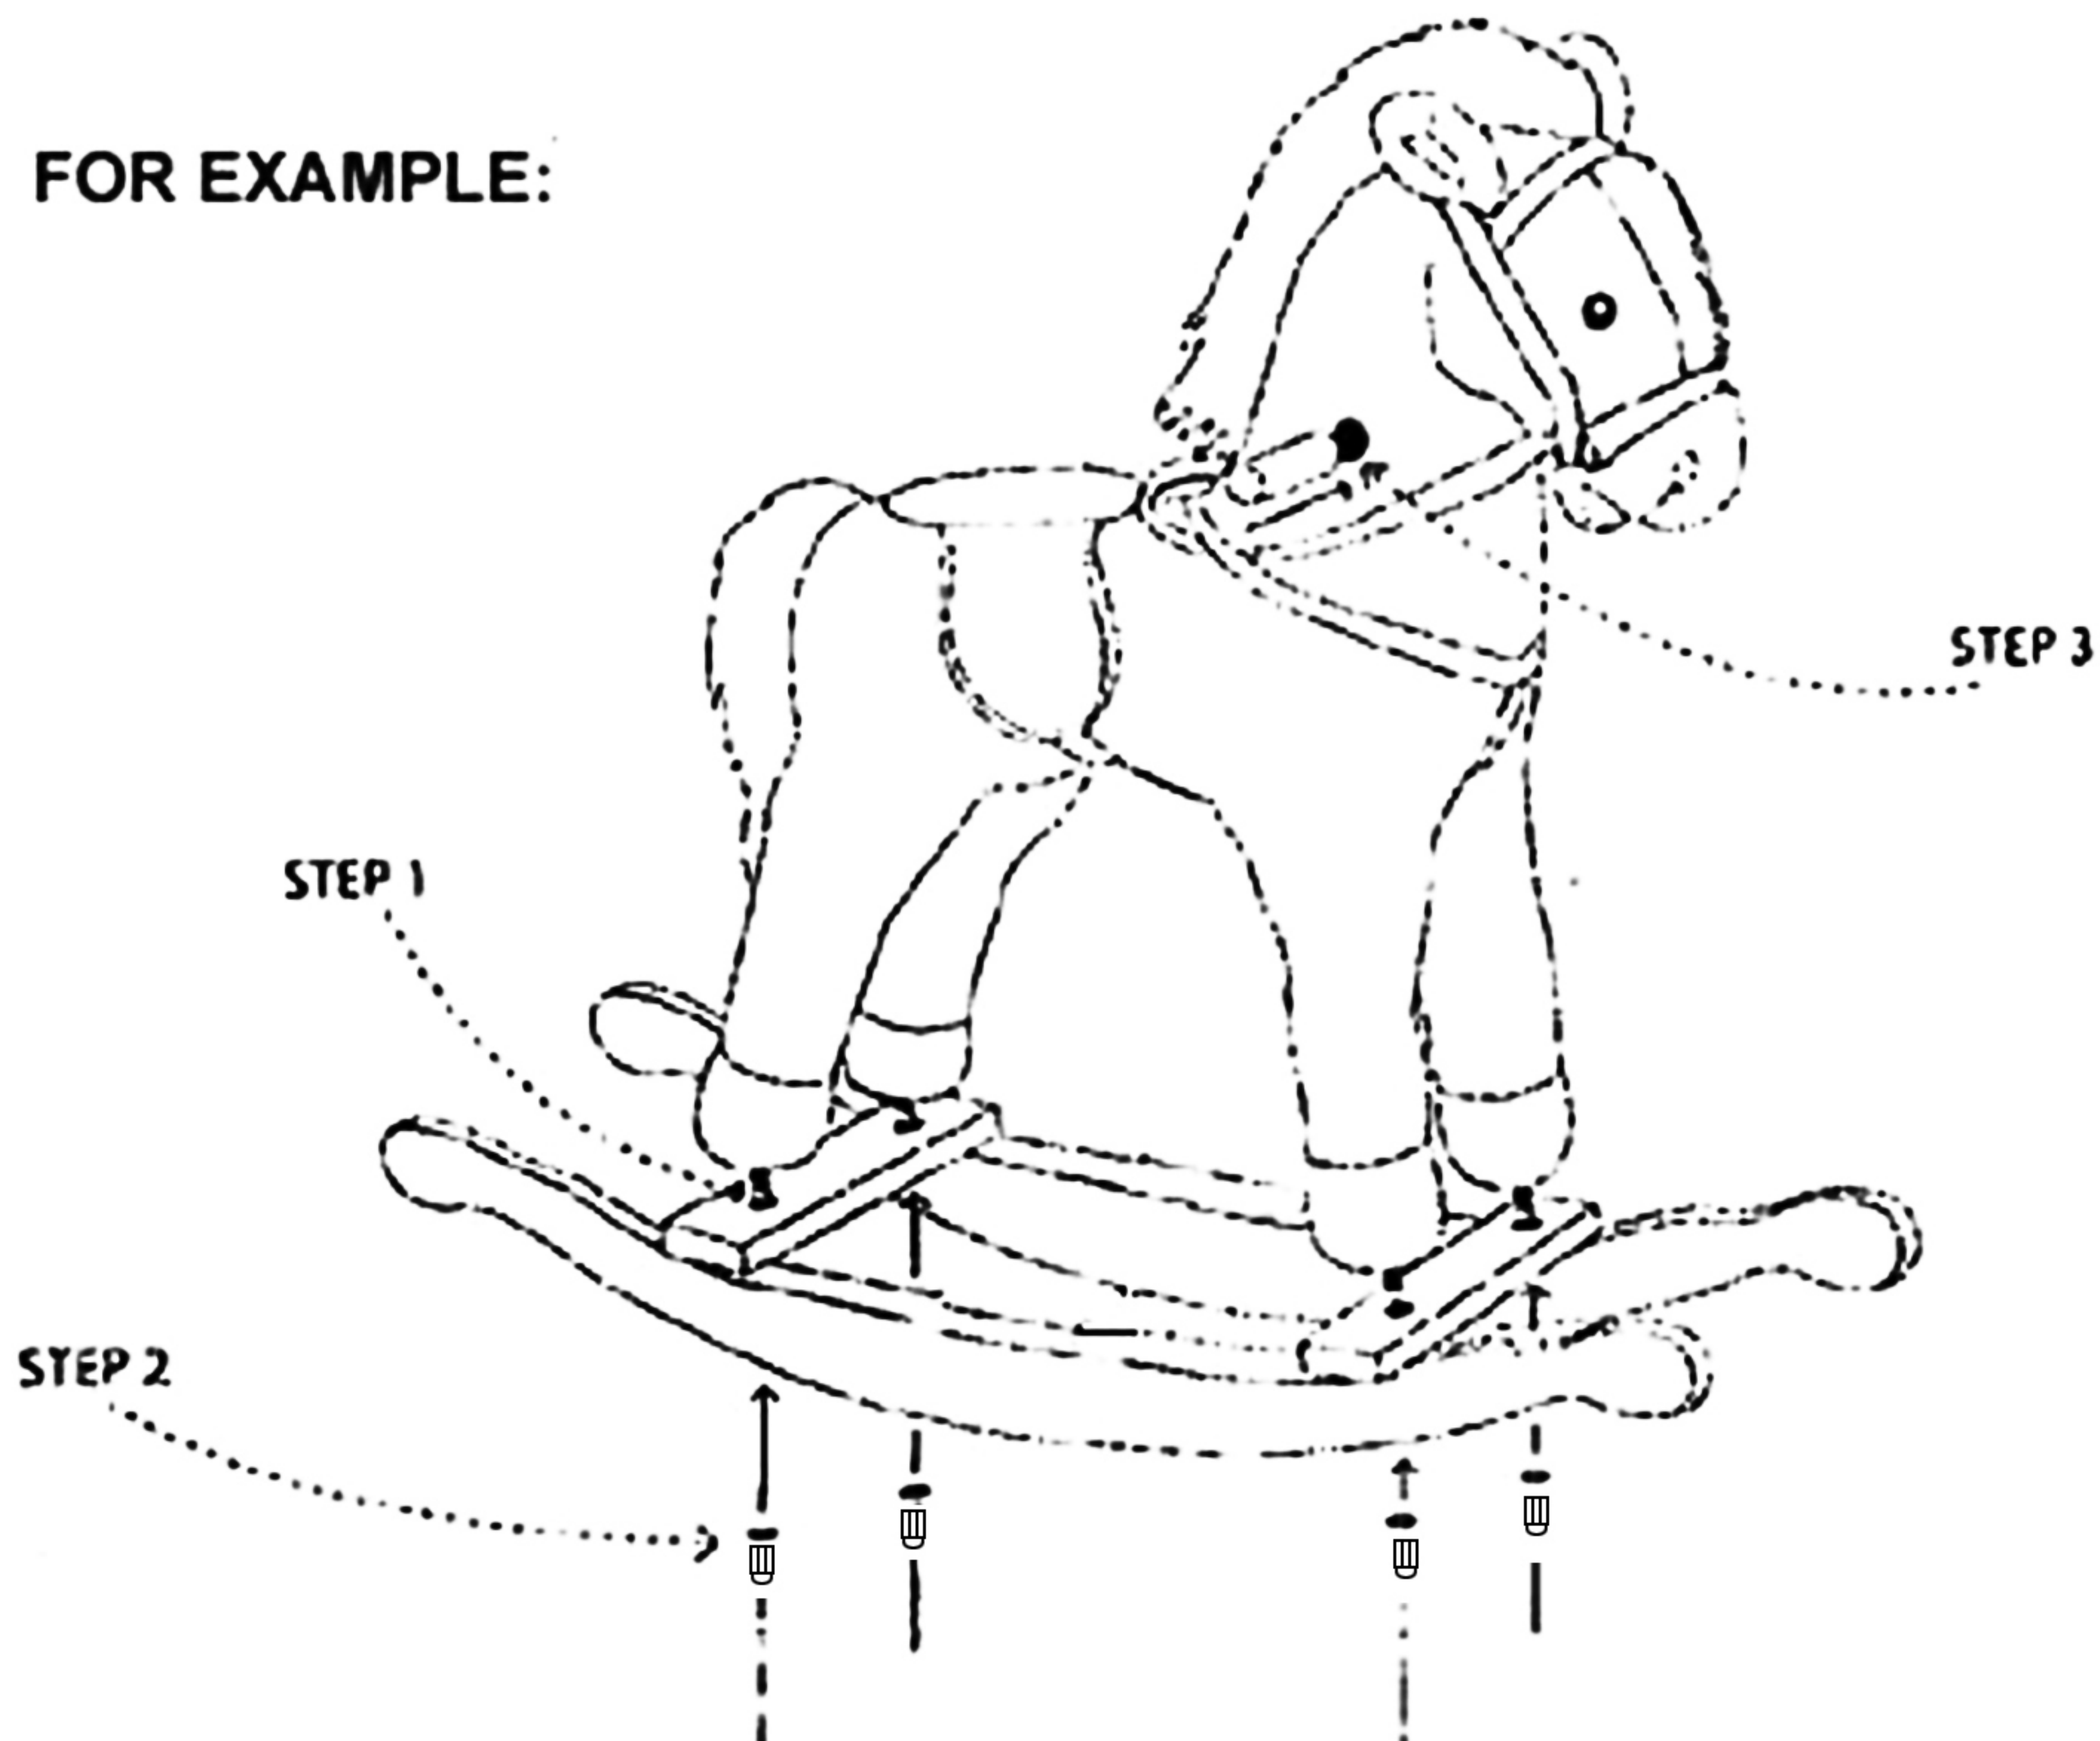

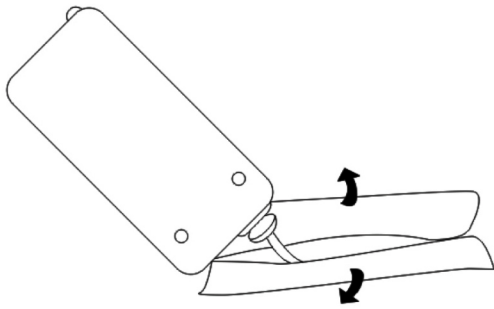

 Tear off the bottom velcro and take out the battery.

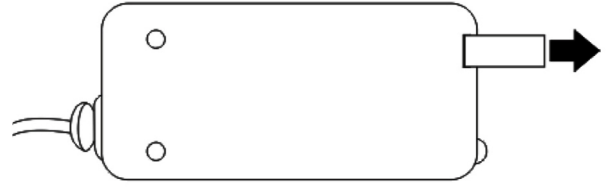

Remove the safe plastic on battery.



Press the mark on animal hand, then it will make noise.

ADULT SUPERVISION IS RECOMMENDED
REMOVE ALL PLASTIC
FASTENERS AND HANG TAGS
BEFORE GIVING TOY TO CHILD.
THESE ATTACHMENTS ARE
NOT PART OF THE TOY.
COLORS AND CONTENTS MAY VARY
RATIONS

FOR BEST PERFORMANCE:

- Use only the batteries recommended.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries together.
- Remove batteries when toy is not in use.
- Remove exhausted batteries from toy and dispose of in accordance with the battery manufacturer's recommendation.
- Do not attempt to recharge non-rechargeable batteries.
- Do not use rechargeable batteries.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

**ADULT SUPERVISION IS RECOMMENDED
WHEN CHANGING BATTERIES.**

Max weight 60kg.

ATTENTION: The batteries included in this item are intended for in-store use. It is possible that these batteries may become weak or discharged prior to purchase and the customer may need to replace the batteries with fresh cells to insure proper operation.

