




Assembly Instructions

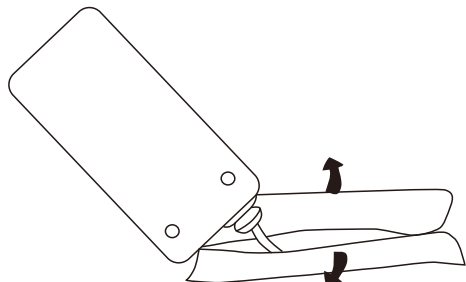

Tear off the bottom velcro and take out the battery.



Press the mark on animal hand, then it will make noise.

FOR BEST PERFORMANCE:

- Use only the batteries recommended.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix new and used batteries together.
- Remove batteries when toy is not in use.
- Remove exhausted batteries from toy and dispose of in accordance with the battery manufacturer's recommendation.
- Do not attempt to recharge non-rechargeable batteries.
- Do not use rechargeable batteries. Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

ATTENTION: The batteries included in this item are intended for in-store use. It is possible that these batteries may become weak or discharged prior to purchase and the customer may need to replace the batteries with fresh cells to insure proper operation.



Remove the safe plastic on battery.

**ADULT SUPERVISION IS RECOMMENDED
REMOVE ALL PLASTIC FASTENERS AND
HANG TAGS BEFORE GIVING TOY TO CHILD.
THESE ATTACHMENTS ARE NOT PART OF
THE TOY. COLORS AND CONTENTS MAY
VARY RATIONS**

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

***Suitable for children of 1.5-3 years old.**

***Max weight: 50 kg.**



001-877-644-9366
customerservice@aosom.com