



INffb022_US

371-036



SCOOTER

*Suitable for children of 3-8 years old.

*Max weight: 50 kg.



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


ASSEMBLY INSTRUCTION

ASSEMBLY INSTRUCTIONS


How to un-fold the scooter




Release the quick release and press the middle lever down.

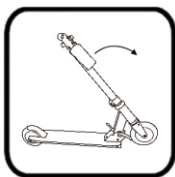


Pull the handlebar to an upright position then securely tighten the quick release lever.

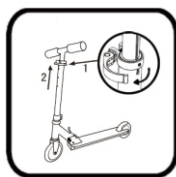

Unlock the quick release clamp and pull up the top section of the handlebar.

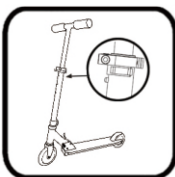

Adjust handlebar height to desired position.

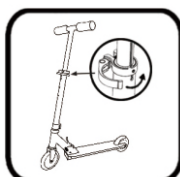


Tighten the clamp.




Unclip the handles and insert them into the main handlebar tube, ensure the spring loaded clip is locked into the handle bar tube.

How to fold the scooter

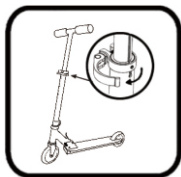

Unlock the clamp

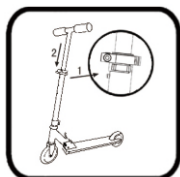

Press the T bar to the lowest position




Tighten the clamp



Detach the handles from T bar and clip on the hanger



Release the quick release and pull the lever towards the deck, scooter will fold and click into position

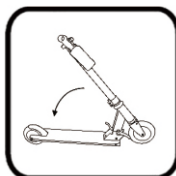


WARNING: Failure to correctly install and tighten clamp collar may cause the rider to lose control and fall from the scooter. If you don't understand how to correctly assemble seek assistance from our customer service team or a qualified mechanic. No modifications others than those listed in this manual should be made to this scooter.

Safety Checks / Maintenance

Collar Clamps

Using the correct size Allen wrench, check the collar clamp bolt is tightened securely (30 to 60 inch-pounds torque). This item is tightened and quality inspected at the factory, but there is a slight chance that the effects of shipping or handling may have caused this bolt to loose.

Warning: Failure to properly secure the quick-release lever may cause the T-tube to telescope up or down while riding which may cause you to lose control and fall. With the quick-release properly adjusted and engaged, the handlebars will not move up or down.

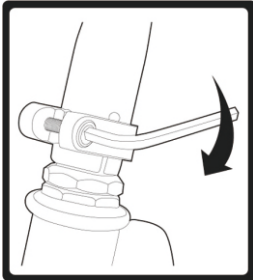

Check and secure all fasteners before every ride. Ensure the collar clamp is locked correctly into position before every ride.

Self-locking nuts and other self-locking fixings may lose their effectiveness after long time use, check all the self –locking parts before every ride.

Wheel and Bearings: Periodically check wheels and bearings for wear and tear and correct axle tightness.

Replace worn and broken parts immediately. Worn wheels and bearings and considered normal wear and tear are not covered under warranty.

WARNING: NOT SUITABLE FOR TRICKS AND STUNTING

How to use Brake

To stop the scooter, apply the brake by stepping on the rear fender/brake or apply pressure to the front hand brake. We recommend that you practice applying the brake at various speeds and in an open area free from obstructions.

WARNING:

1. CHOKING HAZARD—Small parts. Not for children under 3 years.
2. Only allowed for adults to install, keep children away.
3. To be used under the direct supervision of an adult.
4. Just only allow one child to use.
5. Please use on a flat and clean surface. Never use near steps, sloped driveways, hills roadways, alleys, swimming pool areas, road, on grass or wet surfaces or other bodies of water.
6. Before driving toy car each time, adult should inspect screws of every parts, please tighten the screw cap if any looseness. secure all fasteners before every ride.
7. Always wear shoes and suitable protective equipment. always wear a local standard approved helmet while riding, with the chinstrap securely fastened.
8. Do not ride the product at dusk, at night or at times of limited visibility.
9. Always comply with local laws and regulations.

MAINTENANCE & CARE

- A. Keep all instructions and parts relating to this product for future reference.
- B. Regularly check for damage and that all screws are securely tightened.
- C. Check that the seat is securely fastened.
- D. Lubricate the chain as often as required.
- E. Clean your Scooter and wheels with a clean damp cloth.