WARNING!

- Make sure that all parts securely locked into place before use
- Your child should wear the harness at all times he is sitting in the high chair
- Never leave your child unattended
- Check all parts is intended to be used with one child at a time
- Keep your high chair away from hazards such as heaters ,stoves,campfires,ect
- Never carry your highchair while your child is in it
- Once the highchair is assembled ,make sure that all screws/nuts are securely fastened and check them out periodically
- Make sure that the safety belts are correctly fitted to the size of your child
- Keep small parts out of childrens each. Small parts and packing bag pose a choking hazard to children
- Not to use the high chair until the child can sit up unaided
- Not to use the high chair if any part is broken, torn or missing
- Falling hazard; prevent your child from climbing on the product."
- Be aware of the risk of open fires and other soures of strong heat in the vicinity of the product."
- Be aware of the risk of tilting when your child can push its feet against a table or any other structures."
- A statement that the product is intended up to 3 years or a maximum weight of 15 kg.


CLEANING AND MAINTENANCE

- Plastic parts can be cleaned using a sponge and warm soap water
- Fabric parts can be cleaned using a sponge and warm water.Do not use abrasive cleaners. Do not put in washing machine and soak in water.
- Store the highchair in a dry and clean place
- Certificate: EN14988



Children High Chair Installation Instruction

IMPORTANT! KEEP FOR FUTURE REFERENCE

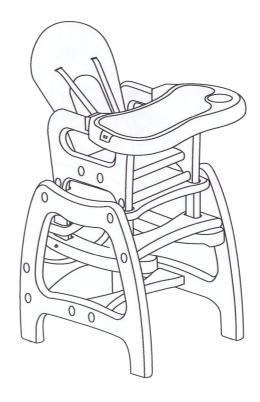



READ CAREFULLY

High chair of the installation instruction

- Please read this manual carefully before use and keep it properly
- Suitable for 6 months to 6 years old sitting. After 3 years old of children can be combined to open it. It also can be used as a writing desk.

