




INfh029_US

420-009

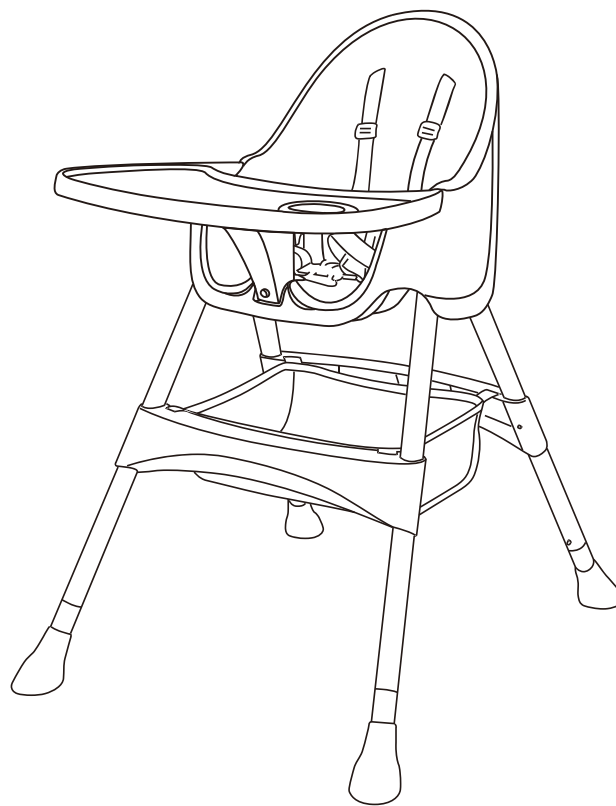

High Chair

NOTE:


Drawings in this manual are for illustration purposes only.

The actual product may vary.


Manufacturer reserves the right to change any specifications or features without prior notice.

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE


ASSEMBLY INSTRUCTION

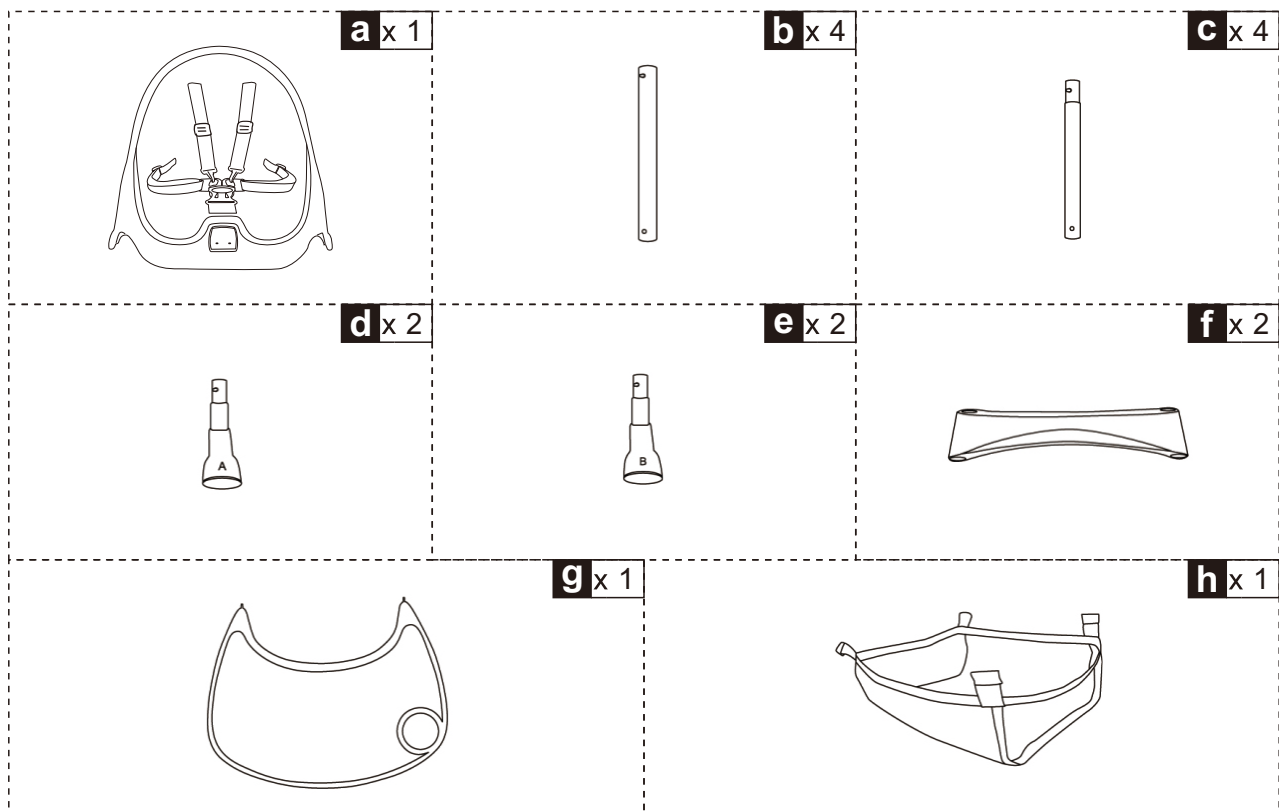


High Chair Assembly

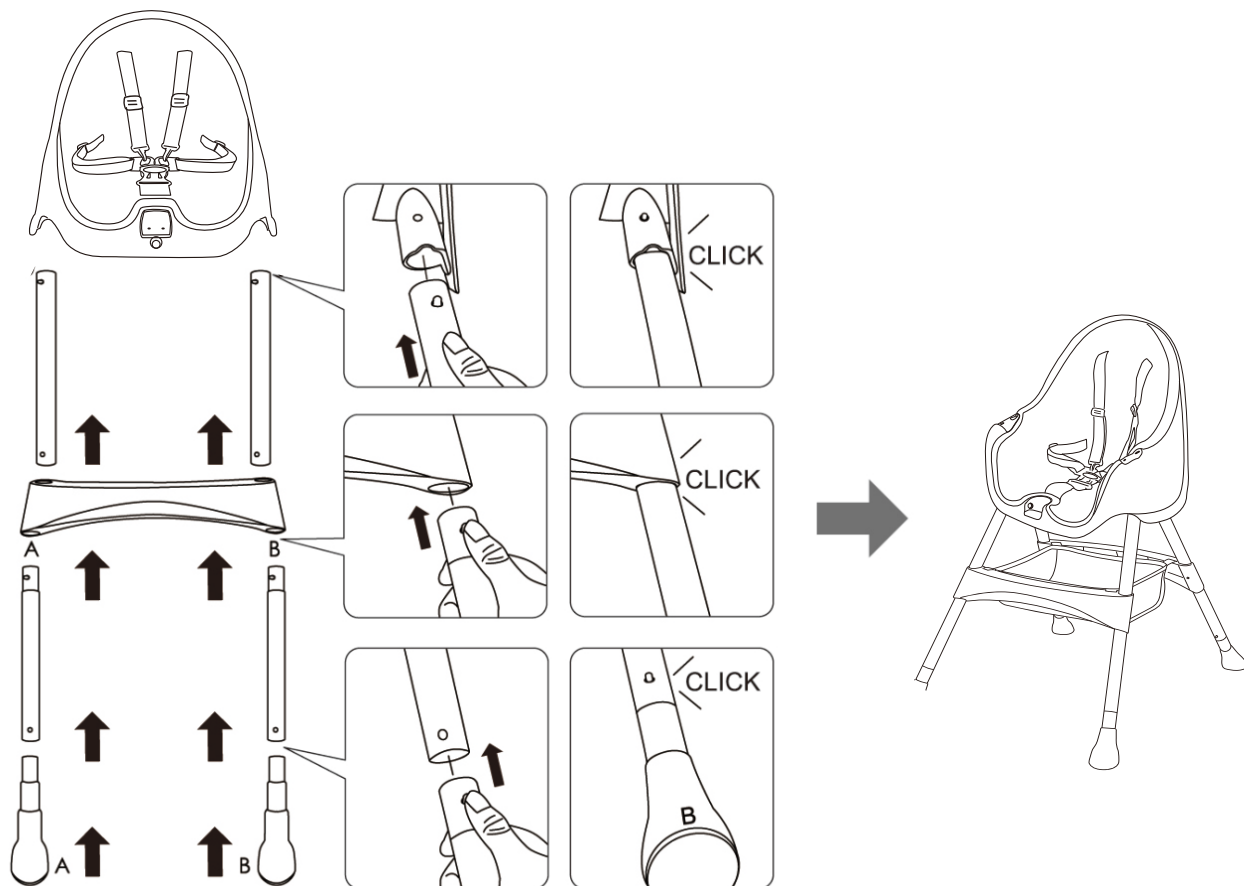


Adjusting the Height

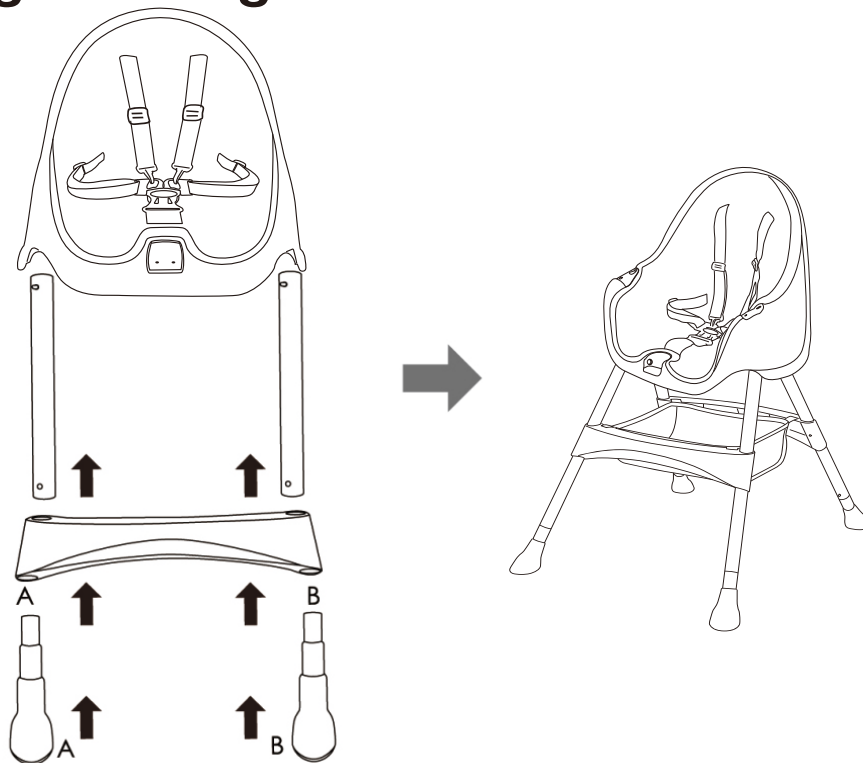


Front Tray Assembly

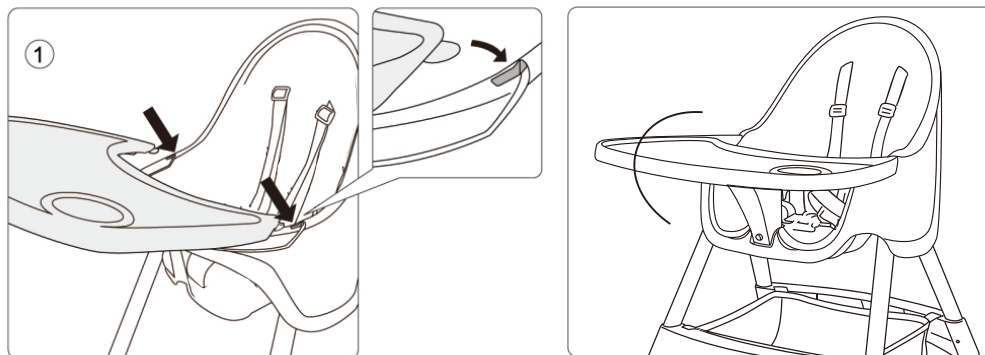


Front Tray Removal

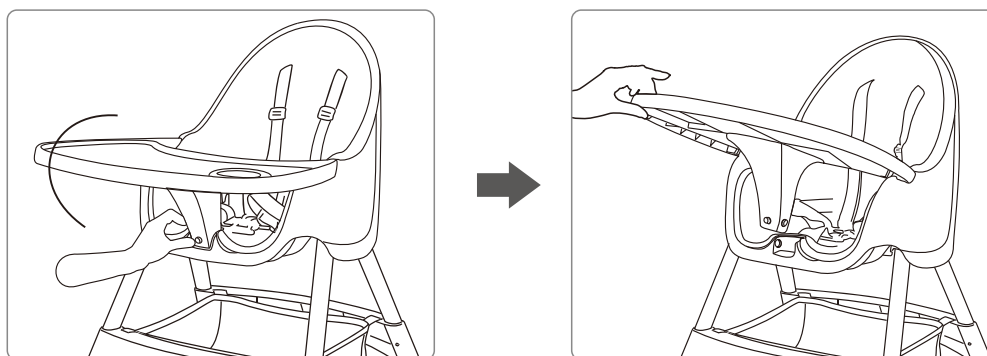


Protective Cap Assembly

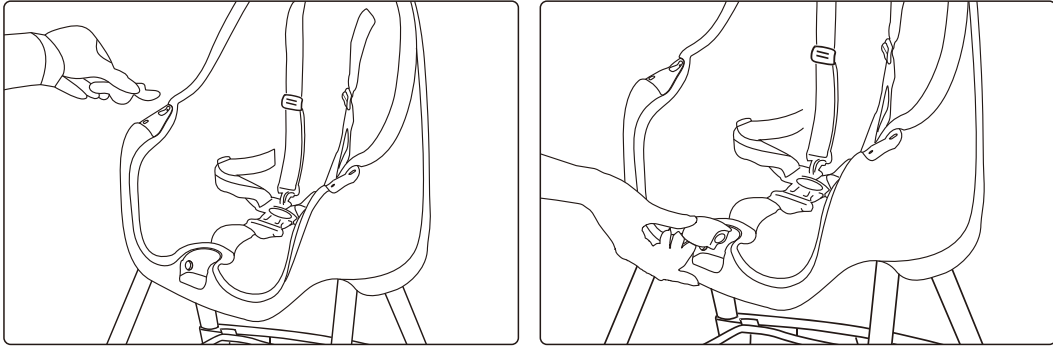


Protective Cap Removal

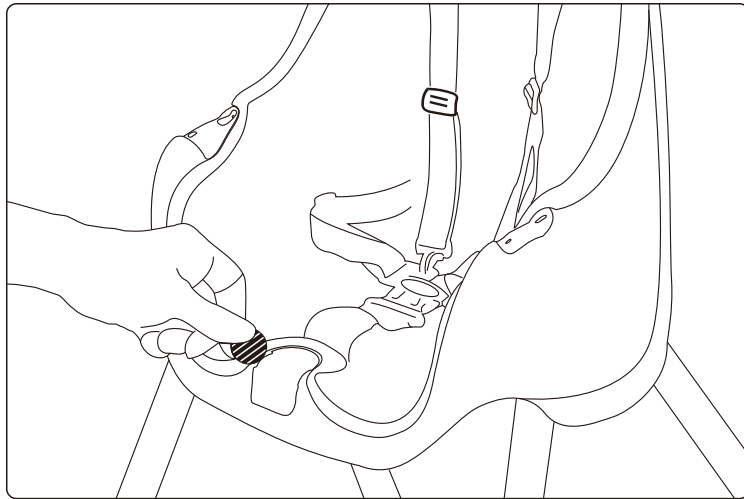


Safety Harness Assembly

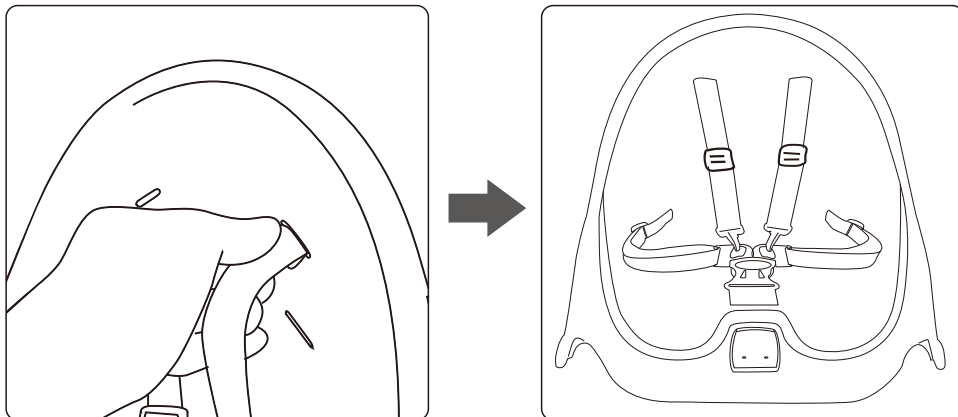


Fastening the Safety Harness

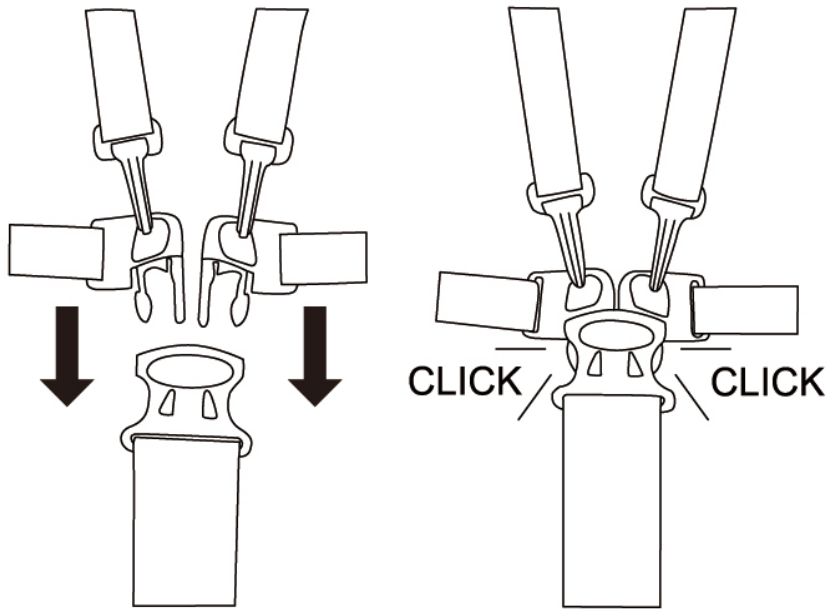

Releasing the Safety Harness

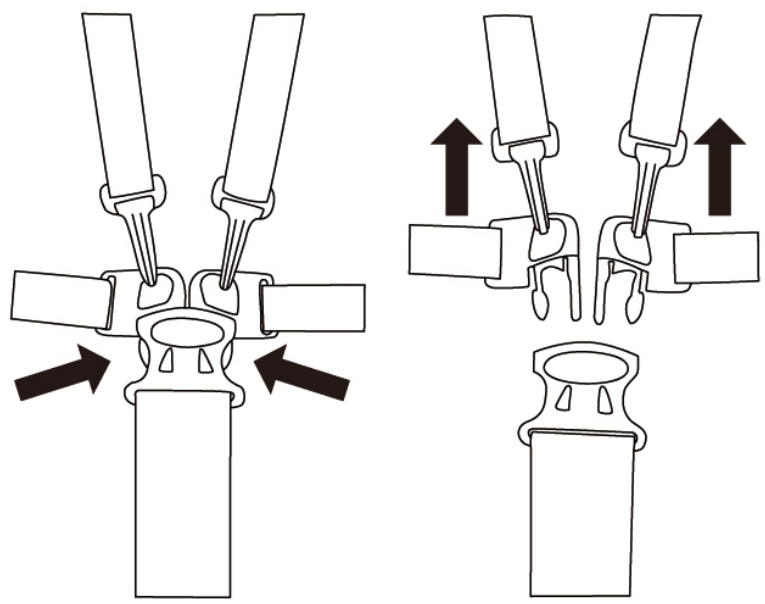

Storage Basket Assembly

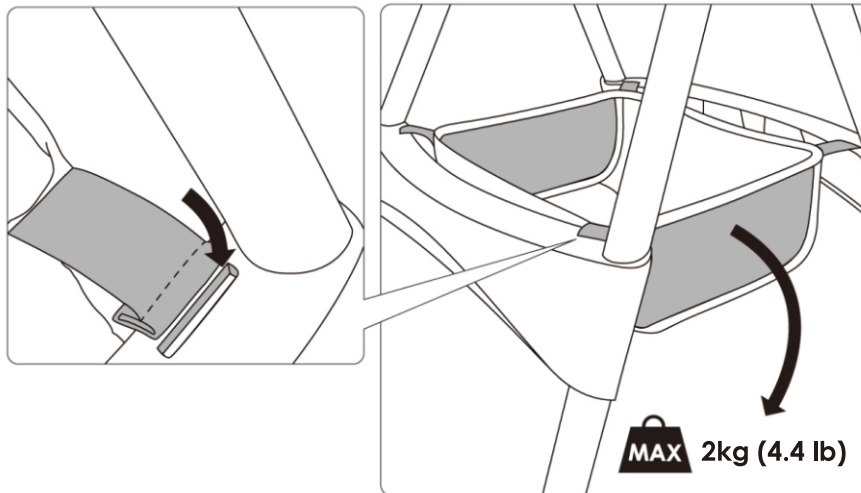

Maintenance

For cleaning the fabric, seat belt, and tray, hand wash using a brush. Wipe out any excess water with a dry cloth and leave to dry in a shaded area. Ensure that all detergents are wiped out. To remove stubborn dirt, dilute a mild detergent, then apply directly to the dirty area. Thereafter, wipe off the detergent.

Ensure that any traces of moisture are wiped off with a dry cloth.

To prevent color fading, do not leave to soak for a long period of time.

Constantly check that all parts of the high chair are fastened correctly.

Excessive exposure to sunlight could cause the color of the high chair fabric and plastic to fade.

Warnings

Be sure to read the instruction manual before using the product to ensure proper use of the high chair, and keep it for future reference.

Ensure that your child is secure in the high chair by always fastening the seat belt.

Never leave your child unattended whilst in the high chair.

Do not lift or carry the high chair while your child is in it.

Do not place the high chair on slopes or on uneven surfaces.

Do not allow your child to stand in the high chair.

Do not place or hang items on the high chair as this could cause the high chair to become unbalanced and tip over.

Do not use this high chair if your child weighs more than 15 kg.

Never put more than one child in the high chair.

Regularly check if any parts of the high chair become worn out. Do not use the high chair if any part of it is broken or worn out.

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it