

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

# ASSEMBLY INSTRUCTION



001-877-644-9366  
customerservice@aosom.com



001-855-537-6088  
customerservice@aosom.ca



0044-800-240-4004  
enquiries@mhstar.co.uk



0049-(0)40-88307530  
service@aosom.de



0033-1-84166106  
contact@aosom.fr



0034-931294512  
atencioncliente@aosom.es



0039-0249471447  
clienti@aosom.it

## Here we go

- \* We suggest you spend some time reading this guide before following assembly instructions step by step.
- \* Do not throw away any of the packaging until you have verified that you have all the parts and accessories listed. When disposing of packaging, take care of others and the environment.
- \* When assembling this product, consider the safety of yourself and others.
- \* Due to the size of this product, we suggest that you mount it in the area intended for use.
- \* Part of the assembly will be easier with two people. Seek help with lifting large or heavy items.
- \* Assemble this product on a clean, flat and level surface, e.g. cardboard packaging.
- \* Keep all tools or spare accessories supplied for future use. Use only the specified tools.
- \* Assemble all parts loosely, by hand, before tightening any screws or fixations considering product orientation in relation to exposure.
- \* Consider product orientation in relation to sun exposure, to avoid risks such as dizziness.



## WARNING!

- Misuse and abuse of this product can cause injury.
- Read the instructions before assembling or using this product, and keep safe for future reference.
- Always inspect the product before use, check for worn parts, defects and the missing.
- This product is intended for children aged 3-8 years.
- This unit is designed to be used by up to 4 children, with a maximum weight of 45kg each simultaneously without exceeding a combined weight of 180kg.
- Do not stand on the swings.
- Assembly by adults.
- Adult supervision at all times.
- **FOR OUTDOOR AND DOMESTIC USE ONLY**

- \* Remove and dispose of all packaging materials before use.
- \* Once assembly is complete, carefully check the equipment before use to ensure all parts are properly assembled. Check all nuts and screws are tightened. If you encounter any problems do not allow children to use the product until it is fit for use.
- \* Check all parts of the product at regular intervals, especially the top bar, frame legs, ropes and walk supports. If you encounter any problems do not allow children to use the product until it is fit for use. If no checks are carried out, the product may collapse or become a hazard.
- \* Check the metal sections and components for signs of corrosion.
- \* Discontinue use if there is weakening or found a break.
- \* The product has maintenance instructions, highlighting the need to carry out checks and maintenance of the main parts at regular intervals. Whenever practical, maintenance instructions should also be placed on the toy.
- \* Keep these instructions for future reference.
- \* Teach children to use the product correctly and to sit in the center of the seats while in use.

## NUTS AND SCREWS


- \* At the beginning of assembly, do not fully tighten the screws/nuts to the end to allow some possible adjustments to facilitate assembly.
- \* **Do** not use pliers to tighten screws as they can cause damage to paint, nuts and screws.
- \* **After assembling** all the main components, return to all the screws and nuts and tighten everything properly before using the product.



## Maintenance


- \* Controls and maintenance of the main parts: cross beam, legs, ropes, anchors, nuts, screws and rockers before each play session and at least every two weeks.
- \* Verify that all nuts, screws and accessories are tightened and tighten if necessary.
- \* Verify that the unit does not have sharp edges that may have occurred during shipment, assembly, abuse or daily use. Replace if necessary.
- \* Check to make sure all attractions are correctly set on top. Follow the instructions.
- \* Lubricate all moving metal parts monthly during the first period of use.
- \* To help maintain the appearance of the products, occasionally clean the seats and metal frame with a slightly damp cloth, but do not use abrasive cleaning chemicals.
- \* When you want to disassemble or dispose of the product, completely disassemble the unit and dispose of it in one place and safely so as not to present any danger to any individual.
- \* Do not allow children to balance empty attractions as they may hit and injure other children.
- \* Do not allow children to twist or roll up the strings on the support bar as this will cause damage and injury.
- \* Do not allow children to balance the game equipment more than 60 degrees.
- \* Do not attach items to the product that are not specifically designed for use with this product; For example, but not limited to: cables, jumping ropes, child care swing seats, ... Because they can cause injury.
- \* To replace defective parts in accordance with the manufacturer's instructions.
- \* To check all coverings for bolts and sharp edges and replace when required.
- \* To check swing seats, chains, ropes and other means of attachments for evidence of deterioration.

## Content

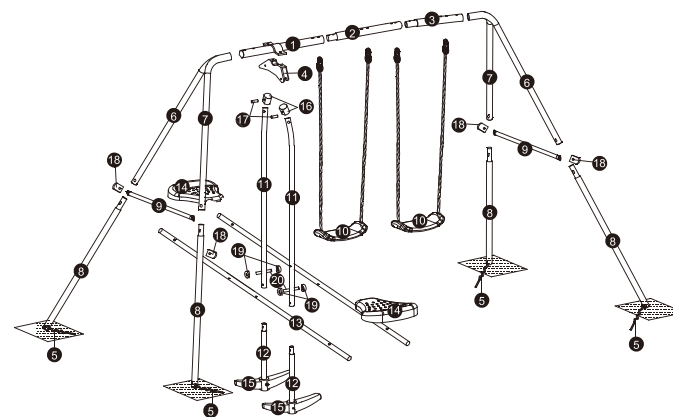

NO.	List of parts	Quantity
1	Top support bar	1
2	Top support bar	1
3	Top support bar	1
4	Balance support channel	1
5	Anchor	4
6	Upper leg	2
7	Upper leg	2
8	Lower leg	4
9	Cross bar	2
10	Swing seat	2
11	Upper arm tube	2
12	Lower tube	2
13	Seat balance tube	2
14	Bench seat	2
15	Footrest	2
16	Plastic connector	2
17	Plastic tube	2
18	Plastic cover	4
19	Plastic connector	4
20	Plastic handle	2

## Content

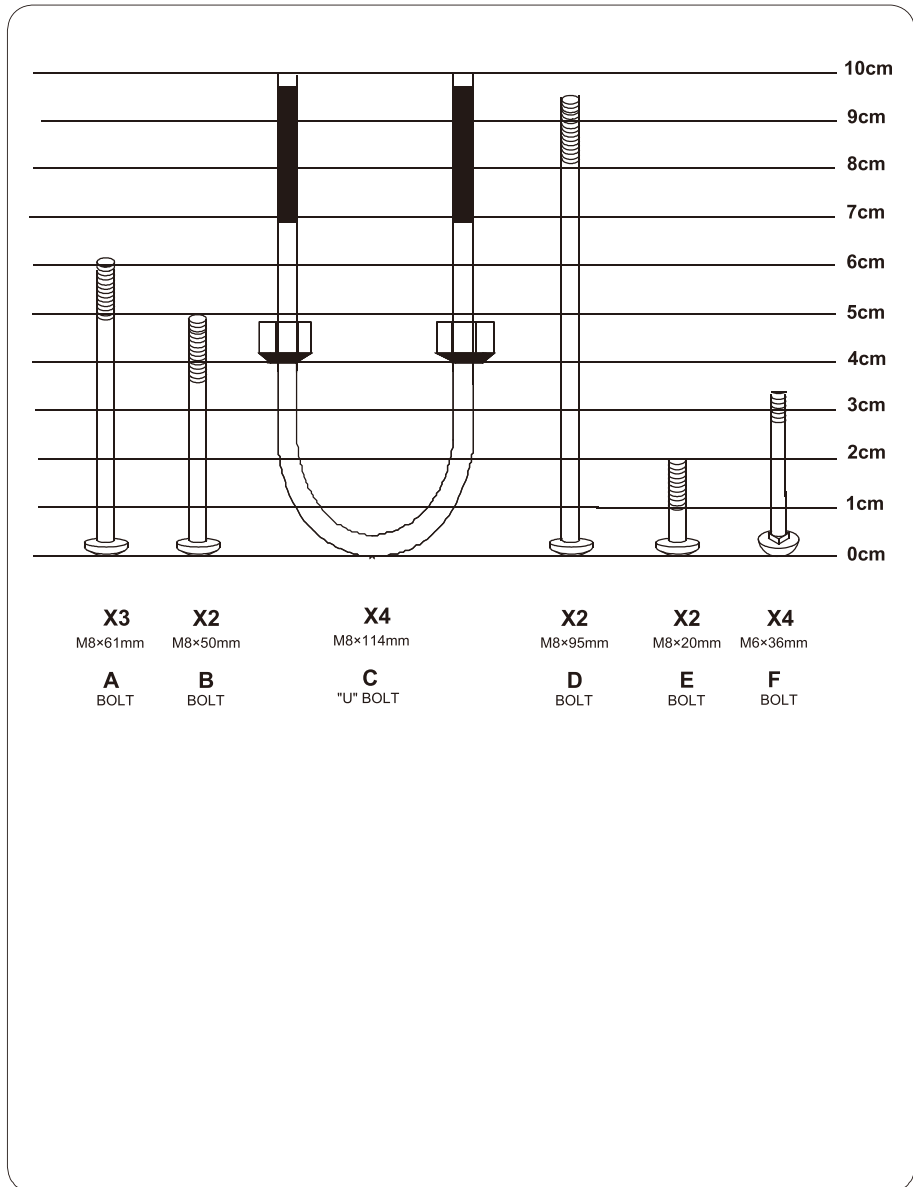

## Warnings

- \* Not suitable for children under 36 months. Small parts and choking hazard extended.
- \* Avoid children watching in the sun while using equipment to avoid risks, such as dizziness.
- \* Adult supervision is required at all times. Never leave children unattended.
- \* The product must be assembled and checked by an adult.
- \* Warning. Only for domestic outdoor use.
- \* Only one child per swing seat at a time.
- \* The age recommendation for this product is 3 - 8 years.
- \* The maximum user weight for each swing seat is 45kg.
- \* The minimum distance from the bottom of the swing seat to the floor should be 35cm (14 in).
- \* Do not stand on the swing seat. Do not stand on the bench seat.
- \* The product should be assembled and used on a level, flat surface, at least 2 meters (7.5 feet) from any structure or obstructions such as fence, walls, garden edges, washing lines, electrical cables.
- \* The product must be secured with the provided anchors. Anchors should be placed level or below ground to reduce the risk of tripping.
- \* Make sure the product is installed on a soft surface, such as grass or sand, or wood bark that should be at least 6 inches deep. Installation area should be checked regularly and any damper material supplied to maintain a correct depth considered appropriate for the product, otherwise the product could suffer injury from a fall.
- \* Do not install the unit on asphalt, gravel or any hard surface that can cause injury in case of a fall.
- \* Do not allow children to use the product until it has been properly wrapped, anchored and resisted by an adult.
- \* Make sure children wear proper clothing while using the product. Do not allow loose clothing, jewelry or any clothing that may be potentially dangerous while using the product.
- \* Do not allow children to use this equipment for any thing other than its intended use.
- \* Do not allow children to ride a swing while they are moving.
- \* Do not allow children to wander around the play area when the product is in use.
- \* Do not allow children to climb or play with the product while the product is wet as they may slip or fall.

Assembly


**ADJUSTABLE SEAR GUIDE**

THE LENGTH OF THE ROPE IS ADJUSTABLE TO THE HEIGHT OF THE CHILD THROUGH THE SEAT CONNECTOR.


TO ADJUST, RELEASE THE KNOT IN THE SEAT CONNECTOR, PULL THE ROPE THROUGH THE HOLES AND TIGHTEN AGAIN.

MAKE SURE THE KNOTS ARE TIGHT AND THAT BOTH ROPES ARE TIGHT SO THAT THE SEAT IS HORIZONTAL.


**IMPORTANT: MINIMUM CLEARANCE BETWEEN THE FOOTREST / SEAT AND THE GROUND SHOULD BE 35CM.**

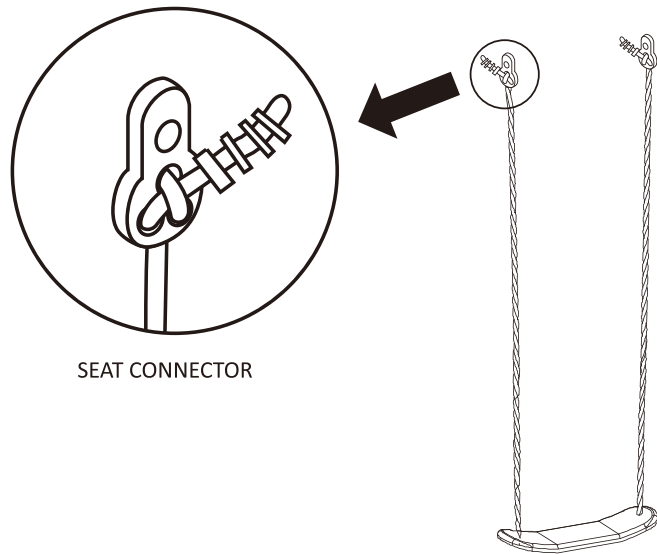

Content

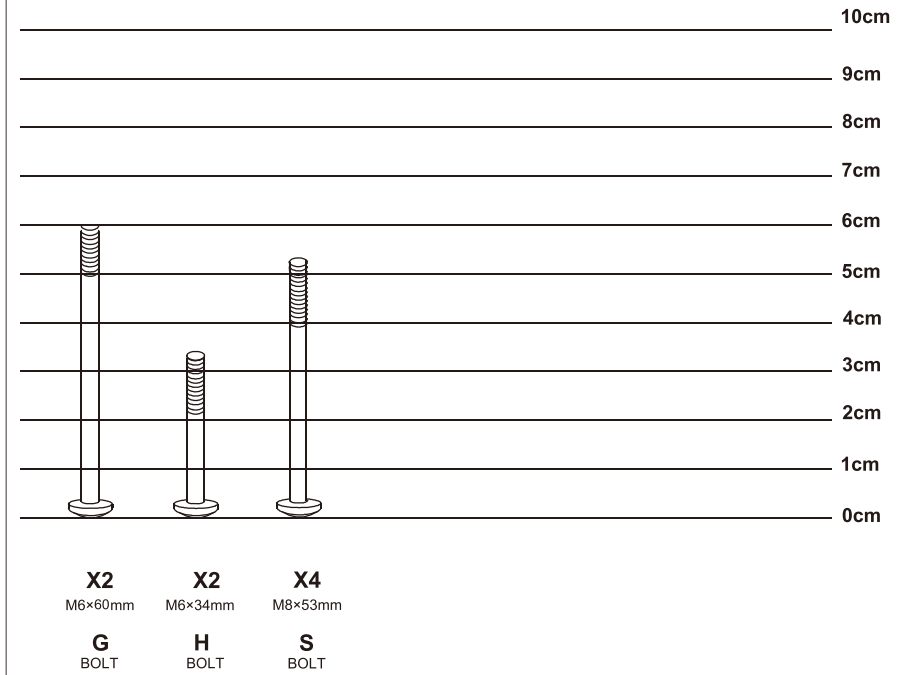


Content

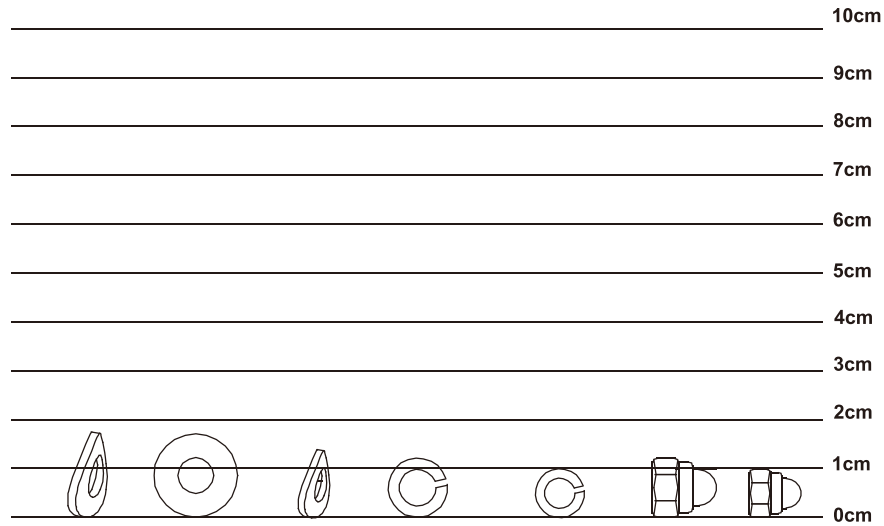


<b>X30</b> φ8.5xφ19mm	<b>X12</b> φ8.5xφ19mm	<b>X12</b> φ6.5xφ14mm	<b>X21</b> φ8.5 x φ13.5mm	<b>X8</b> φ6.5 x φ10 mm	<b>X21</b> M8	<b>X8</b> M6
<b>I</b> Curved washer	<b>J</b> Plate washer	<b>K</b> Curved washer	<b>L</b> Pressure gyration	<b>M</b> Pressure gyration	<b>N</b> Nut	<b>O</b> Nut

Assembly

Step 8

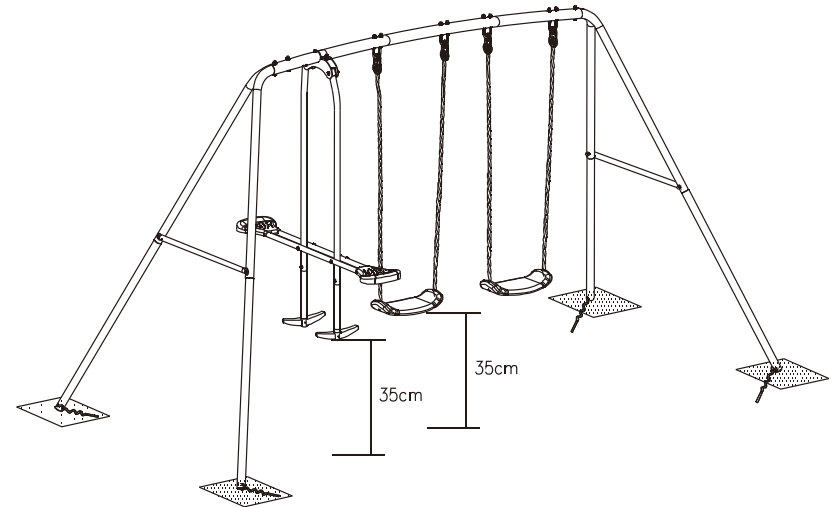


**IMPORTANT:** The product must be anchored to the ground. For optimum safety and performance, we recommend concrete on the corners as

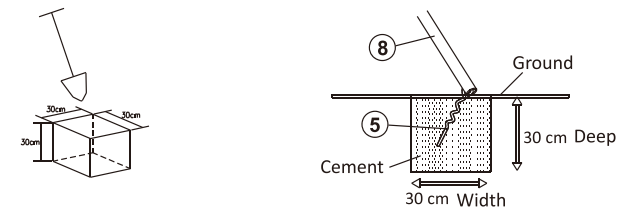


Assembly

Step 7

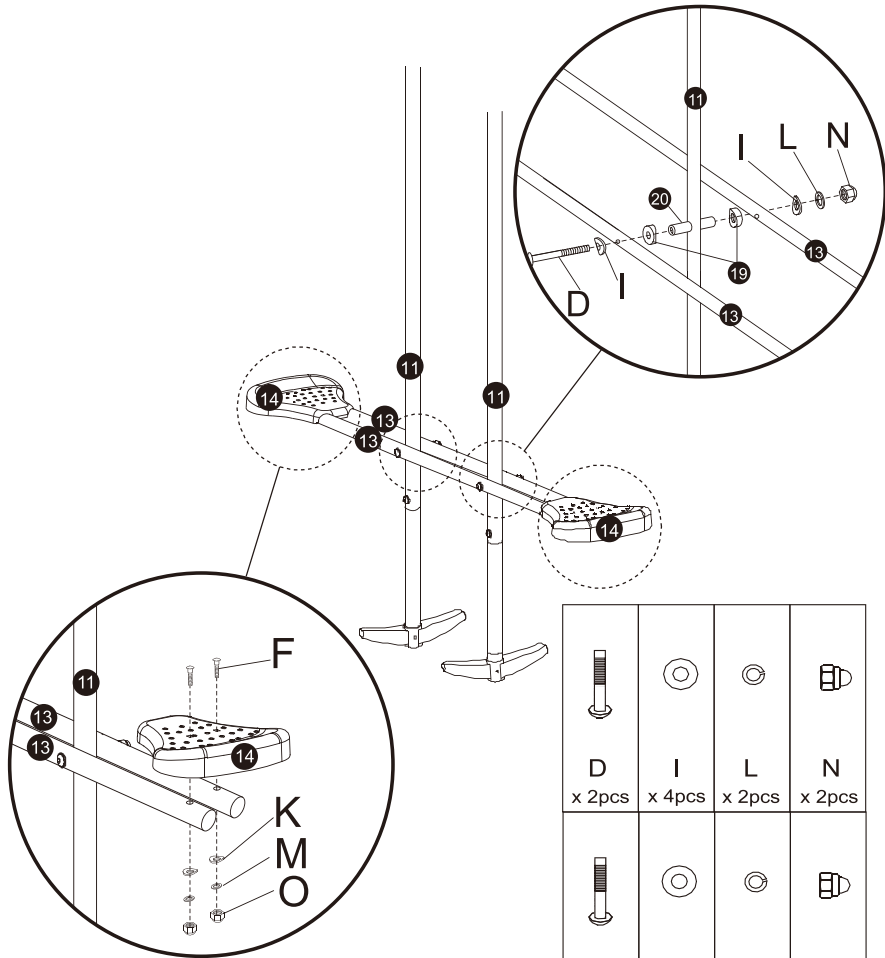


Content

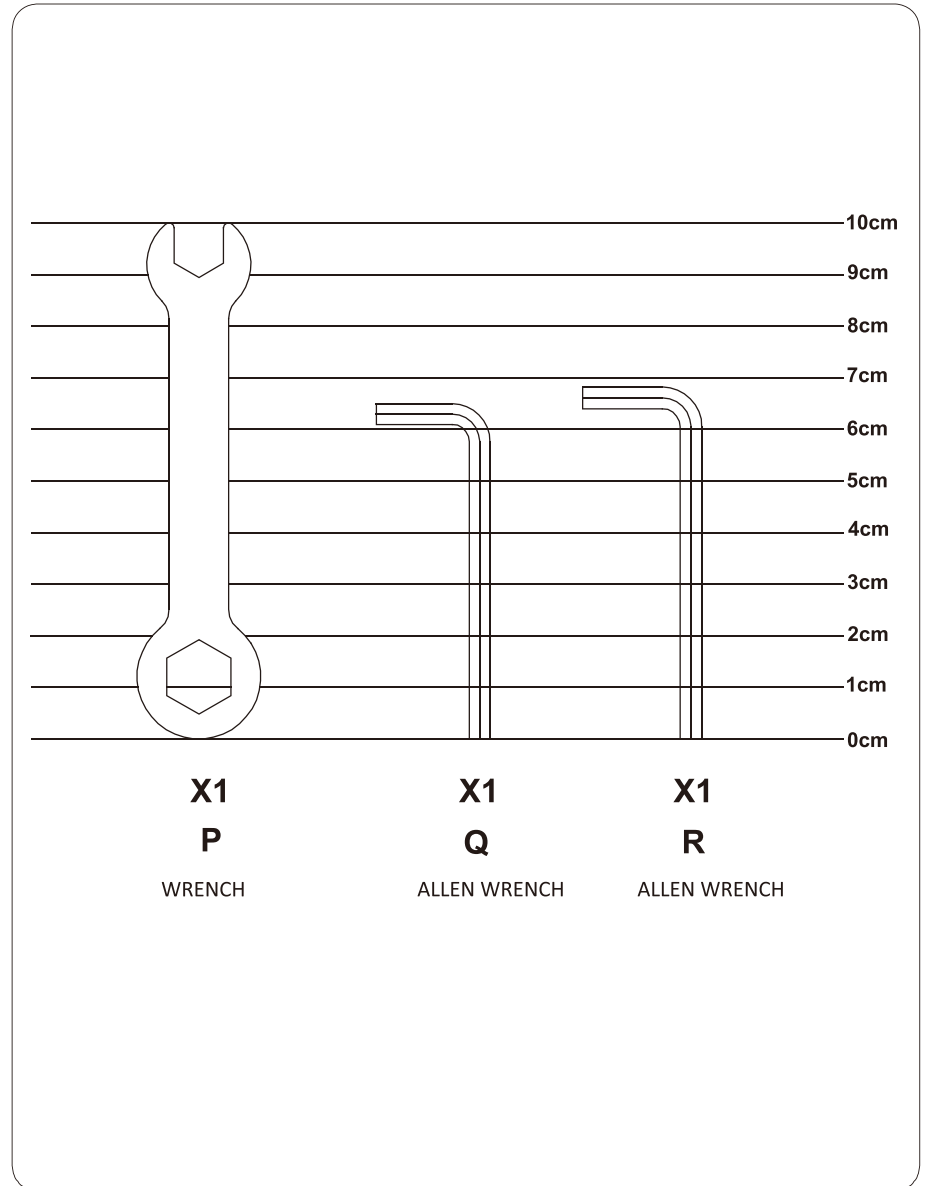

Assembly


Step 1

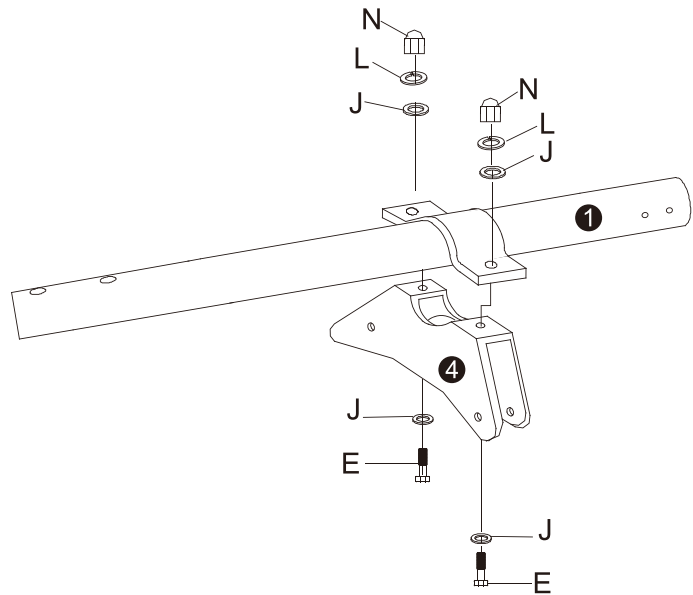

E	J	L	N
x 2pcs	x 4pcs	x 2pcs	x 2pcs

Assembly

Step 6

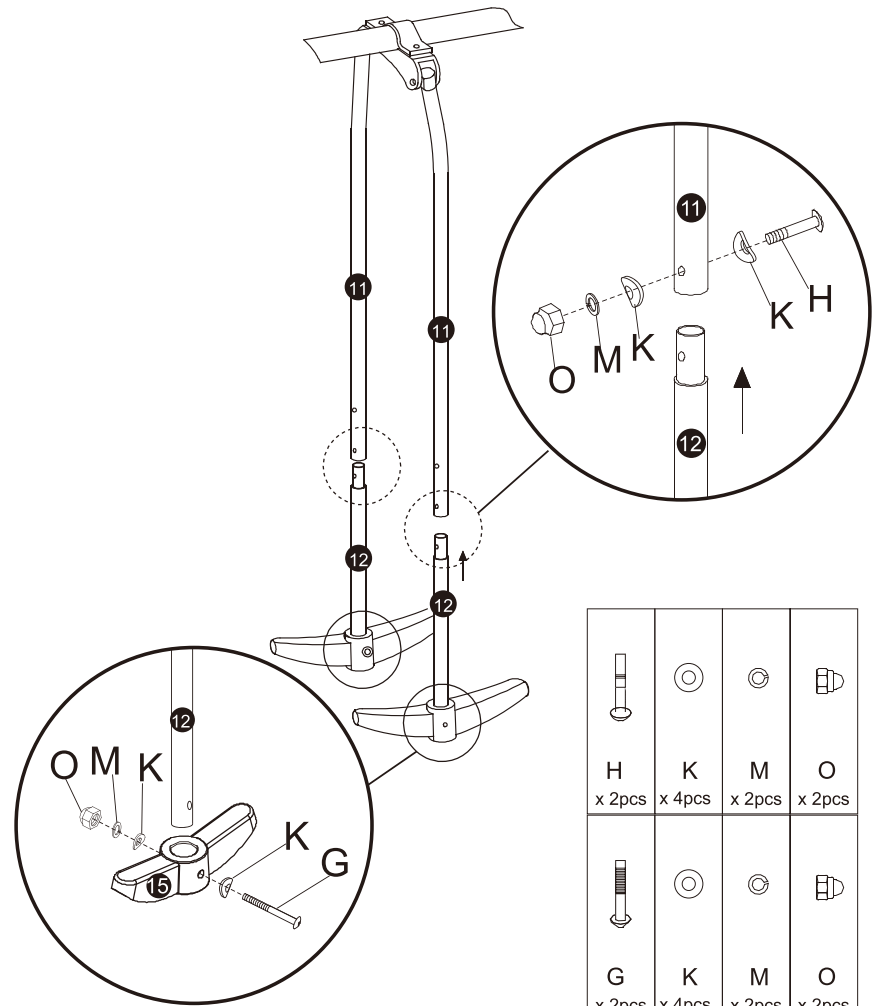


H	K	M	O
x 2pcs	x 4pcs	x 2pcs	x 2pcs
G	K	M	O
x 2pcs	x 4pcs	x 2pcs	x 2pcs







Assembly

Step 5

 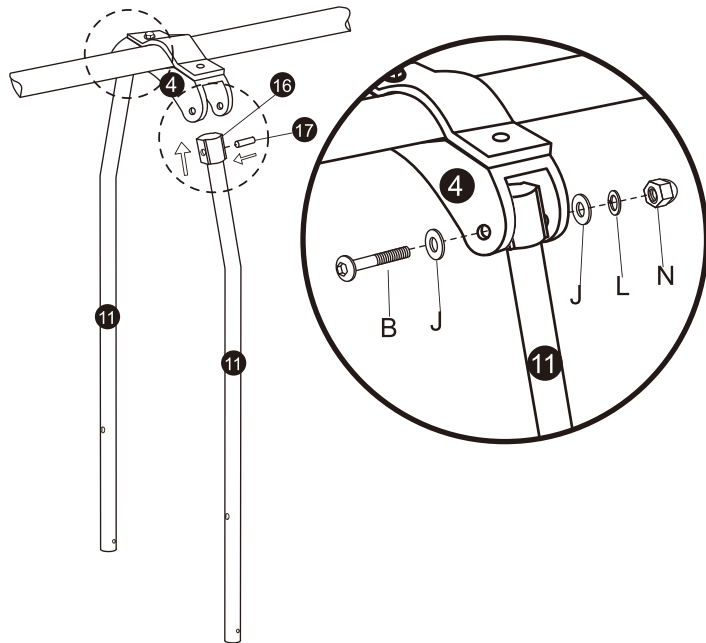NOTE: MAKE SURE TO INSERT THE PLASTIC TUBE (17) FIRST.








			
B	J	L	N
x 2pcs	x 4pcs	x 2pcs	x 2pcs

Assembly

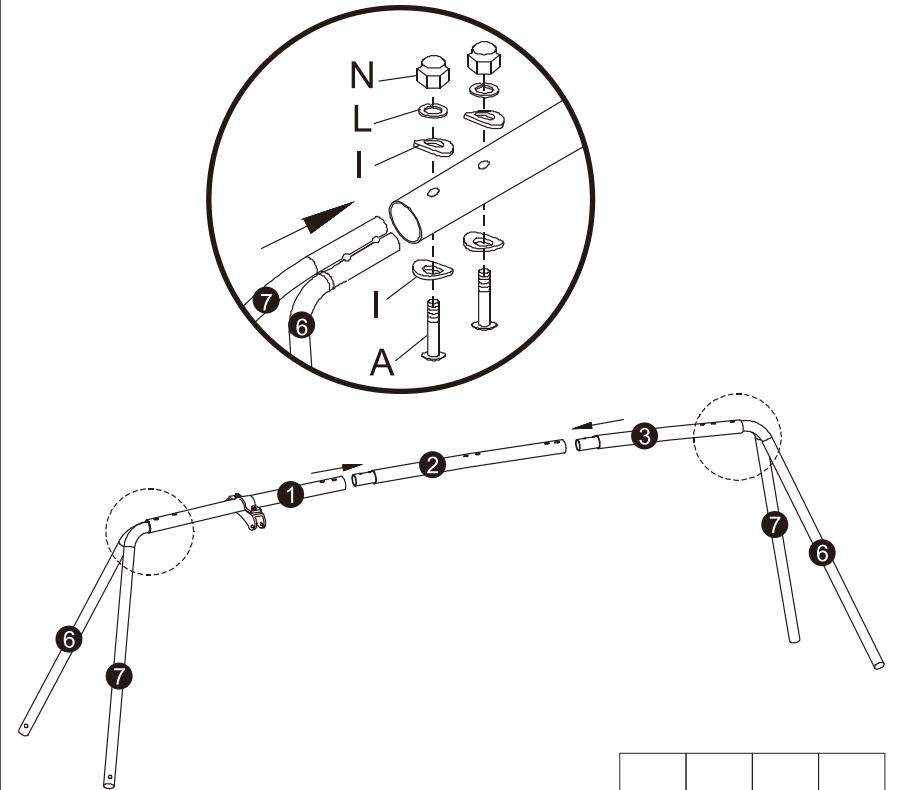Step 2

NOTE: ENSURE THAT THE UPPER LEGS 6 & 7 ARE OPPOSITE IN SIDE OF TUBE 1 & 3.








			
A	I	L	N
x 3pcs	x 6pcs	x 3pcs	x 3pcs

Assembly

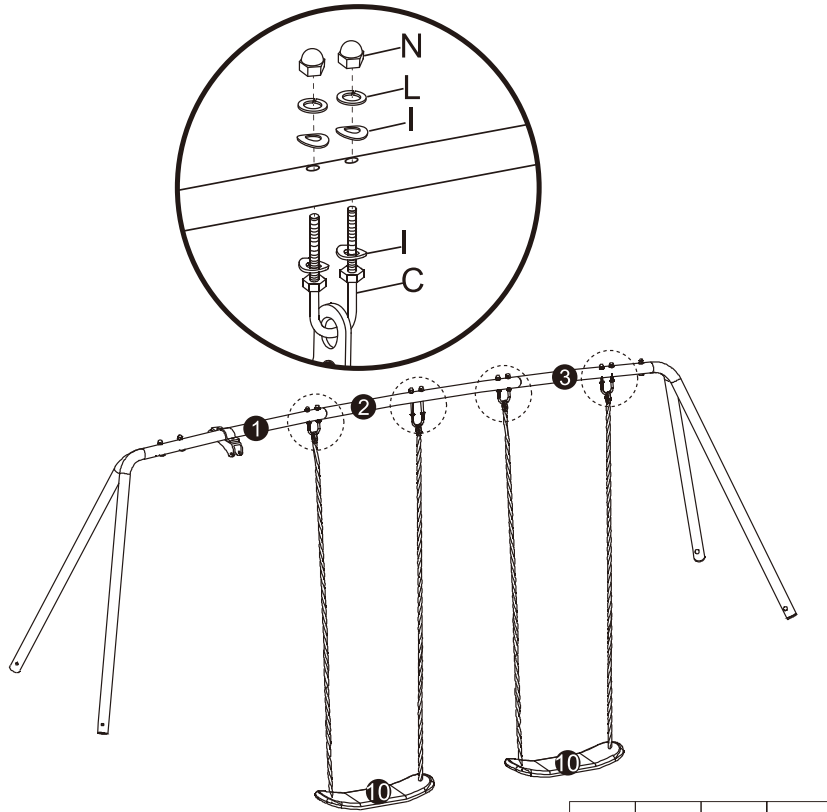Step 3

Tips: Make sure to place the swing seat on screw first.










			
C	I	L	N
x 4pcs	x 16pcs	x 8pcs	x 8pcs

Assembly

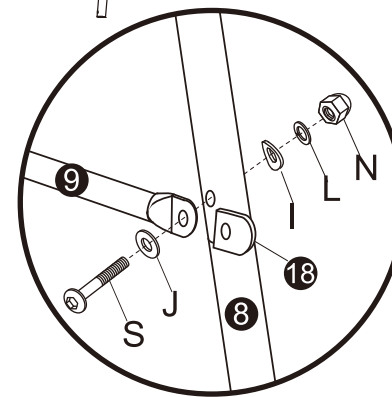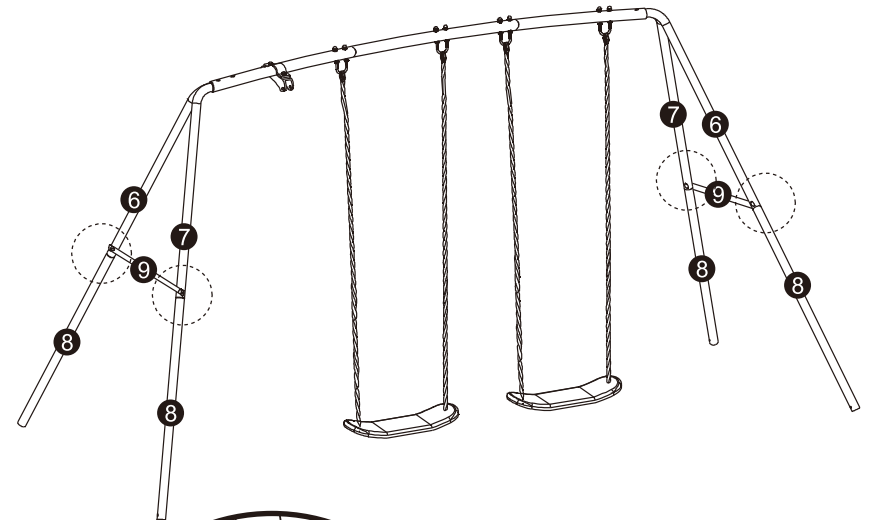Step 4

INSERT THE LOWER LEG (8) INTO THE UPPER LEG (6&7) AND CONNECT WITH THE CROSS BAR (9). BE SURE TO SECURE THE PLASTIC COVER (18) TO THE CROSS BAR (9) FIRST.



				
S	J	I	L	N
x 4pcs	x 4pcs	x 4pcs	x 4pcs	x 4pcs