


# *Soozier*

INaab037\_US

**A71-020**

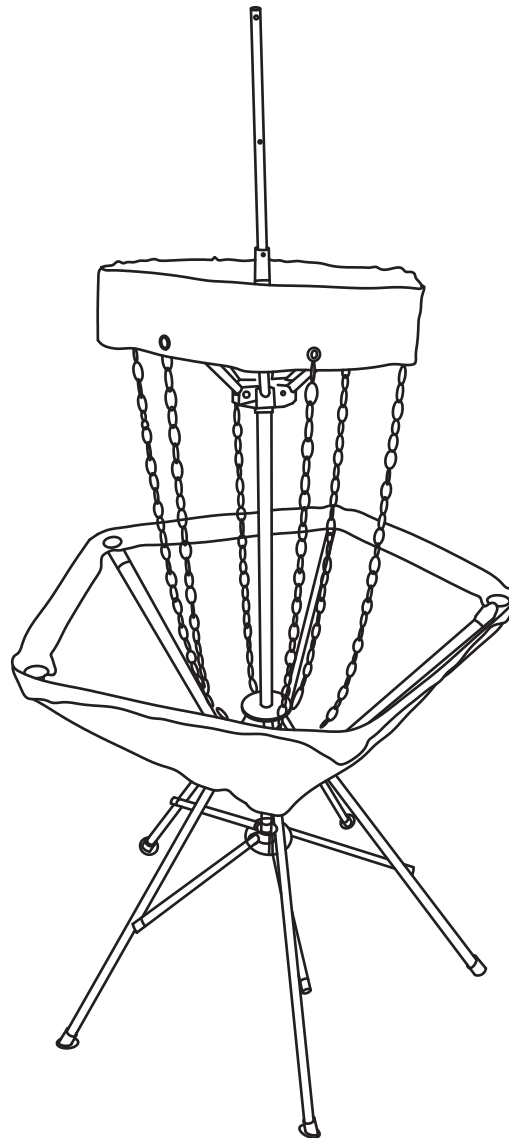


READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

## ASSEMBLY & INSTRUCTION MANUAL


# DICS GOLF TARGET INSTRUCTIONS

## Set Up

1. Stand up the disc golf target and pull the legs away from the center.
2. Lift mesh/chain and pull up the center pole while pushing down on the top of the leg assembly until it clicks into place.

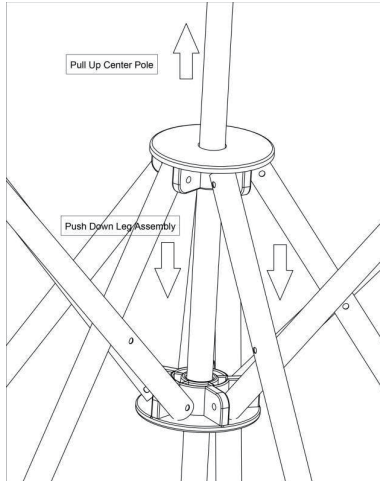


3. Insert 5 ground nail into the ring at the bottom and the ground to achieve the purpose of fixing.

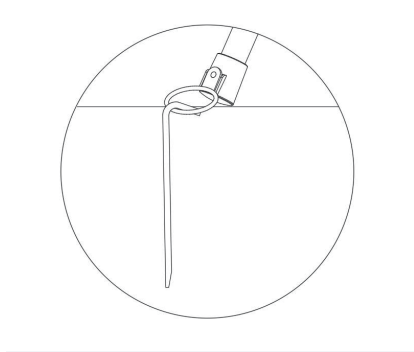

## Take Down

1. Pull the release pin located under basket area.
2. Lift mesh/chain and push down on the center pole.

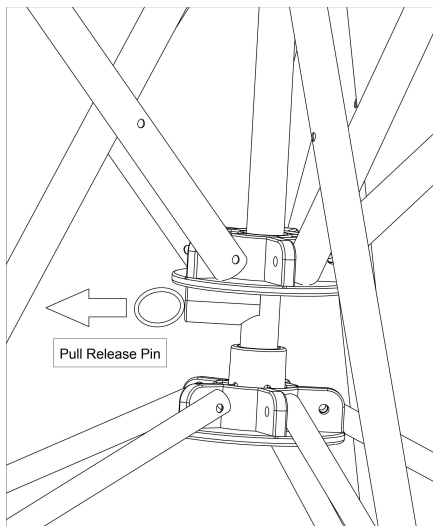

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it