




TIRE CHANGE STAND WITH BEAD BREAKER

C30-008

ASSEMBLY INSTRUCTIONS:

1. Using 4 M6 bolts and 4 nuts with washers on both sides for each ring support plate, connect the bottom base ring with the top ring with the 4 ring support plates.
2. Using the 3 M10 Allen head bolts attach the tire changer base bar to the bottom base ring.
3. Attach the axle stud to the tire changer base bar using the 2 nuts top and bottom of tire changer base bar.
4. Attach the bead breaker spade mount to the bead breaker arm. You will be able to adjust the spade for the size of wheel.
5. Mount the bead breaker arm to the tire changer base bar.
6. Snap on the 4 rim protectors 90° from each other on the top ring.

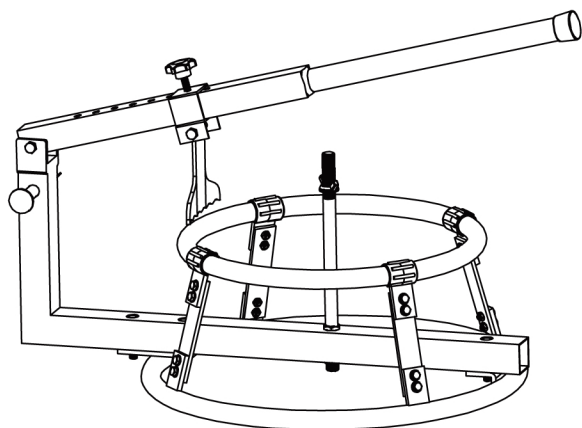

ASSEMBLY DIAGRAM:

- 1 Bead Breaker Spade Mount
- 2 Bead Breaker Arm
- 3 Bead Breaker Spade
- 4 Rim Protectors
- 5 Top Ring
- 6 Ring Support Plates
- 7 Axle Stand
- 8 Leverage Pin
- 9 Tire Hanger Base Bar
- 10 Bottom Base Ring

INCLUDED:

QTY	PART
1	Bottom base ring
1	Tire changer base bar
1	Top ring
1	Bead breaker arm
1	Bead breaker spade mount
1	Bead breaker spade
1	Axle stud
4	Ring support plates
4	Rim protectors
2	Axle stud nuts M14
3	M10 Allen head bolts
2	M8 x 60
2	M8 lock nuts
16	M6 bolts
16	M6 nuts
16	M6 washers

