**Warning:**

Check all the parts are well connected before use.

Regularly check and maintain the main components (suspenders, fasteners, fixings, etc.), otherwise the swing may tip over or cause a fall.

Never leave your child unattended. Use under adult supervision.



















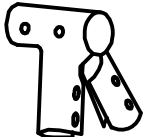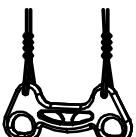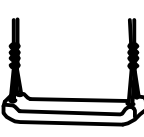





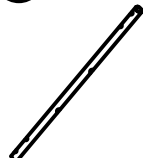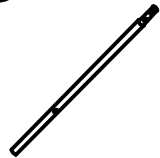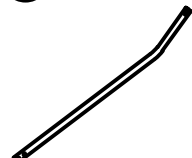






Do not stand on the swing, always keep your hands on the swing string.



Age for 3-12 years.

Maximum loading weight: 40kgs/seat

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE



ASSEMBLY INSTRUCTION

A ×2 	B ×1 	S ×1 	1 ×1 	5 ×1 	10 ×4 	11 ×4 	13 ×2 
R ×2 	Q ×2 	D ×2 	17 ×2 	16 ×2 	15 ×2 		
E1 ×4  ∅6×32	E2 ×2  ∅6×42	E3 ×8  ∅6×58	E4 ×8  ∅8×60	E5 ×6  ∅8×65	E6 ×2  ∅8×85		
F1 ×8  ∅6×48	F2 ×2  ∅8×50	H1 ×22  ∅6	H2 ×22  ∅8	H3 ×2  ∅6	G1 ×4 		
J ×4 	K ×4 	W ×4 	4 5 	10,13 			

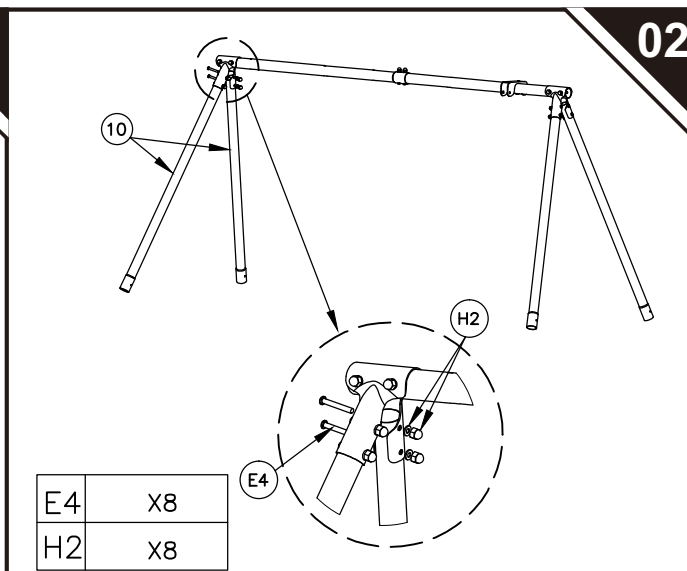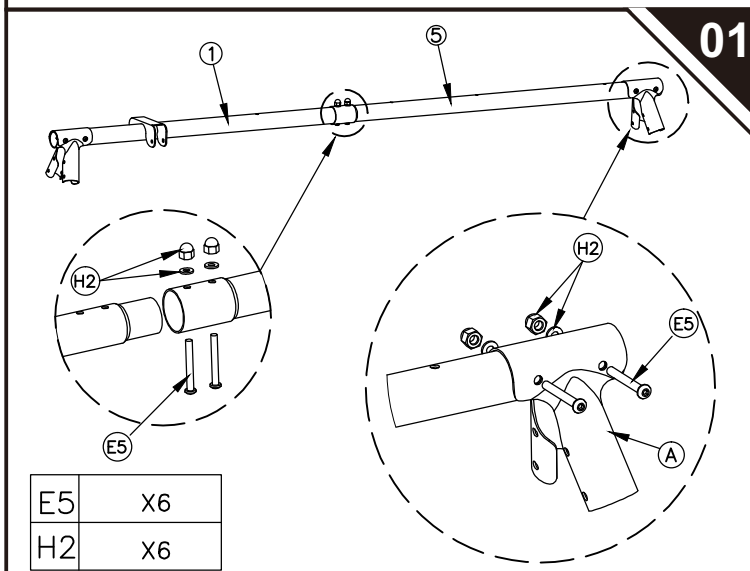



F2	x2	G1	x4
H2	x6	K	x4

03

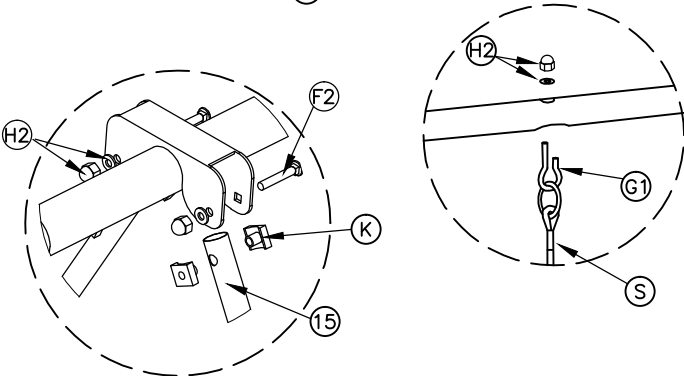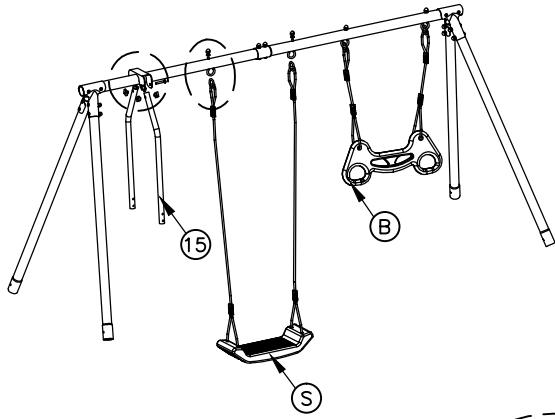


E3	x4
H1	x4

04

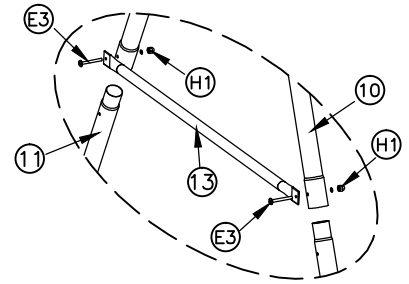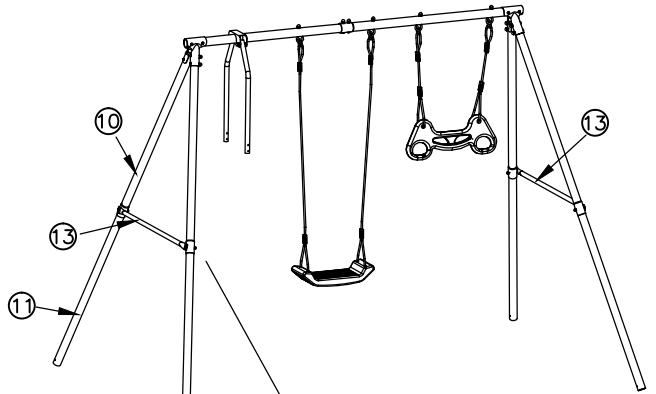


F1	x8	E6	x2
E2	x2	H1	x10
H2	x2	H3	x2
		J	x4

05

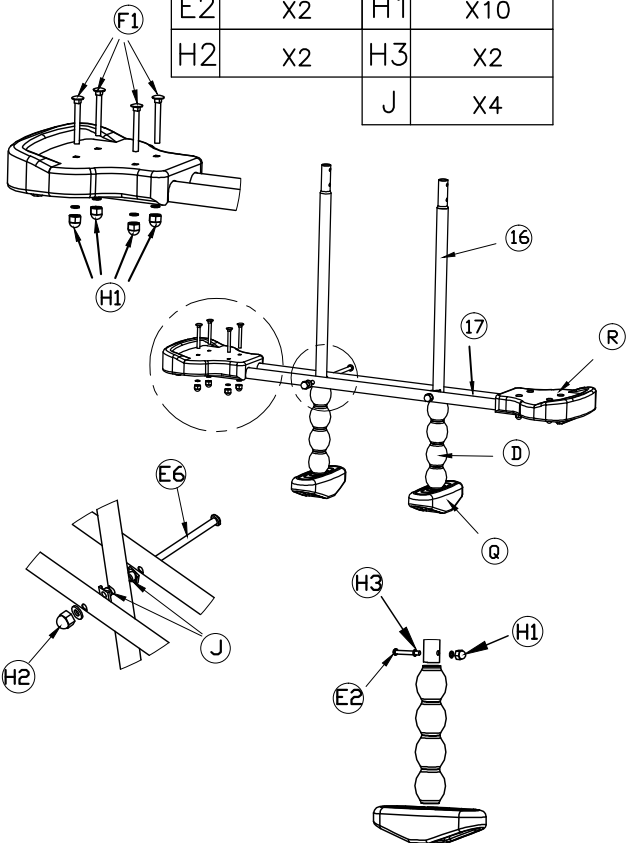

E1	x4	E3	x4
H1	x8		

06

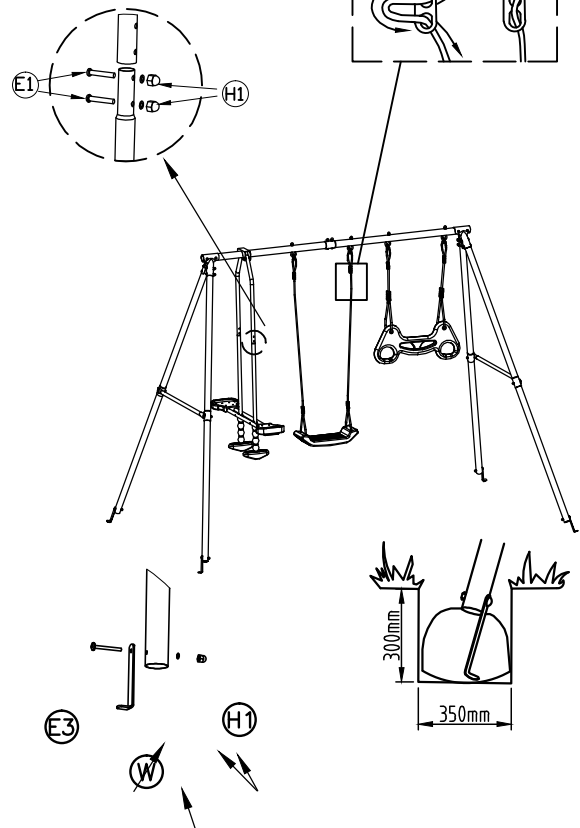

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it