

Soozier




IN221000258V01_US_CA

A61-039V00_A61-040V00

EN

User Manual

Basketball Backboard

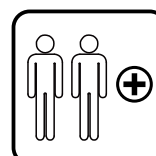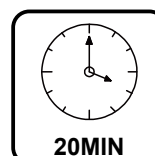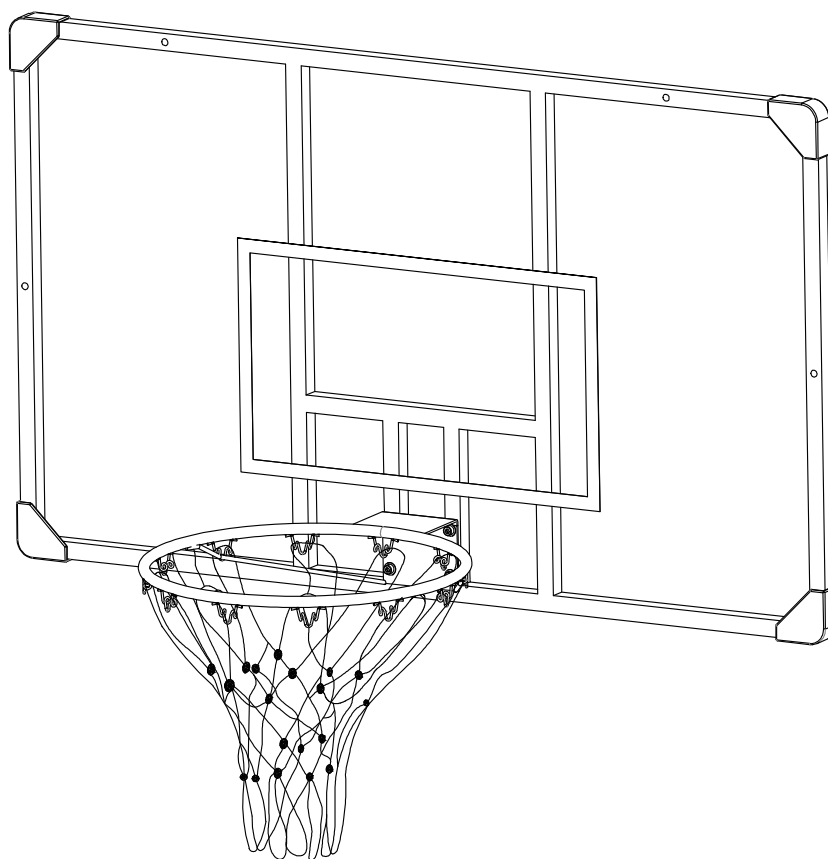



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

USER MANUAL

Dear customer,

Thank you for purchasing this product. So that your appliance serves you well, please read all the instructions in this user's manual. If you have any questions, please contact our customer care center.

Our contact details are below:

Country	 Phone	 Email
US	001-877-644-9366	customerservice@aosom.com
CA	416-792-6088	customerservice@aosom.ca

General Safety Instructions

- Two capable adults are required for this assembly.
- Read and understand the manual before assembling and using the unit.
- Failure to follow the instructions could result in injury or damage to the property.
- Select a safe place to install the backboard.
- Use extreme caution when using ladder.
- Make sure the backboard is firmly installed.
- Do not hang from the backboard and rim.
- Remove all contents from box and make sure this matches the parts list.
- Do not return the product in store, please contact customer service.

Maintenance

1. Regularly check if the backboard is firmly attached on the wall or mounting bracket. It is required to tighten if the screws are loose.
2. Check your basketball system frequently for loose hardware, excessive wear; and signs of corrosion.







For safety reasons, and to prolong the life of your basketball system, you must take the following preventative measures.

(1) Check all nuts and bolts. If any are loose, tighten them.

(2) Check all parts for excessive wear and tear. If necessary replace any parts that have been worn or damaged through usage. Contact our Customer Service Department for replacement parts.

Note: DO NOT HANG FROM RIM


Part List

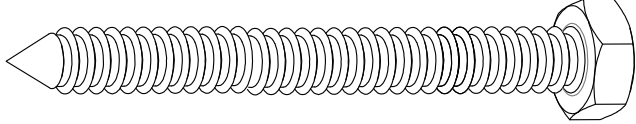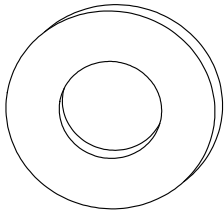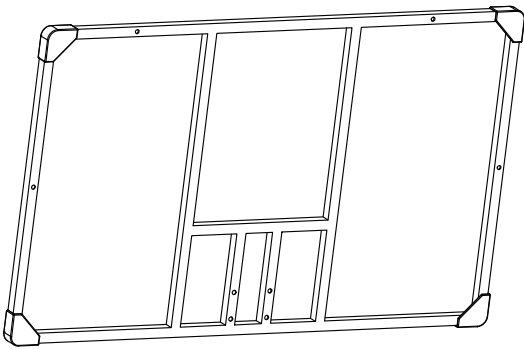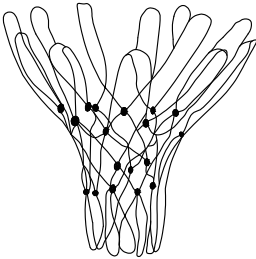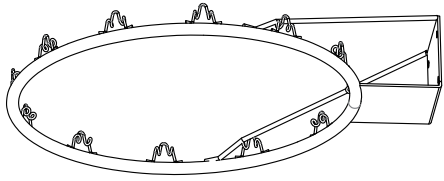	DESCRIPTION	PART IMAGE	Qty
1	Wall plug		8
2	Bolts	 M6*80MM	8
3	Washer	 $\Phi 6.5^* \Phi 15^* 0.8\text{MM}$	8
4	Backboard		1
5	Net		1
6	Rim		1

Assembly


Step 1

Find a suitable wall/board for ball-shooting.

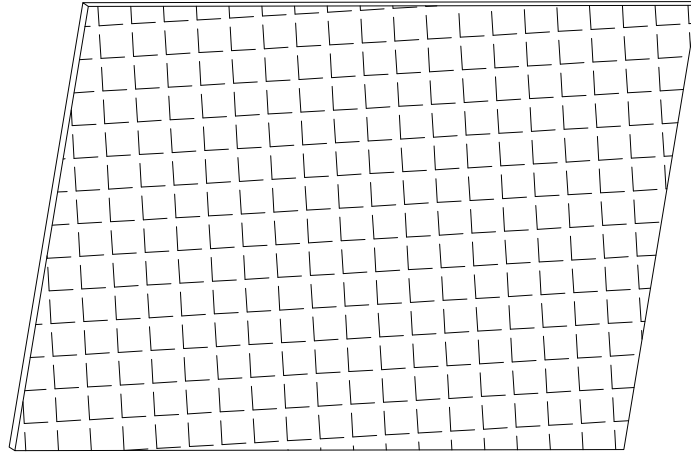


Step 2

Place the backboard(#4) on desired areas to navigate & prepare for drilling.

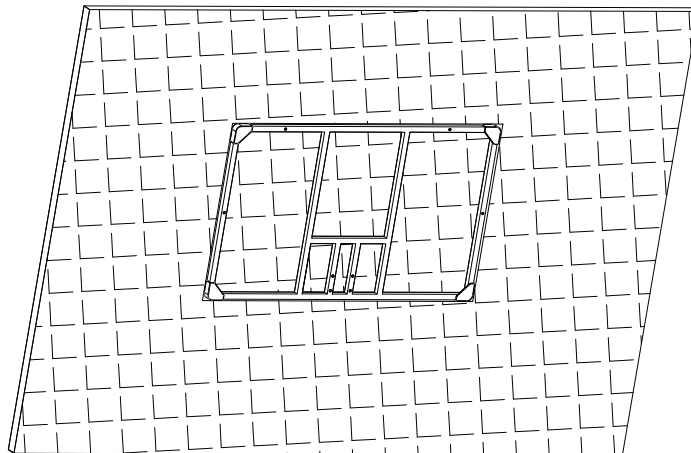

Step 3


Drill the wall/board according to the location of the backboard, and stuff the Wall plug (#1 * 8) into the holes.

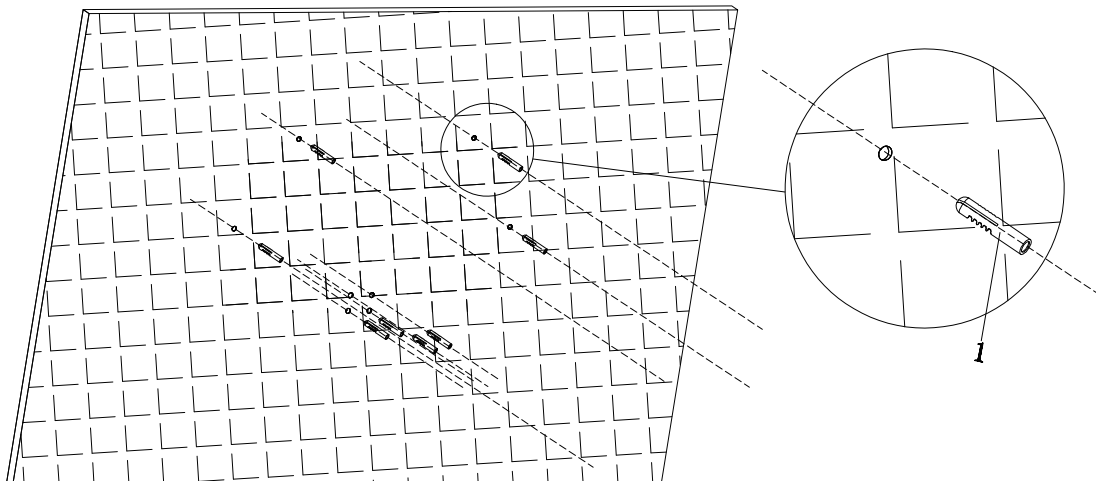

Step 4

Locking the basketball hoop.

- Align the backboard (#4) with the corresponding holes, and put in 4 sets of Bolts (#2) and washer (#3). Tighten the screws.
- Align the Rim (#6) with 4 holes located at the bottom of the backboard, and put in 4 sets of Bolts (#2) and washer (#3). Tighten the screws.
- Hang the basketball net (#5).
- Assembly Complete.

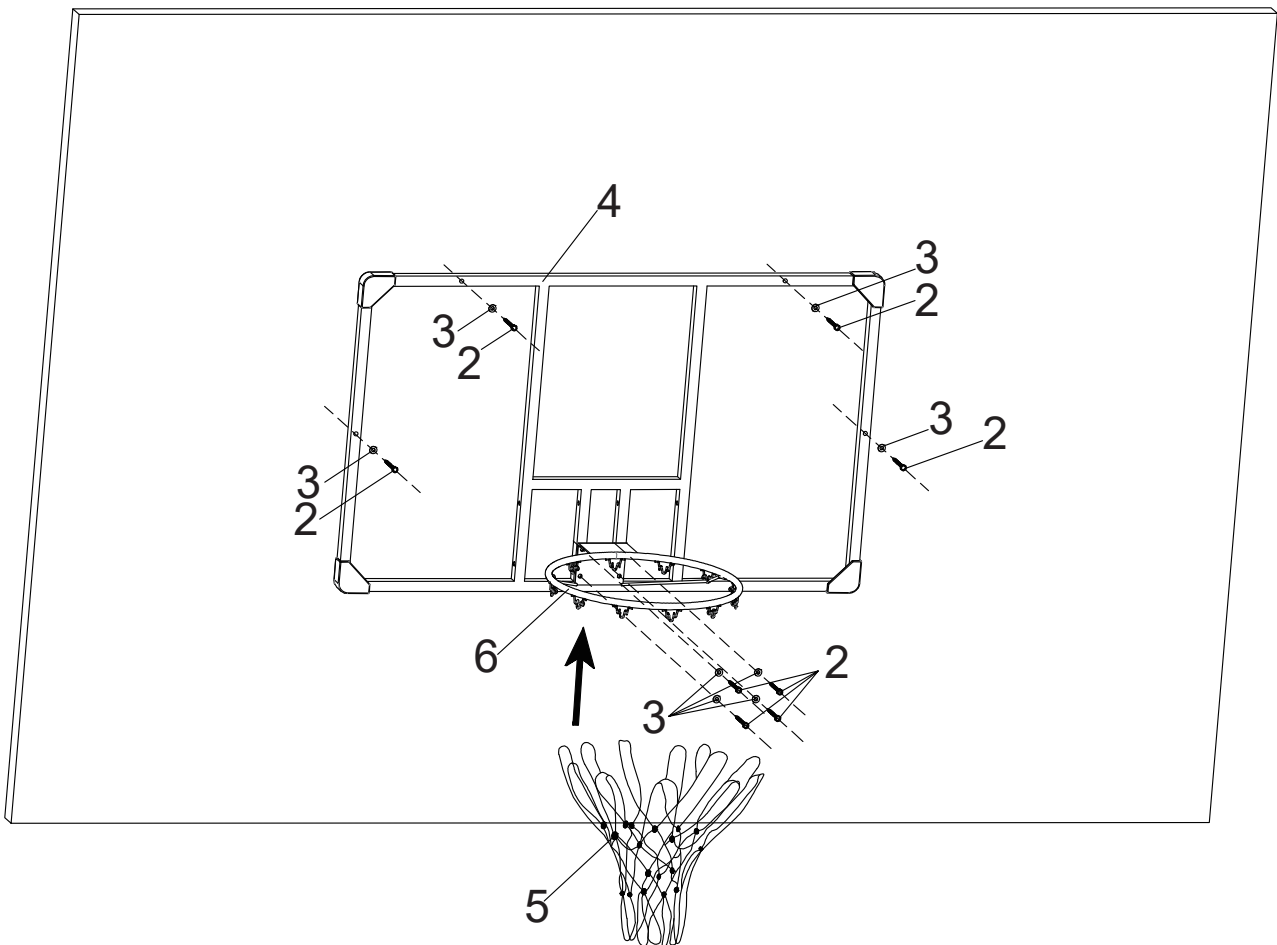

Soozier




IN221000258V01_US_CA

A61-039V00_A61-040V00

Manuel d'Instructions

FR

Panneau de basketball

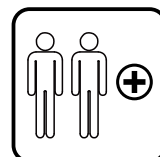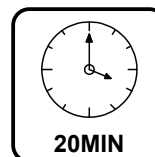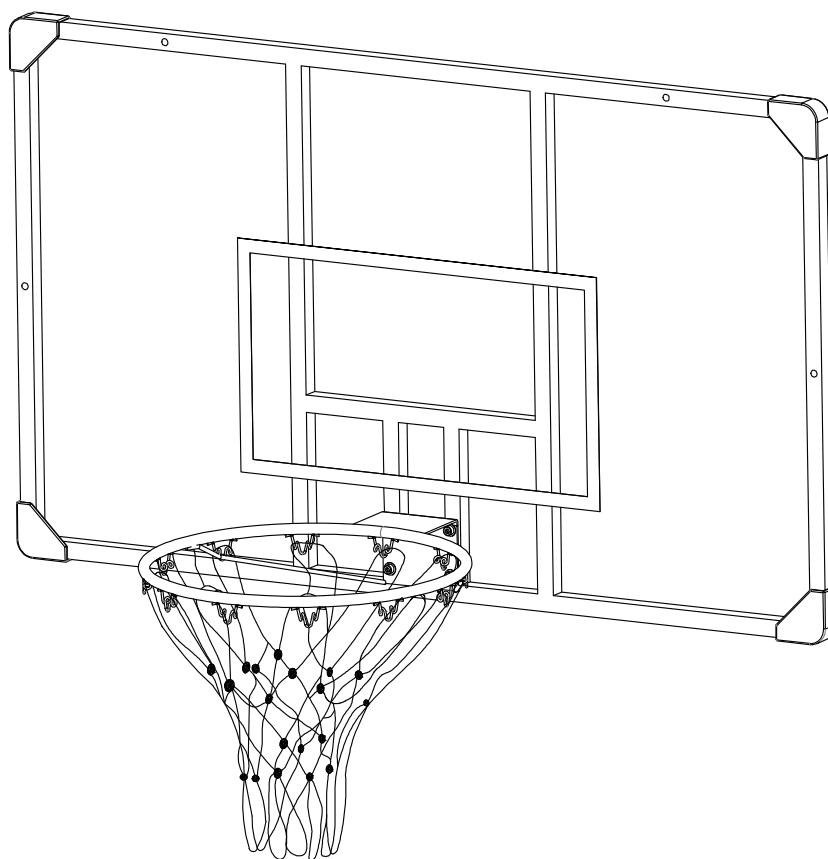



IMPORTANT, CONSERVEZ LES INSTRUCTIONS
POUR RÉFÉRENCE ULTÉRIEURE : LISEZ ATTENTIVEMENT

Manuel d'Instructions

Cher client,

Nous vous remercions d'avoir acheté ce produit. Afin que vous puissiez profiter pleinement de votre appareil, veuillez lire toutes les instructions de ce manuel d'utilisation. Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.

Nos coordonnées sont les suivantes:

Country	 Phone	 Email
US	001-877-644-9366	customerservice@aosom.com
CA	416-792-6088	customerservice@aosom.ca

Consignes de sécurité générales

- Deux adultes aptes sont requis pour cet assemblage.
- Lisez attentivement le manuel avant d'assembler et d'utiliser l'appareil.
- Le non-respect des instructions pourrait entraîner des blessures ou des dommages au matériel.
- Sélectionnez un endroit sûr pour installer le panneau arrière.
- Soyez extrêmement prudent lorsque vous utilisez une échelle.
- Assurez-vous que le panneau arrière est bien installé.
- Ne vous suspendez pas au panneau arrière et au cerceau.
- Retirez tout le contenu de la boîte et veillez à ce qu'il corresponde à la liste des pièces.
- Ne retournez pas le produit en magasin, veuillez contacter le service après-vente.

Entretien







1. Vérifiez régulièrement si le panneau arrière est fermement fixé au mur ou au support de montage. Il est nécessaire de serrer les vis s'ils sont desserrés.
2. Vérifiez fréquemment que votre système de basket-ball ne présente pas de pièces desserrées, d'usure excessive ou de signes de corrosion.

Pour des raisons de sécurité, et pour prolonger la durée de vie de votre système de basketball, vous devez prendre les mesures préventives suivantes.

- (1) Vérifiez tous les écrous et boulons. Si certains sont desserrés, serrez-les.
- (2) Vérifiez toutes les pièces pour détecter une usure excessive. Si nécessaire, remplacez toutes les pièces usées ou endommagées par l'utilisation. Contactez notre service clientèle pour obtenir des pièces de rechange.

Note : NE PAS SUSPENDRE AU CERCEAU


Liste des pièces

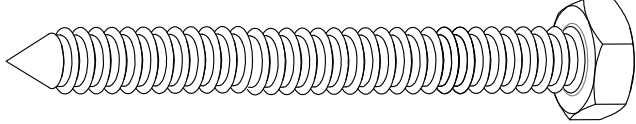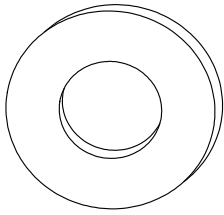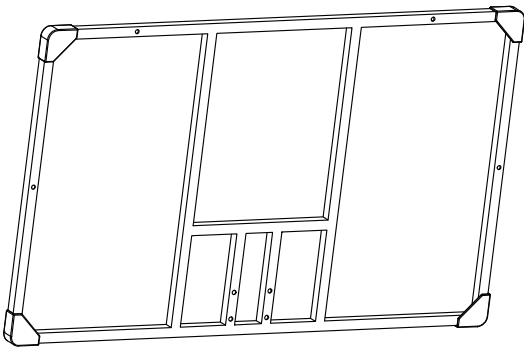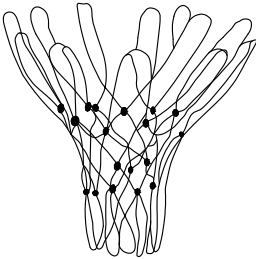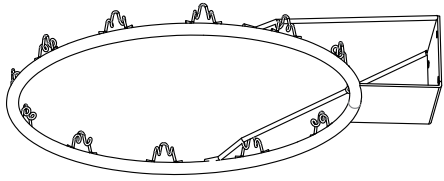	DESCRIPTION	FIGURE DE LA PIÈCE	QTE
1	Prise		8
2	Boulon	 M6*80MM	8
3	Rondelle	 $\Phi 6.5^* \Phi 15^* 0.8\text{MM}$	8
4	Panneau		1
5	Filet		1
6	Cerceau		1

Assemblage


Étape 1

Trouvez un mur / tableau approprié pour le tir de balle.

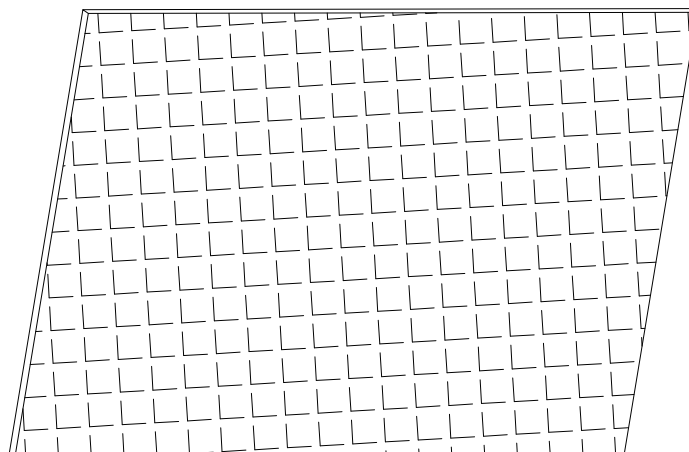


Étape 2

Placez le panneau arrière (# 4) sur les zones souhaitées pour naviguer et préparer le forage.

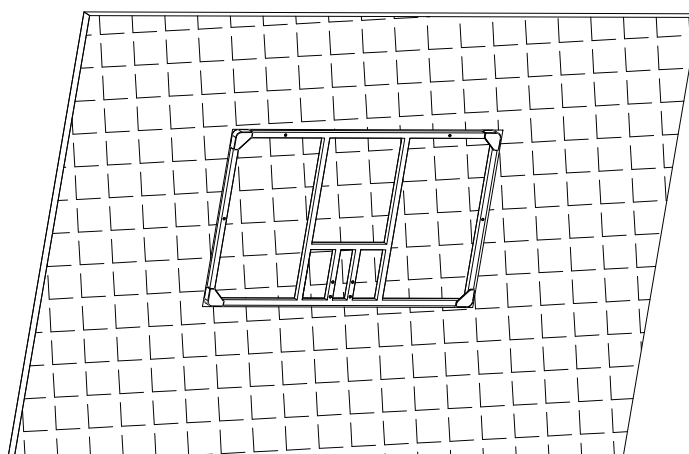

Étape 3

Percez le mur / planche en fonction de l'emplacement du panneau arrière et fourrez la prise murale (# 1 * 8) dans les trous.

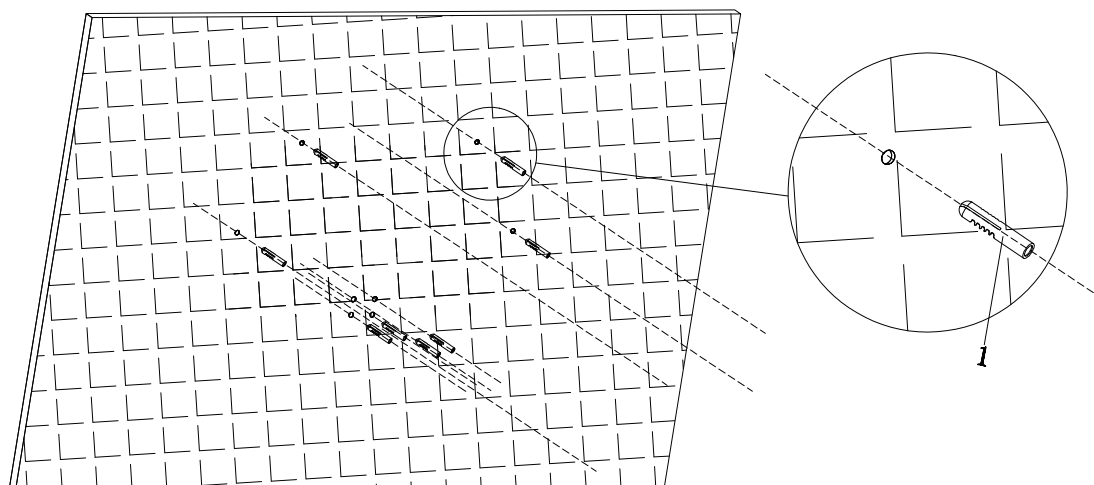

Étape 4

Verrouillez le panier de basketball.

- Aligned le panneau arrière (#4) avec les trous correspondants, et placez 4 jeux de boulons (#2) et une rondelle (#3). Serrez les vis.
- Aligned le cerceau (#6) avec 4 trous situés au bas du panneau arrière, et mettez en place 4 jeux de boulons (#2) et une rondelle (#3). Serrez les vis.
- Accrochez le filet de basket-ball (# 5).
- Assemblage terminé.

