




INbkb037V01_CA

842-135

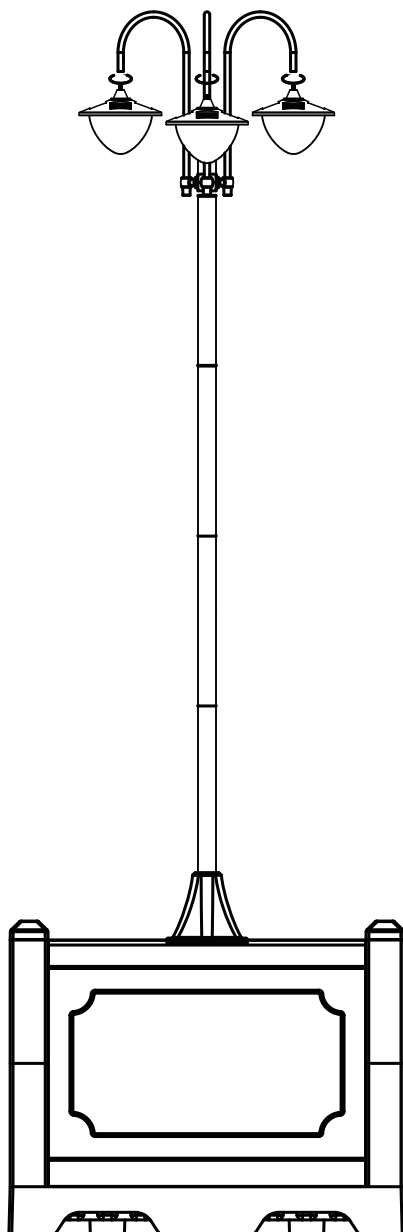

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
IMPORTANT - CONSERVEZ CES INFORMATIONS POUR VOTRE
CONSULTATION ULTÉRIEURE: LISEZ ATTENTIVEMENT

ASSEMBLY INSTRUCTION

These instructions describe the correct operating method to ensure prolonged service life. Please read and completely understand these instructions before operating your solar light. Keep these instructions for future reference.

INTRODUCTION

Using LED(Light Emitting Diode) technology and powered by the sun, this solar light is ideal for pathways, garden. During the day, solar panel charge the battery inside. At dusk, the solar light will turn on automatically using the stored energy from the sun.

POSITIONING YOUR SOLAR LIGHT

. Your solar light includes a built in photo sensor, which detects the level of surrounding natural light and controls when your light will automatically switch on and off. Your solar light should be placed at least 1.5 meter apart from one another and away from other night time light sources as this might keep the solar light from automatically turning on at dusk.

. Your solar light must be located in an area where the solar panel receives a maximum amount of full direct sunlight every day. Your light should be exposed to at least 8 hours of direct sunlight each day to fully charge the battery inside. Shady locations will not allow the battery to charge fully and will reduce the hours of night time light.

The performance of your solar light is dependent on your geographical location, weather conditions and seasonal lighting availability. On cloudy days and during winter, your solar light will not receive as much direct sunlight, resulting in reduced brightness and reduced operating time.

This pack should come complete with the following:

3 x solar light heads


3x arms

4 x poles

1x deck

1x planter

6x screws

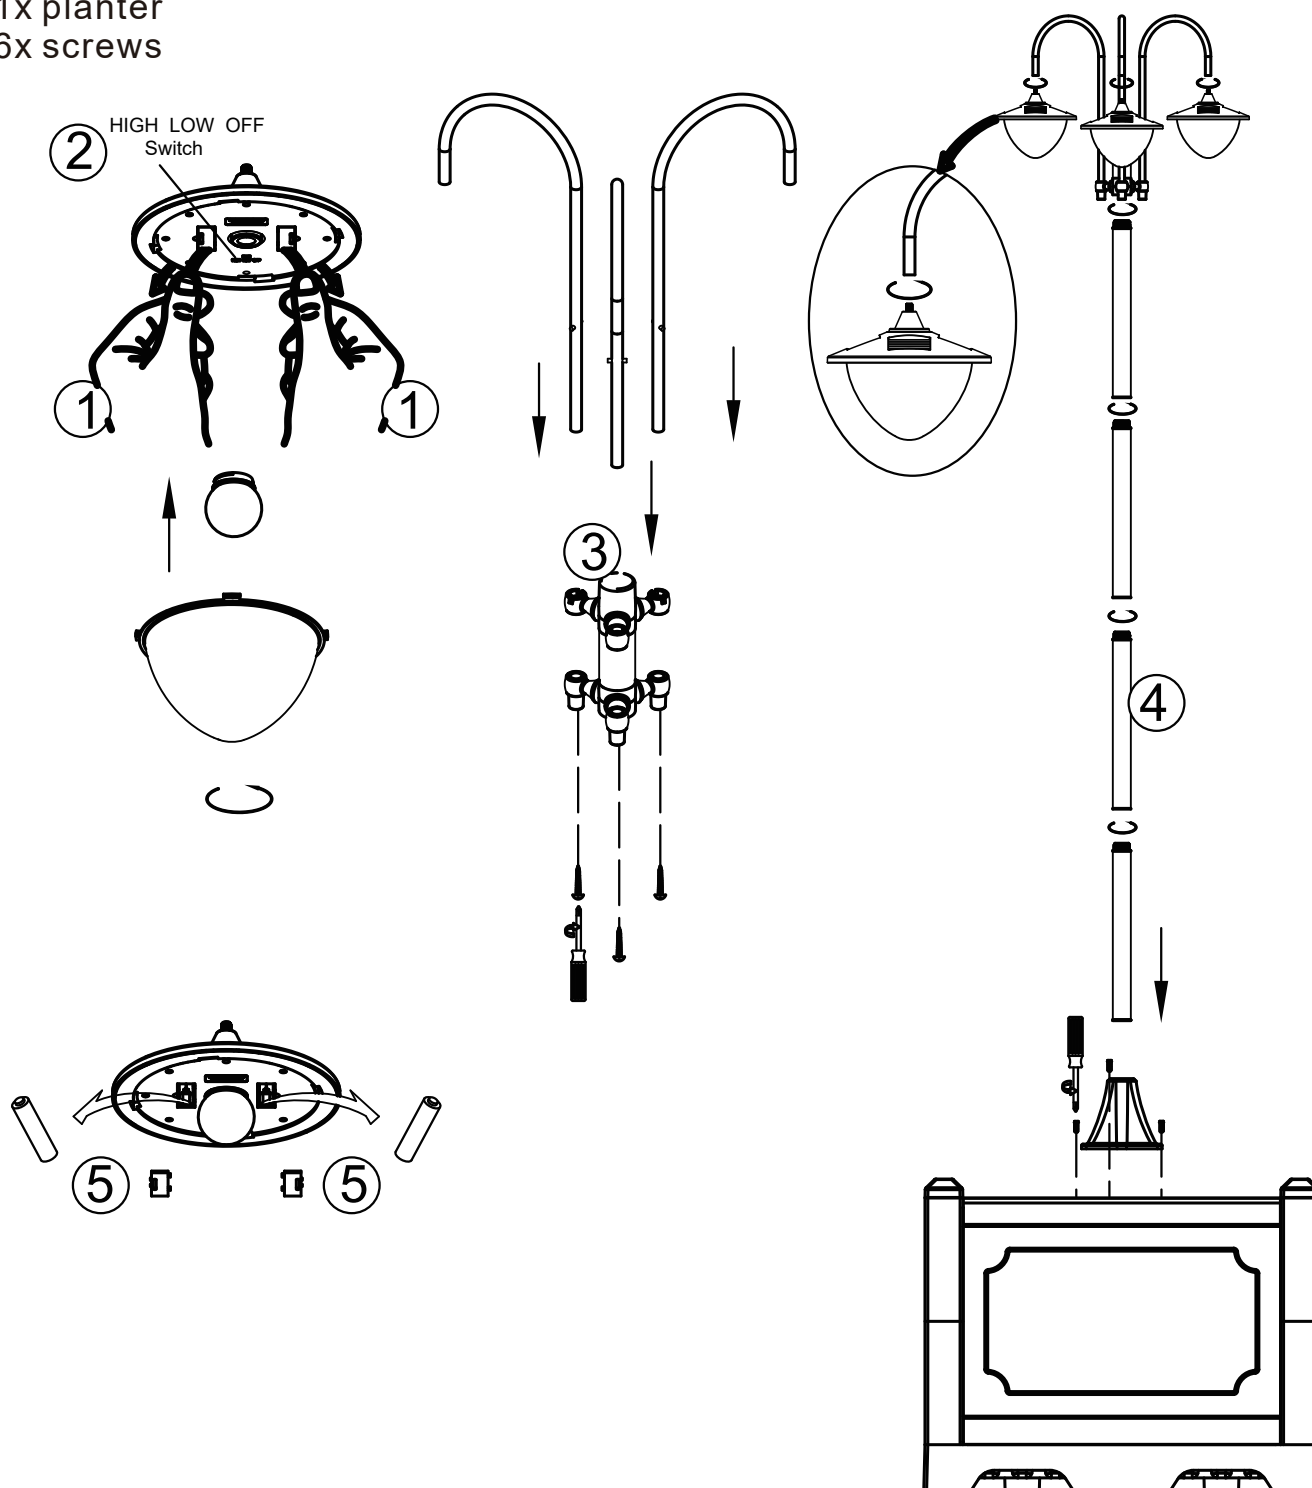

FIRST TIME USE

Step 1: Remove the lamp cover by twisting in an anti-clockwise direction.

Step 2: Remove the plastic strip and move the switch to HIGH or LOW.

Step 3: Then the solar light will switch on automatically when it turns dark.

BATTERY REPLACEMENT

NB: Your solar lights contain rechargeable 3.2V Li-ion 14500 battery.

Step 1: Remove the lamp cover by twisting in an anti-clockwise direction.

Step 2: Remove the battery covers. Replace old batteries with new rechargeable 3.2V 400mAh Li-ion 14500 batteries.

IMPORTANT: This product contains rechargeable Li-ion batteries. When the batteries life are exhausted, the batteries must be recycled or disposed of properly. **DO NOT DISPOSE OF BATTERY IN FIRE.**

TROUBLESHOOTING

If your solar light does not automatically turn on at night, it may be caused by one of the following conditions:

1. The switch is not in HIGH or LOW position. Move the switch to HIGH or LOW position.
2. Battery is not fully charged or needs replacing. For optimum performance, battery should be replaced every 12 months.
3. Solar light might be too close to another night time light source, including another solar light.
4. The solar panel may be dirty, limiting its exposure to the sun and not allowing the battery to fully charge. **Note:** This will shorten the life of the battery and cause the light to malfunction. Clean solar panel regularly with a dampened cloth or paper towel.

If your solar light only lights up for a few hours each night, the solar panel may not be receiving enough sunlight to fully charge the battery.

1. Move to an area where the solar panel can be exposed to at least 8 hours of direct sunlight each day.
2. Replace with new battery.

Ces instructions décrivent la méthode de fonctionnement correcte pour assurer une durée de vie prolongée. Veuillez lire et comprendre complètement ces instructions avant d'utiliser votre lampe solaire. Conservez ces instructions pour référence ultérieure.

Introduction

A l'utilisation de la technologie LED (diode électroluminescente) et alimentée par le soleil, cette lampe solaire est idéale pour les allées et les jardins. Pendant la journée, un panneau solaire permet de charger la batterie à l'intérieur. Au crépuscule, la lampe solaire s'allume automatiquement en utilisant l'énergie du soleil.

POSITIONNEMENT DE VOTRE LUMIÈRE SOLAIRE

Votre lampe solaire comprend un capteur photoélectrique intégré, qui détecte le niveau de lumière naturelle environnante et contrôle le moment où votre lumière s'allumera et s'éteindra automatiquement. Les sources lumineuses pourraient empêcher la lampe solaire de s'allumer automatiquement au crépuscule.

Votre lampe solaire doit être située dans une zone où le panneau solaire reçoit une quantité maximale de lumière directe du soleil tous les jours, et doit être exposée à au moins 8 heures de lumière directe du soleil chaque jour pour charger complètement la batterie à l'intérieur. Ne laissez pas la batterie se charger complètement, cela déduira les heures de lumière nocturne.

La performance de votre lampe solaire dépend de votre emplacement géographique, des conditions météorologiques et de la disponibilité saisonnière de l'éclairage. Les jours nuageux et pendant l'hiver, votre lampe solaire ne recevra pas autant de lumière du soleil direct, résultant en une luminosité réduite et un temps de fonctionnement réduit. Les performances de votre lampe solaire dépendent de votre emplacement géographique, des conditions météorologiques et de la disponibilité de l'éclairage saisonnier: par temps nuageux et en hiver, votre lampe solaire ne reçoit pas autant de lumière directe du soleil, ce qui entraîne une réduction de la luminosité et du temps de fonctionnement.

Ce package doit être livré avec les éléments suivants :

3 x douilles de lumière solaire


3x bras

4 x pôles

1x pont

1x planteur

6x Vis

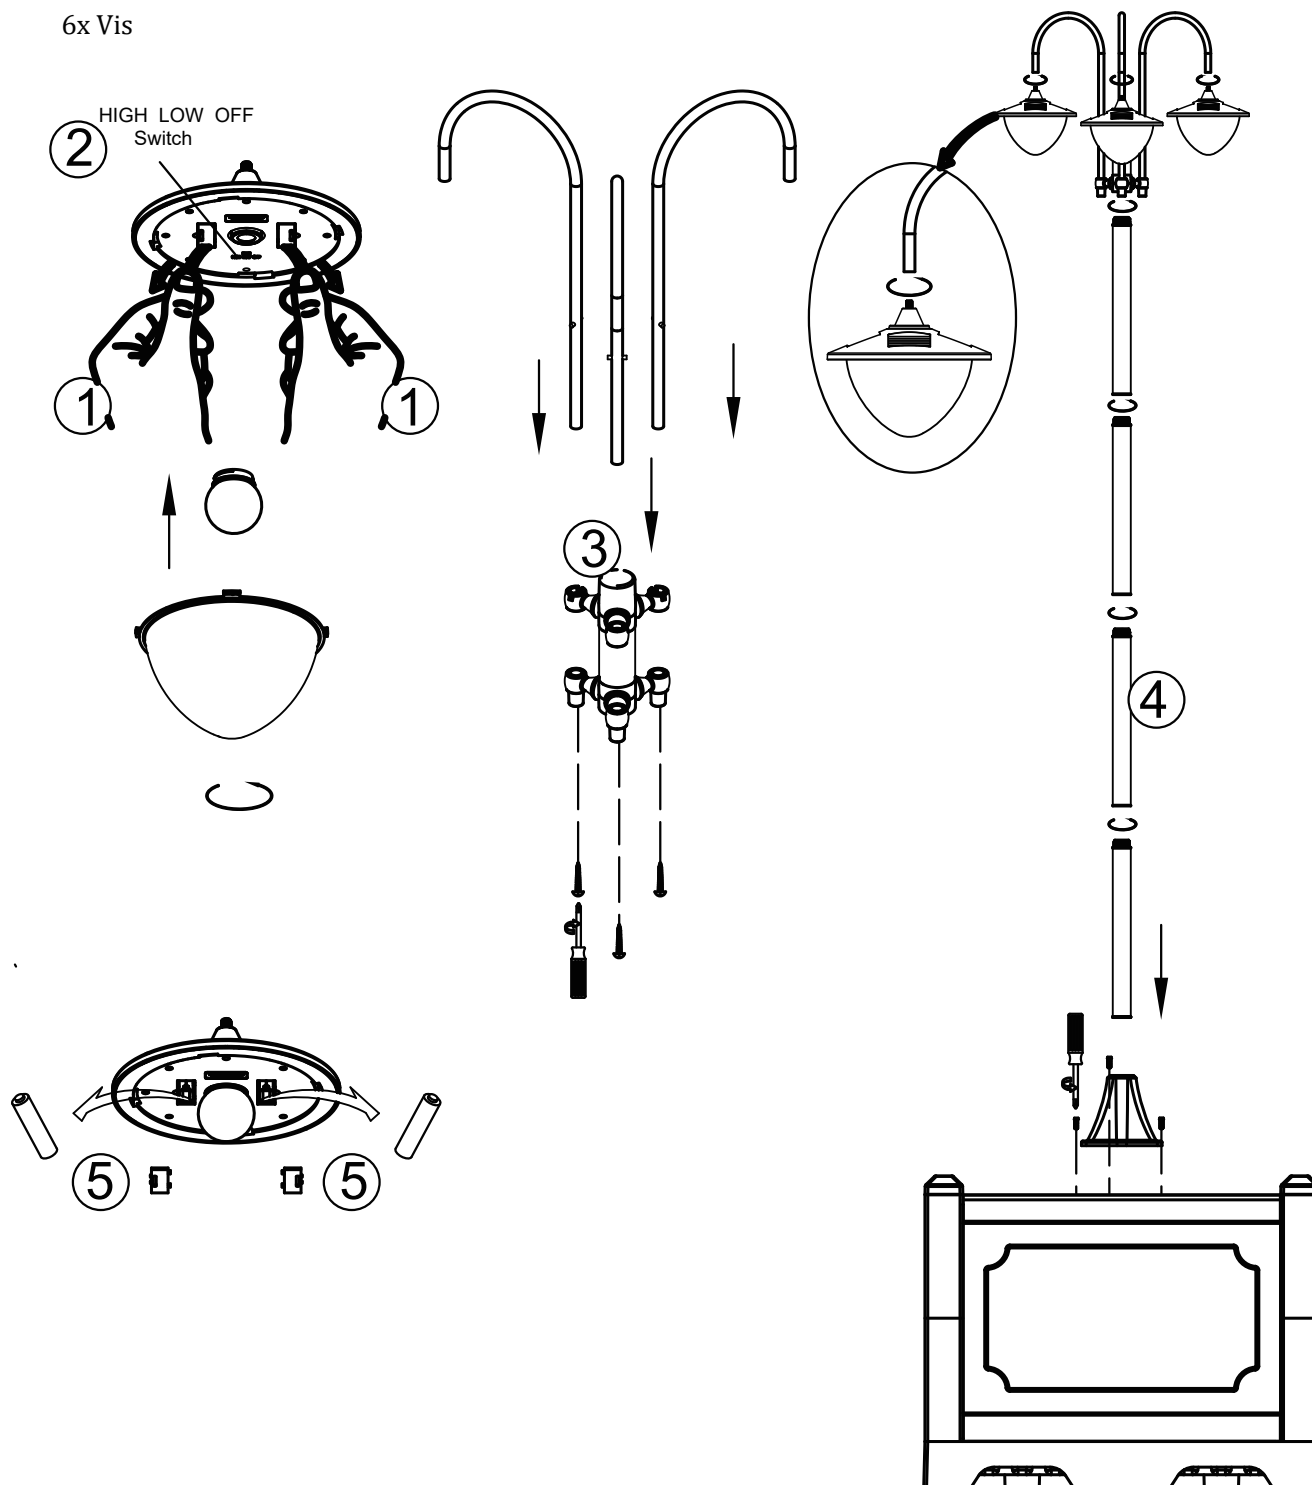

DÉPANNAGE

Si votre lampe solaire ne s'allume pas automatiquement la nuit, cela peut être dû à l'une des conditions suivantes :

1. L'interrupteur n'est pas en position HIGH ou LOW. Placez l'interrupteur sur Position haute ou basse.
2. La batterie n'est pas complètement chargée ou doit être remplacée. Pour des performances optimales, la batterie doit être remplacée tous les 12 mois.
3. La lampe solaire est peut-être trop proche d'une autre source de lumière nocturne, y compris une autre lumière solaire.
4. Le panneau solaire est peut-être sale, ce qui limite son exposition au soleil et empêche la batterie de se charger complètement. Note: Cela raccourcira la durée de vie de la batterie et entraînera un dysfonctionnement de la lampe. Nettoyez le panneau solaire régulièrement avec un chiffon humide ou une serviette en papier.

Si votre lampe solaire ne s'allume que pendant quelques heures chaque nuit, le panneau solaire peut ne pas recevoir assez de lumière du soleil pour charger complètement la batterie.

1. Déplacez-vous vers une zone où le panneau solaire peut être exposé à au moins 8 heures de lumière directe du soleil chaque jour.
2. Remplacez par une nouvelle batterie.