



INfgb027V01_US_CA

341-035



RACING CAR

VOITURE DE COURSE



- * Suitable for children of 36-72 months; Max weight: 35 kg.
- * Convient aux enfants de 36 à 72 mois ; Poids maximum : 35 kg.


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

FR_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION ULTÉRIEURE.



WARNINGS:



1. This product should only be used by children of 3-6 years old, maximum carrying weight is 35 kg, never ride with more than one person, not suitable for adult using.
2. Never use near steps, sloped driveways, hills roadways, alleys, swimming pool areas, road, on grass or wet surfaces or other bodies of water.
3. Adult supervision is required.
4. Plastic bags and small loose parts may be dangerous, keep away from the reach of children. to avoid suffocation hazard or swallow.
5. Before driving toy car each time, adult should inspect screws of every parts, please tighten the screw cap if any looseness. secure all fasteners before every ride.
6. Ensure the child understands the operation of the unit before riding.
7. Always wear shoes, knee pad and wristers. Always wear a local standard approved helmet while riding, with the chinstrap securely fastened.
8. Do not use screw-driver to prize the connection parts of plastics and steel tubes and do not hit the product, avoiding injury caused by broken plastics to children.
9. Do not push the product or tow/pull any objects with the product.
10. Do not use for stunts or jumping.
11. Do not ride the product at dusk, at night or at times of limited visibility.
12. This package contains small parts for adult assembly only.
13. Always comply with local laws and regulations.

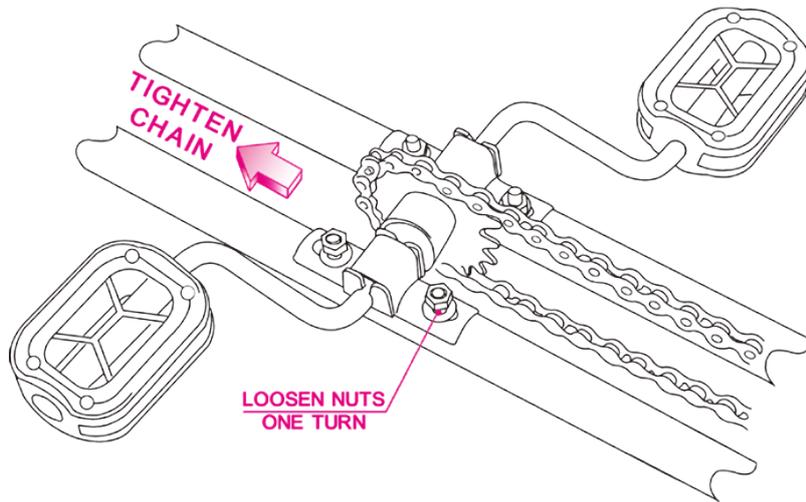



IF THE CHAIN COMES LOOSE



- * Remove the back plastic cover under the frame by undoing the Philips head screws.
- * Loosen the pedal bracket nuts one turn.
- * Slide the pedal bracket forward to tighten the chain.
- * Re-tighten the pedal bracket nuts.
- * Replace the plastic cover and insert the philips head screws.



PARTS

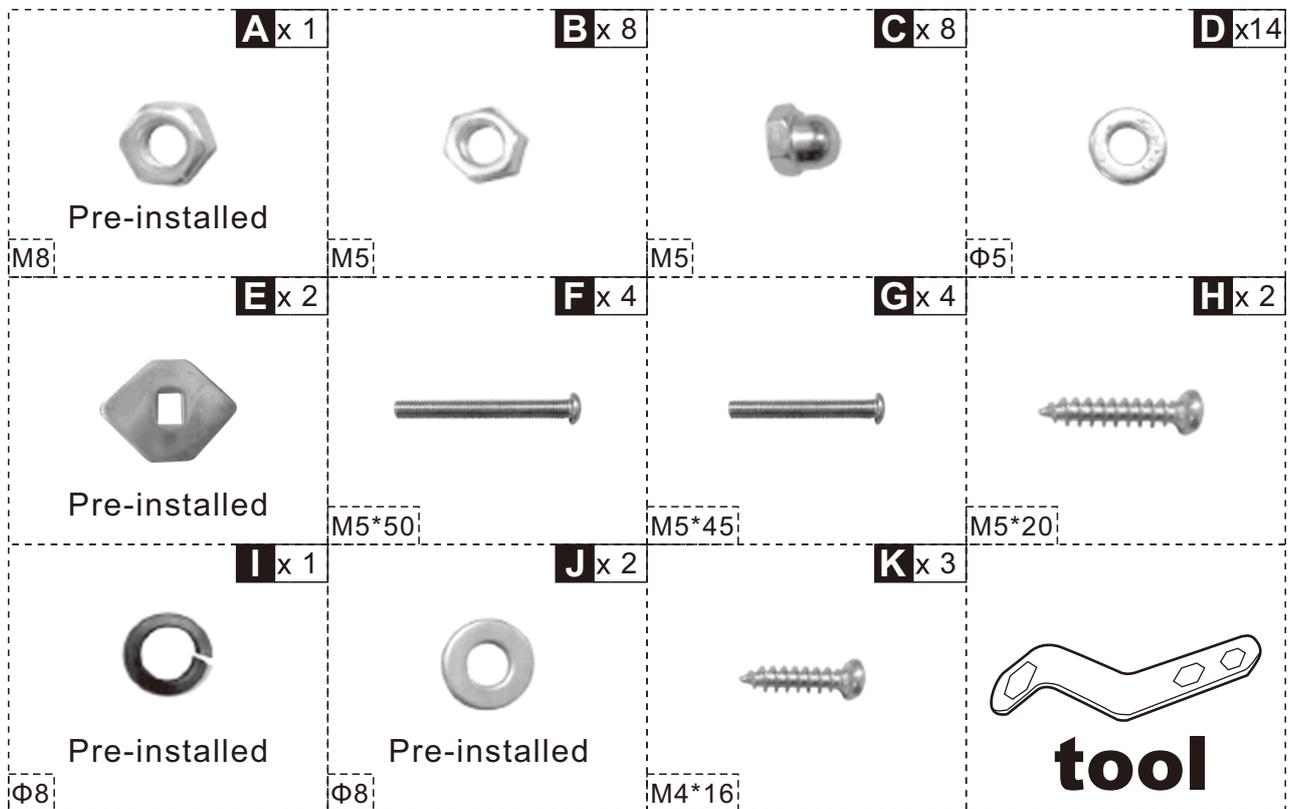


Tools not included

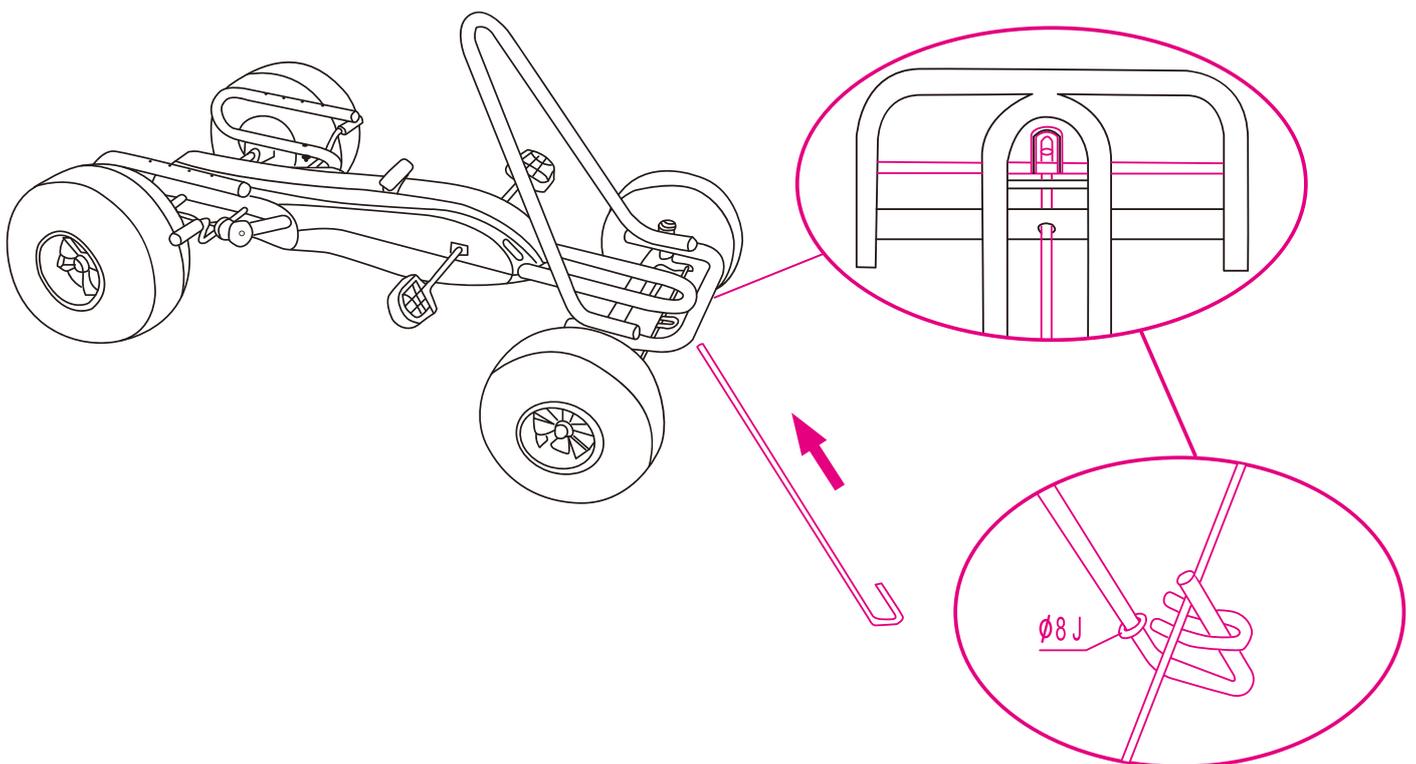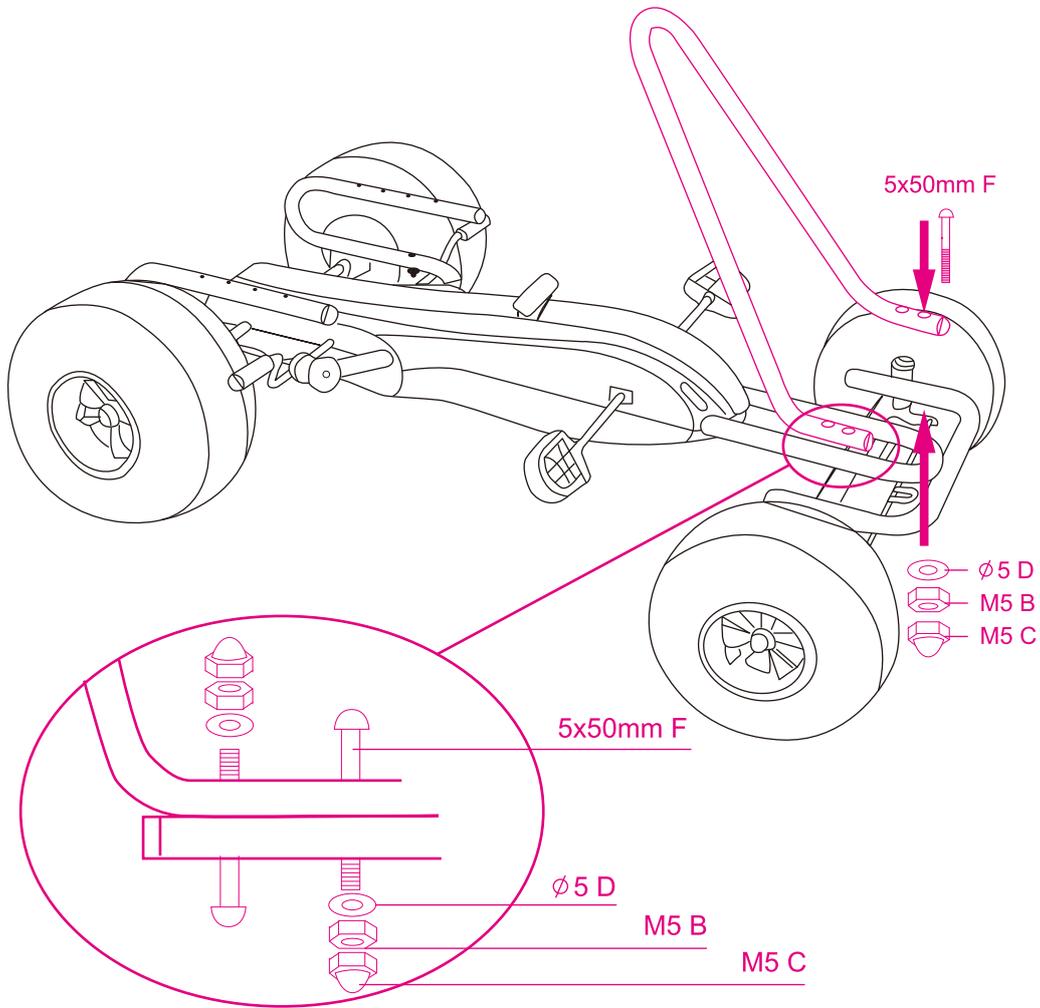

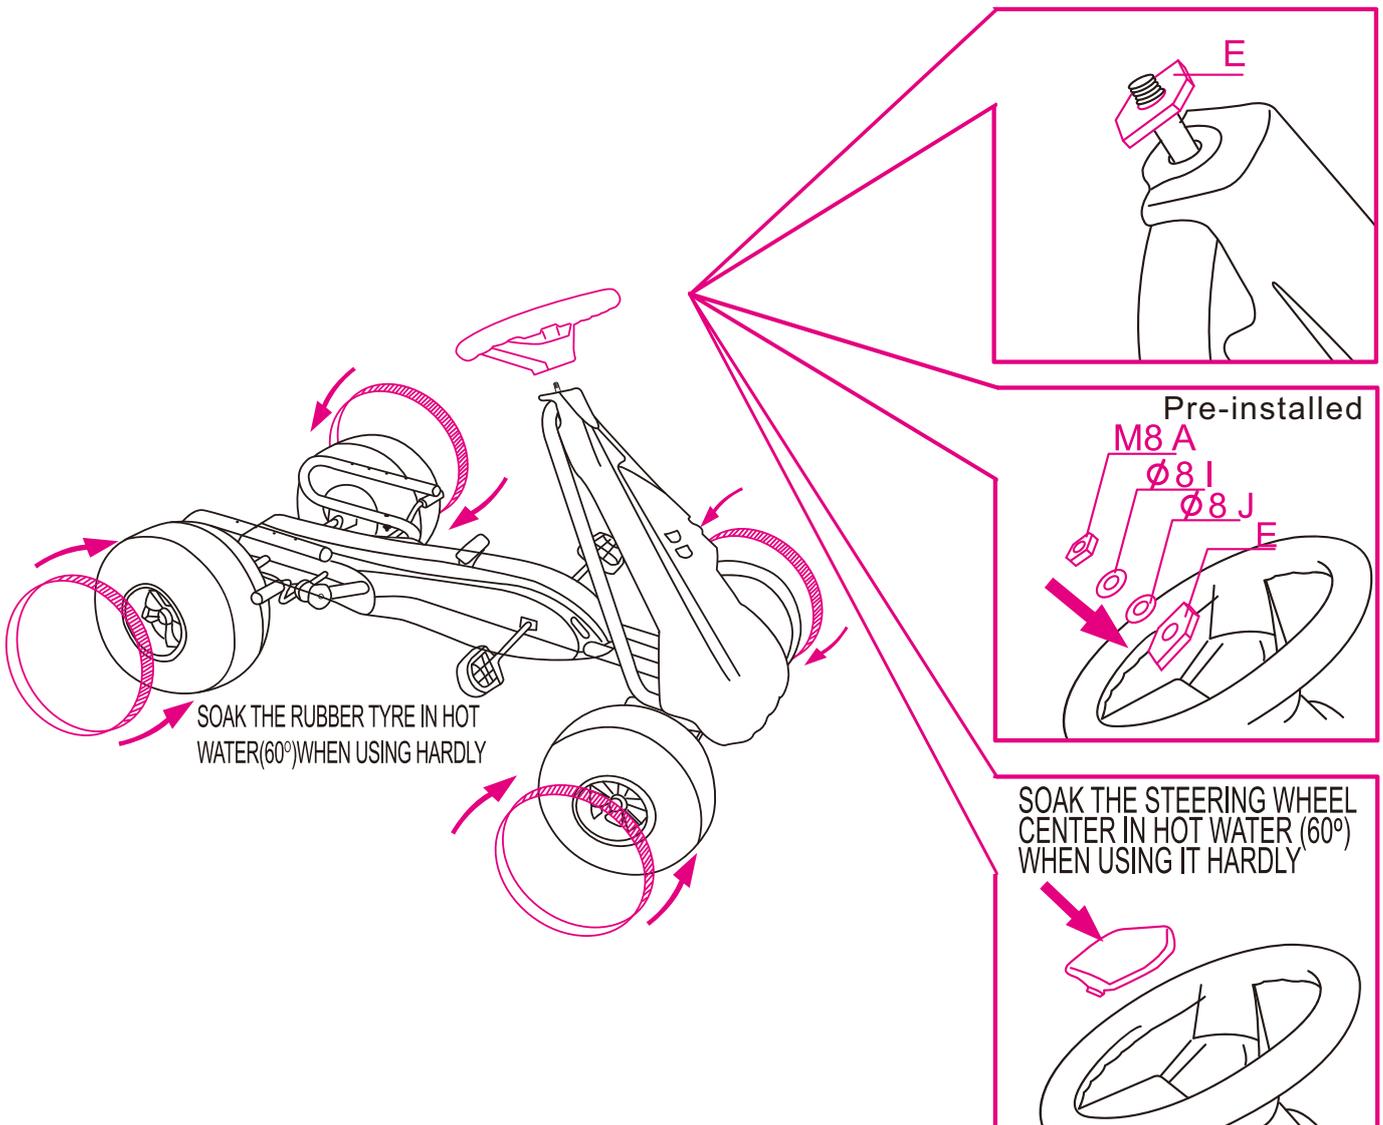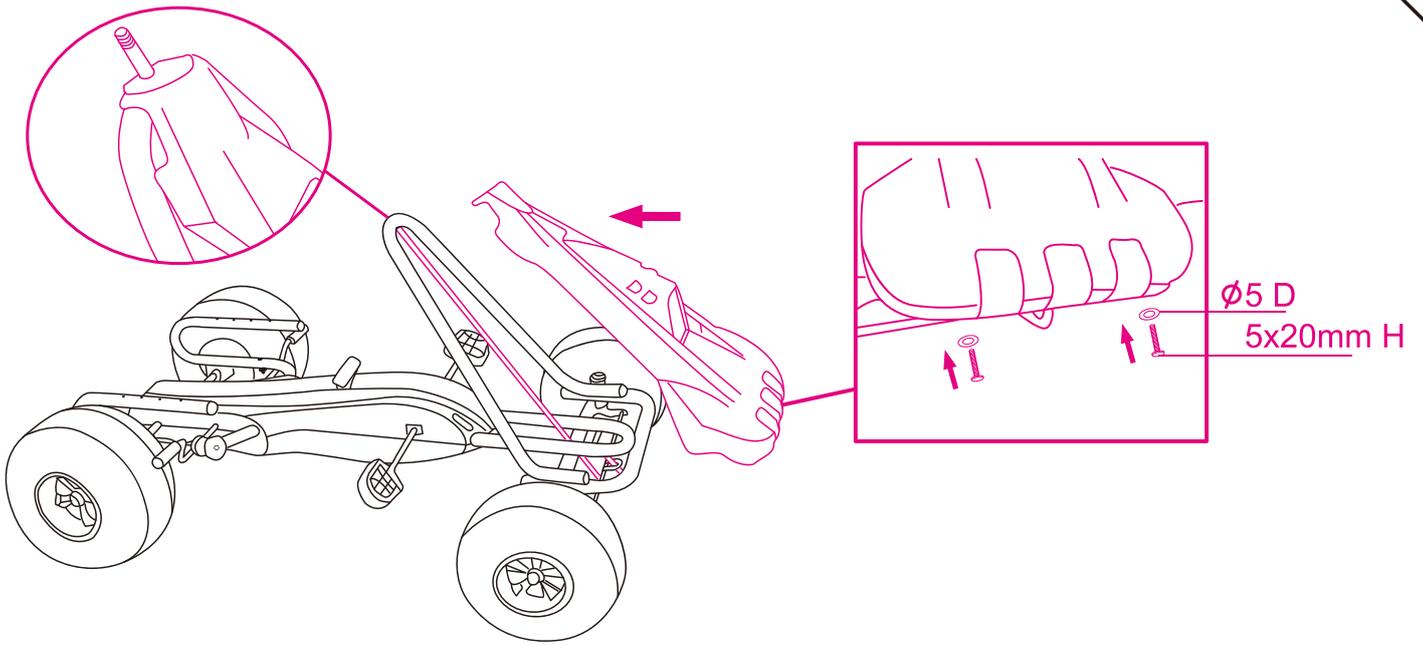


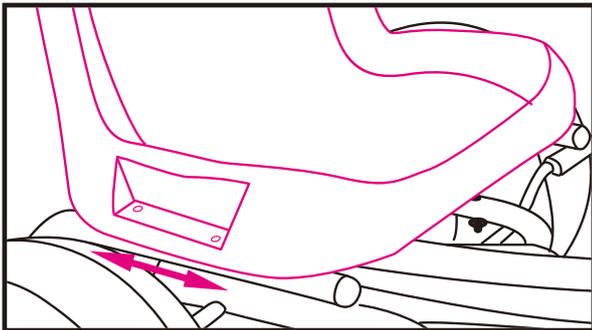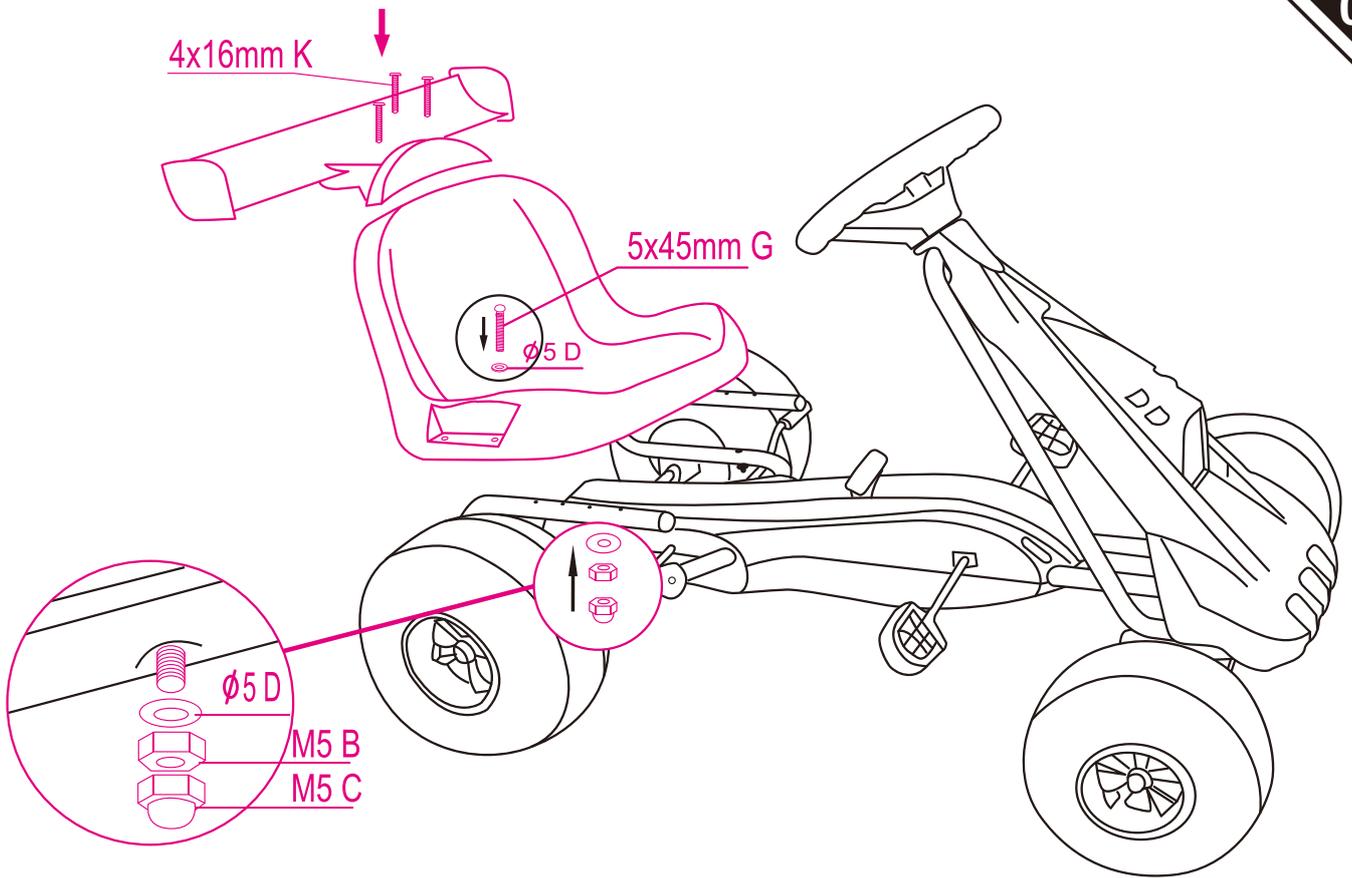



ADJUSTABLE SEAT

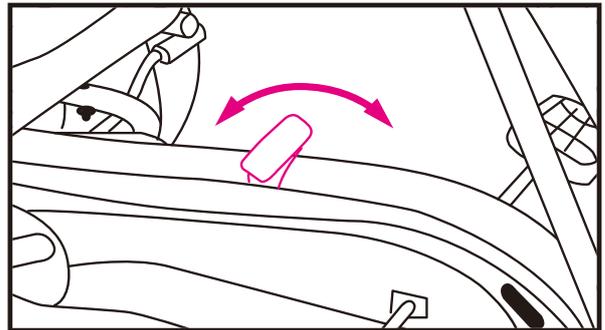

TWO-SPEED GEARLEVER:
a: PEDAL CLUTCH
b: FREE-WHEEL CLUTCH

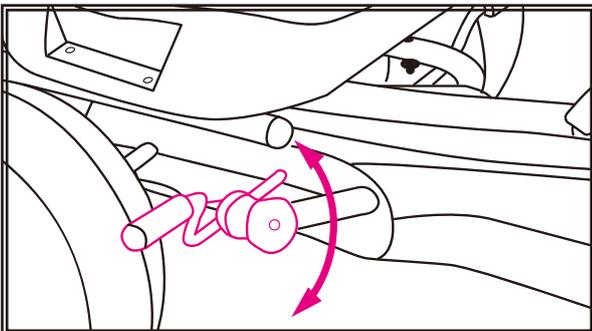


BRAKE HANDLE:
DOUBLE REAR-WHEEL EDGES
BRAKING

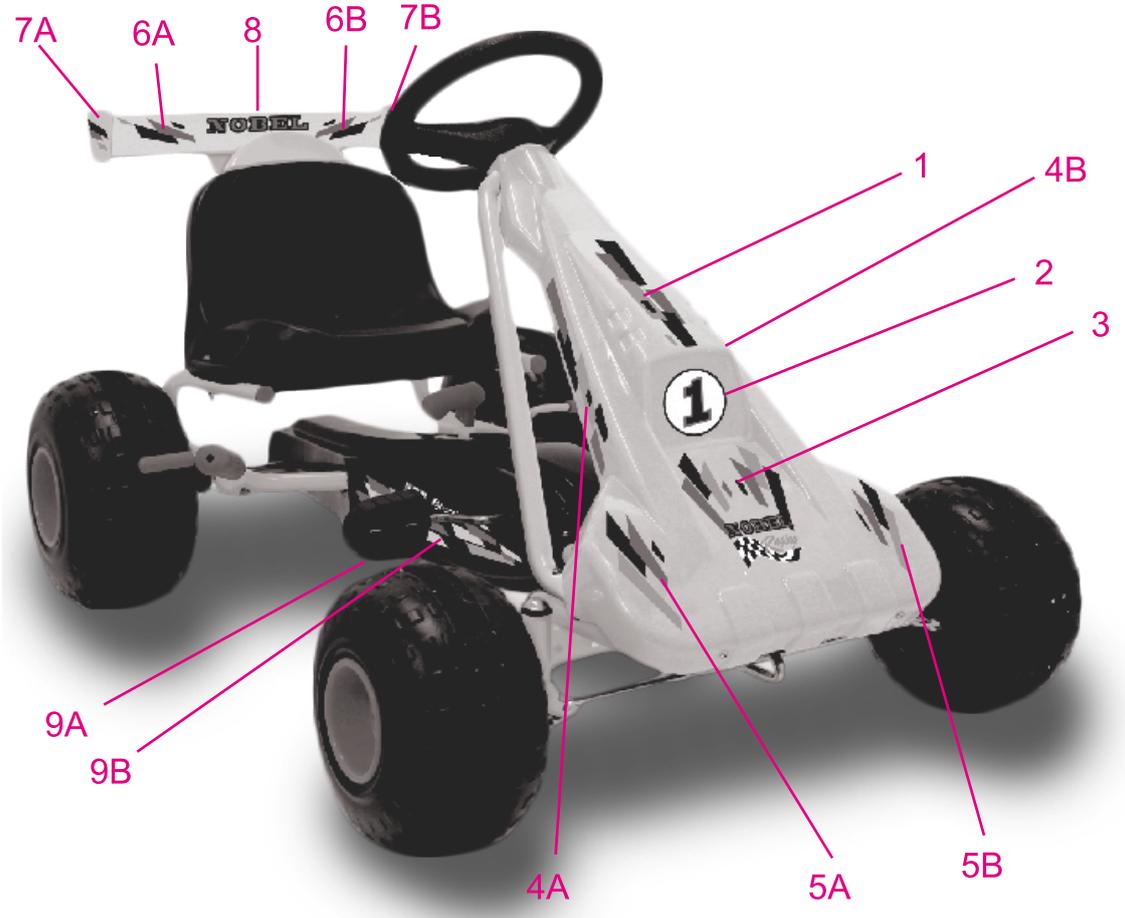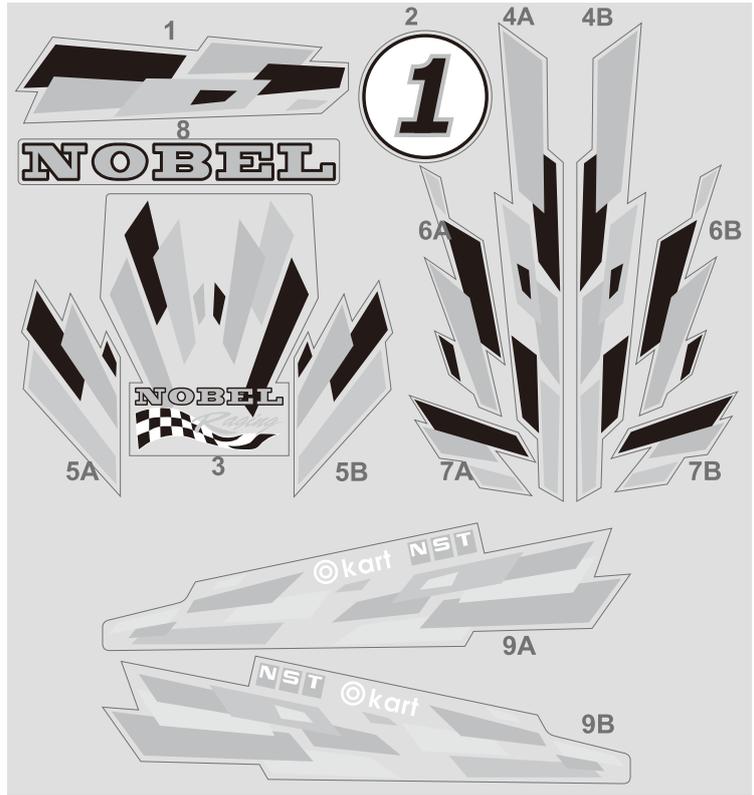



AVERTISSEMENTS :



1. Ce produit ne doit être utilisé que par des enfants de 3 à 6 ans, le poids maximum autorisé est de 35 kg, ne roulez jamais avec plus d'une personne non adaptée à un usage adulte.
2. Ne jamais utiliser à proximité de marches, d'allées en pente, de collines, de routes, de ruelles, de piscines, de routes, sur l'herbe ou sur des surfaces mouillées ou d'autres plans d'eau.
3. La supervision d'un adulte est requise.
4. Les sacs en plastique et les petites pièces détachées peuvent être dangereux, tenir à l'écart de la portée des enfants. pour éviter les risques de suffocation ou avaler.
5. Avant de conduire la voiture jouet à chaque fois, l'adulte doit inspecter les vis de chaque pièce, veuillez serrer le bouchon à vis s'il est desserré. fixez toutes les attaches avant chaque trajet.
6. Assurez-vous que l'enfant comprend le fonctionnement de l'unité avant la conduite
7. Toujours porter des chaussures, genouillère et poignet. portez toujours un casque standard local approuvé pendentif la conduit, avec la jugulaire bien fixée
8. N'utilisez le vis-pilote pour noter les pièces de connexion des plastiques et des tubes d'acier et ne pas frapper. le produit, évitant les blessures causées par des plastiques cassés aux enfants.
9. Ne pas pousser le produit ou tirer/tourner un objet avec le produit.
10. Ne pas utiliser pour des étourdissements ou des sauts
11. Ne roulez pas le produit au crépuscule, la nuit ou aux moments de visibilité limitée.
12. Ce package contient de petites pièces pour l'assemblage adulte uniquement.
13. Toujours se conforme aux lois et règlements locaux.

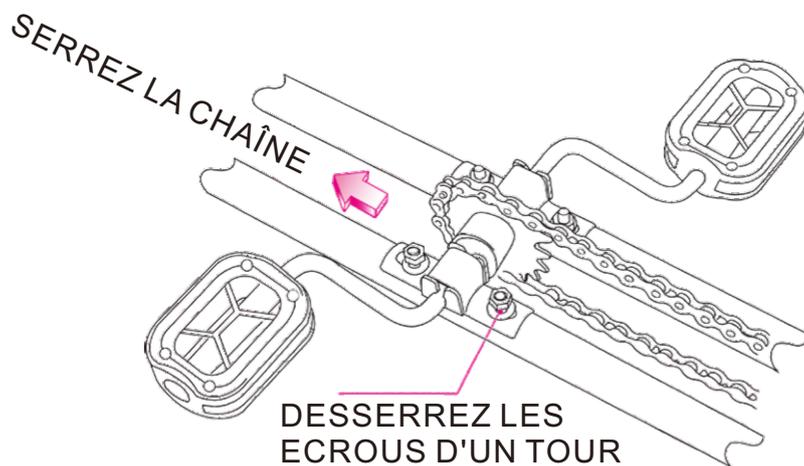



SI LA CHAÎNE SE DÉTACHE



- * Retirez le couvercle en plastique arrière sous le cadre en défaisant les vis à tête philips.
- * Desserrez les écrous de support de pédale un tour.
- * Glissez la pédale vers l'avant pour serrer la chaîne.
- * Resserrez les écrous de support de pédale.
- * Remplacer le couvercle en plastique et insérer les vis à tête philips.


PARTS

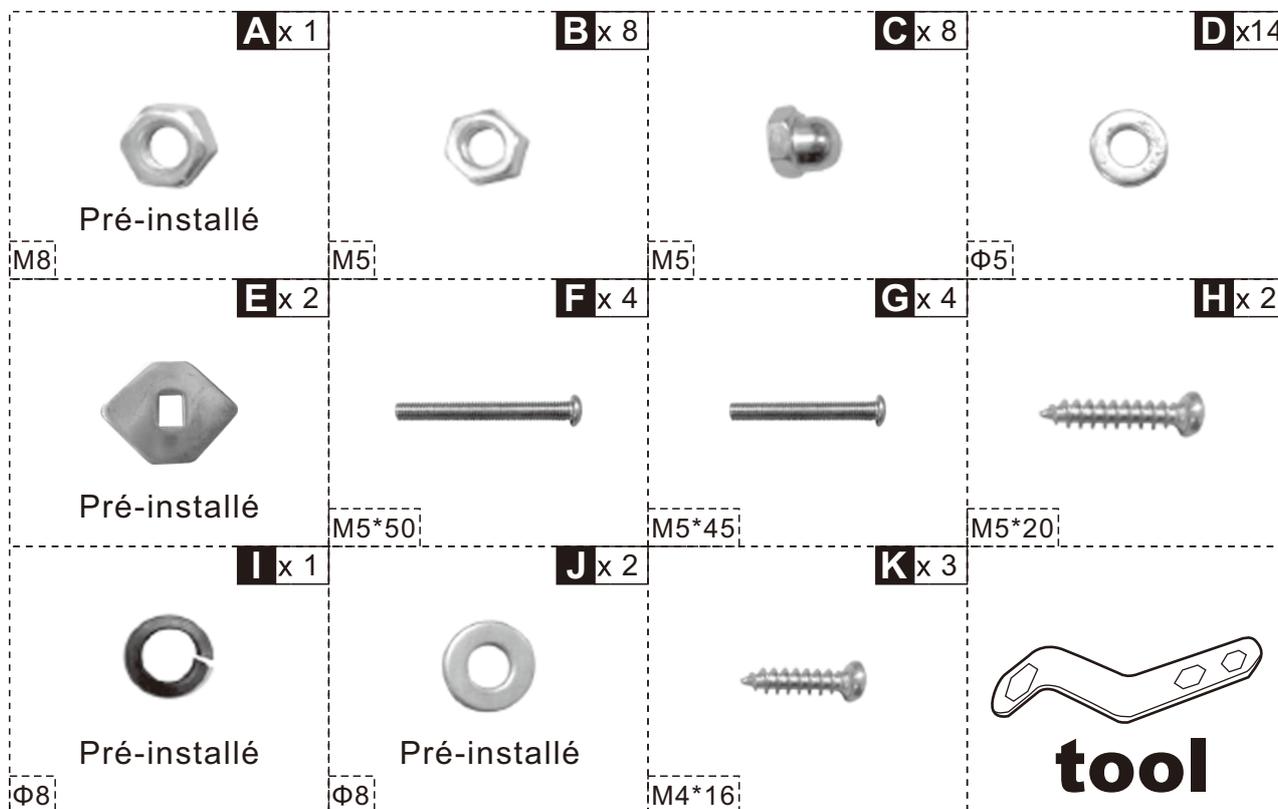


Outils non inclus

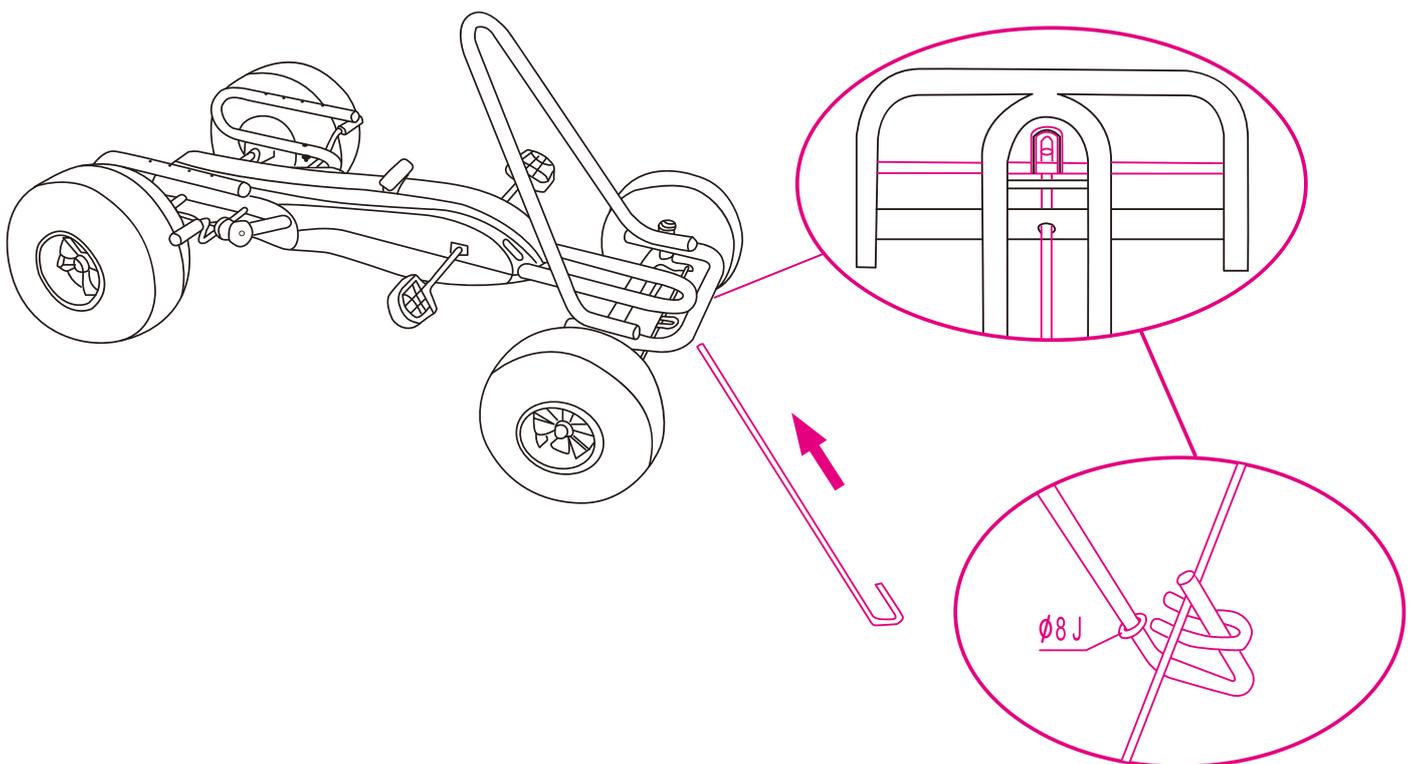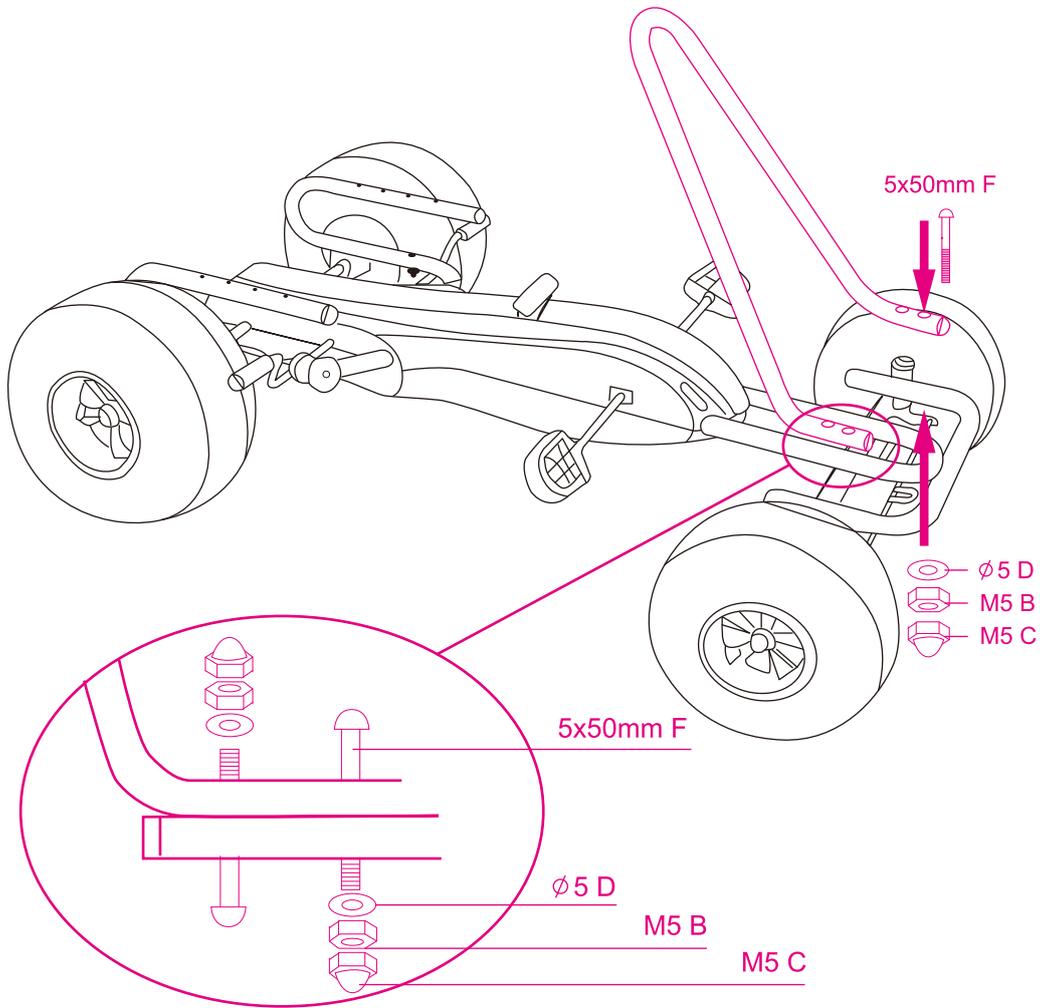

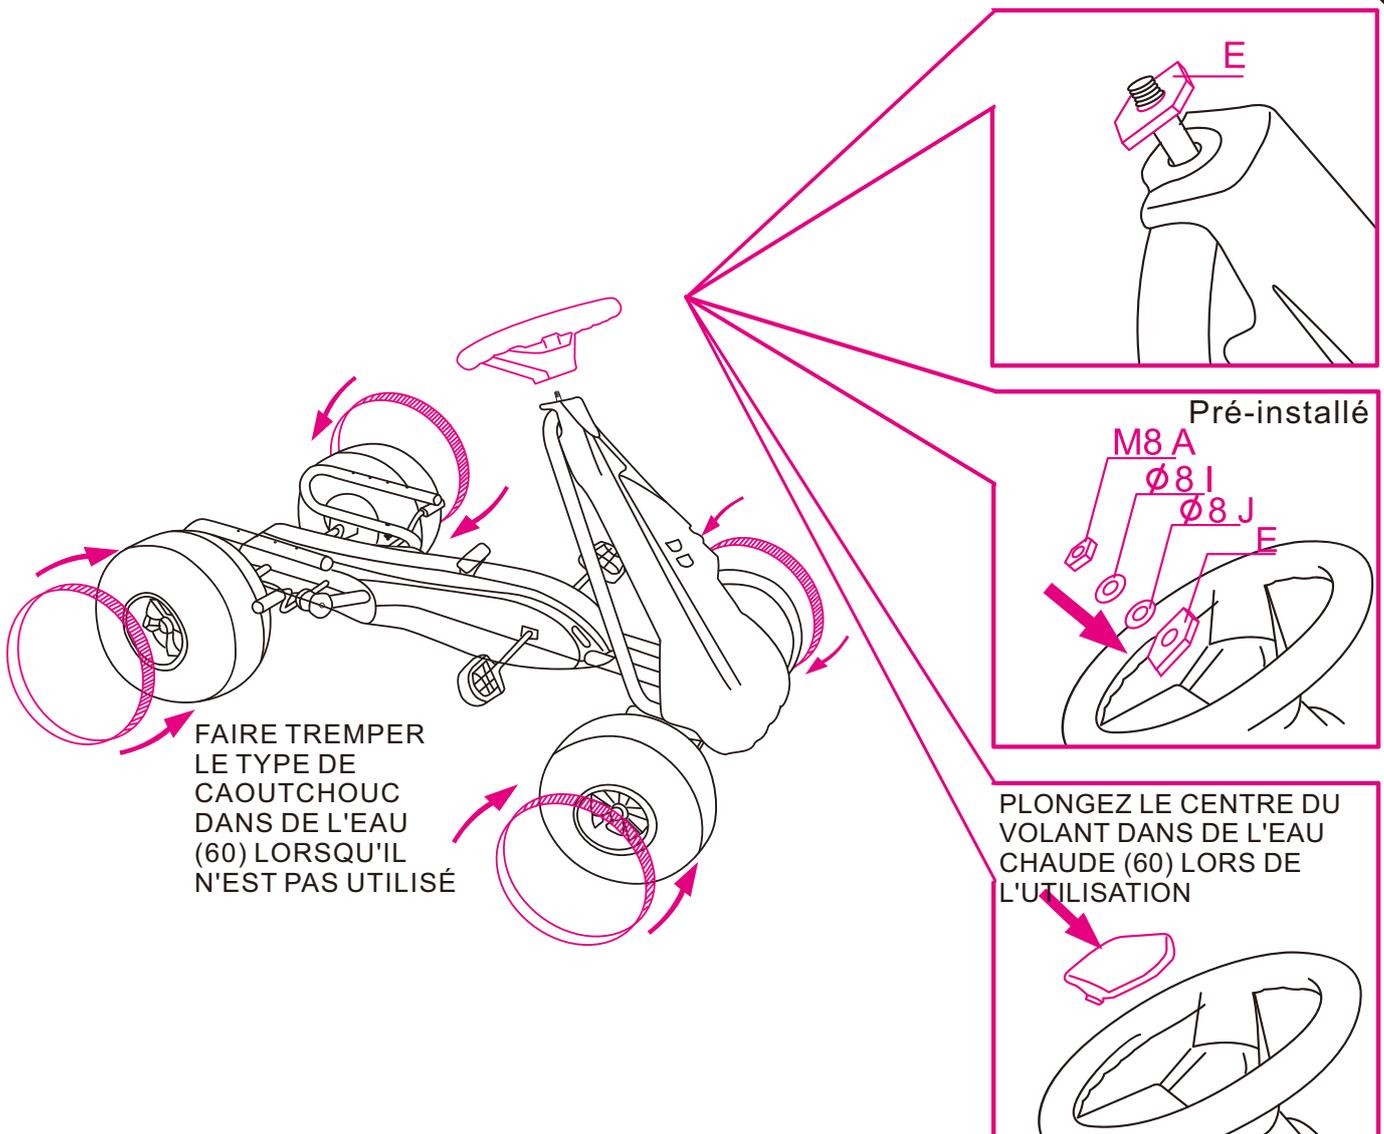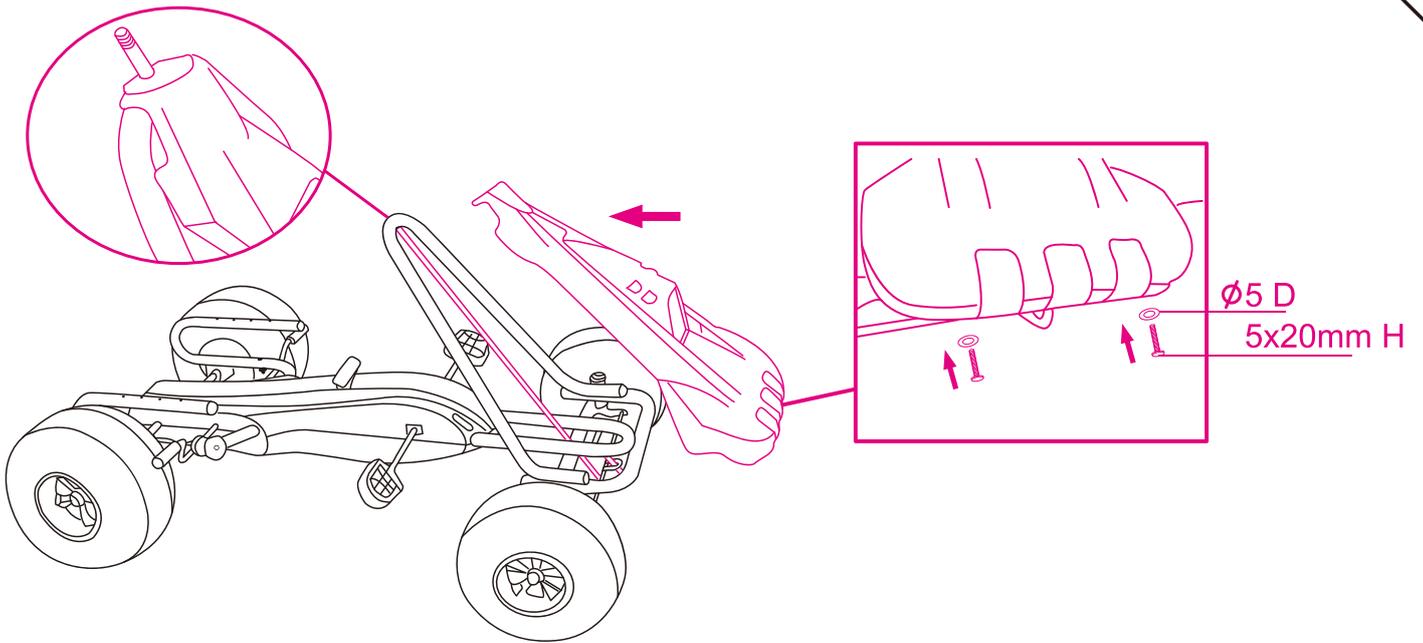

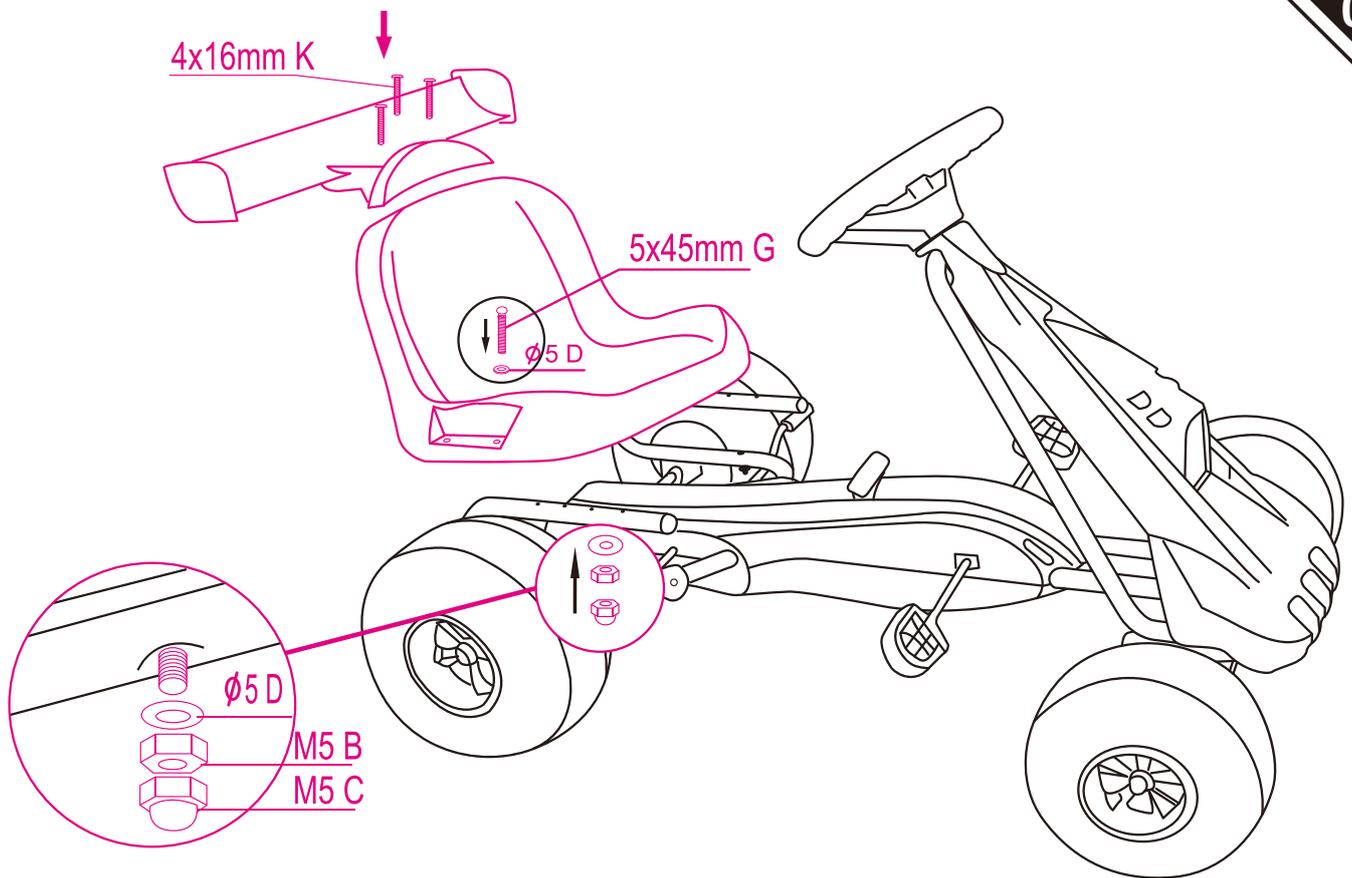


SIÈGE RÉGLABLE

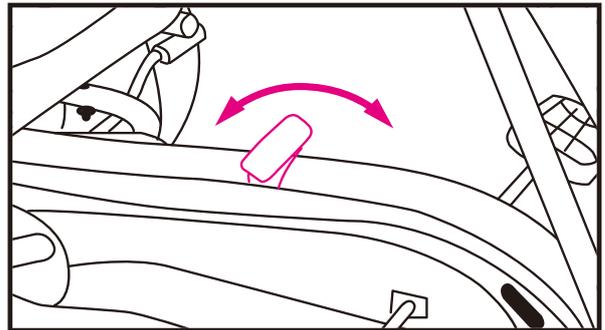

ENGRENAGE DE VITESSE À DEUX VITESSES :

- a : EMBRAYAGE DE PÉDALE
- b : EMBRAYAGE À ROUE LIBRE

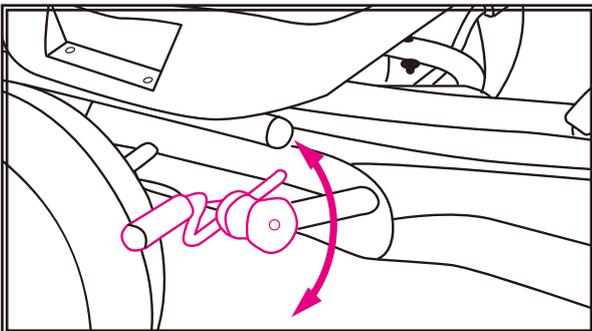POIGNEE DE FREIN
DOUBLE BORDS DE ROUE ARRIERE
FREINAGE

