
AIYAPLAY

IN230700086V01_UK

370-290V00

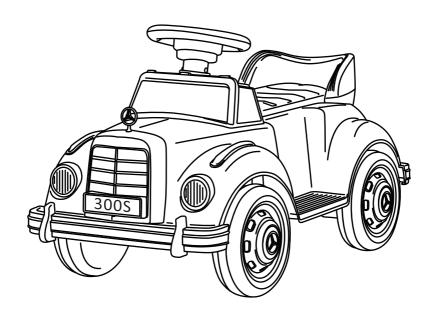

ASTM F963 / €

Ride-on car

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

USER'S MANUAL

Before You Start

- * The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- * Must be assembled by adult.

⚠WARNING:

- * Not suitable for children under 18 months. CHOKING HAZARD- Small parts.
- * NOTE: For best performance, only use this vehicle on flat and hard surfaces.
- * Maximum User Weight: 25 KG.

For safety sake:


- * Please use this vehicle under the adult guidance and supervision.
- * Not to be used in traffic.

MARNING: Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

Battery handling:

- 1. Battery must be handled by adults only.
- 2. Always remove dead batteries.
- 3. Only use 2*1.5V AAA batteries.
- 4. Alkaline batteries are recommended.
- 5. When the product is not being used for a while, remove the batteries.
- 6. When changing batteries, ensure they are all changed with new ones.
- 7. Do not mix old and new batteries.
- 8. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 9. Do not throw batteries into a fire they could explode or leak.
- 10. Do not charge non-rechargeable batteries.
- 11. Before charging, remove chargeable batteries from the product.
- 12. Adult supervision is required when charging batteries.
- 13. Insert batteries with the correct polarity.
- 14. Ensure supply terminals are not short-circuited

Parts List

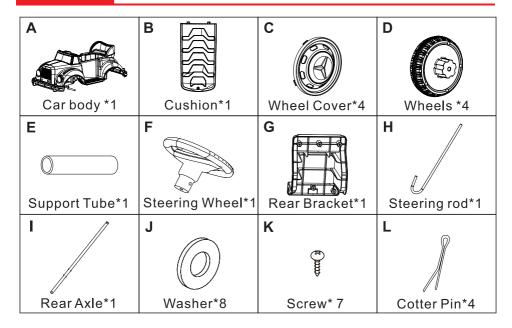

If you have any questions, please contact our customer care center.
Our contact details are below:



0044-800-240-4004




enquiries@mhstar.co.uk

IMPORTER ADDRESS: MH STAR UK LTD Unit 27, Perivale Park, Horsenden lane South Perivale, UB6 7RH MADE IN CHINA

Product Assembly

Rear Bracket Installation


Turn the car body over, fix the bracket in the car body with 6 screws.




Rear Axle Installation


First put one washer on the rear axle, then pass the rear axle through the body from the right side.

Put the second washer and support tube into the rear axle from the left side.






Rear Wheels Installation
Slide a washer and rear wheel from the left side onto the rear axle, then secure it with a washer and cotter pin. Repeat on the other side. Snap the wheel cover onto each wheel.




✓ Steering Rod Installation

Side lay the vehicle, slide the steering rod through the car body and hook in onto the front axle.

Make sure the steering rod is routed all the way into the steering wheel mount.





Product Assembly


Steering Wheel Installation

Remove the bolt from the steering wheel, slide on the steering wheel mount, and then replace the bolt to secure the steering wheel to the mount.







Front Wheels Installation
Slide the wheel onto the front axle, then secure it with a washer and a cotter pin. Repeat on the other side. Snap the wheel cover onto each wheel.





Cushion Installation
Install the cushion and secure it with the screw.





Mercedes-Benz Logo Installation
Install the logo in the relative place as the picture shown.





