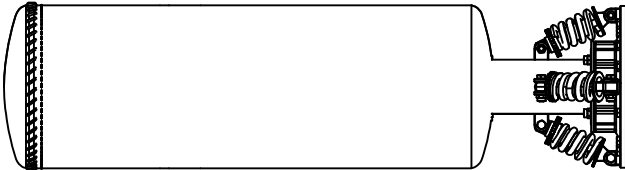
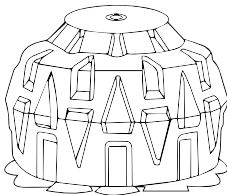
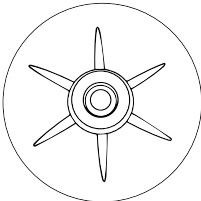
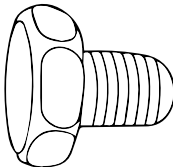
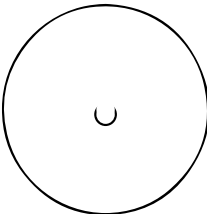



# **Boxing sandbag installation manual**


READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

**ASSEMBLY INSTRUCTION**


serial number	name	picture	quantity
1	sandbag		1
2	base		1
3	suction cup		12
4	screw		12
5	cover		1
6	wrench		1

# installation steps


1. After receiving the two packages, first open the package and take out the base put it on the ground. At the same time, take out the attached screws, suction cup, wrench and cover.

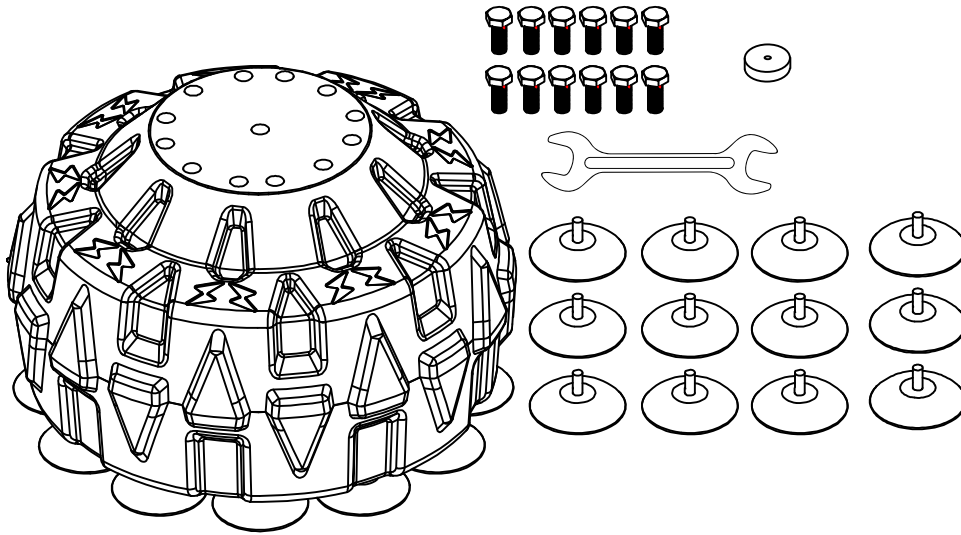


2. Take out 12 suction cups, turn the bottom of the bucket up, align the screws with the holes below the base, and tighten them one by one

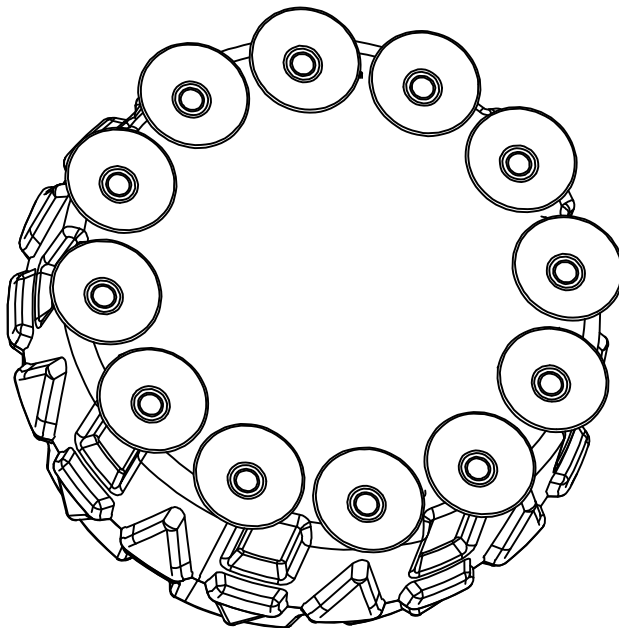


3、turn the base upside down, there is a sand injection hole with a diameter of 3 cm at the bottom, add sand and water to two thirds of the sand bag, and close the lid.

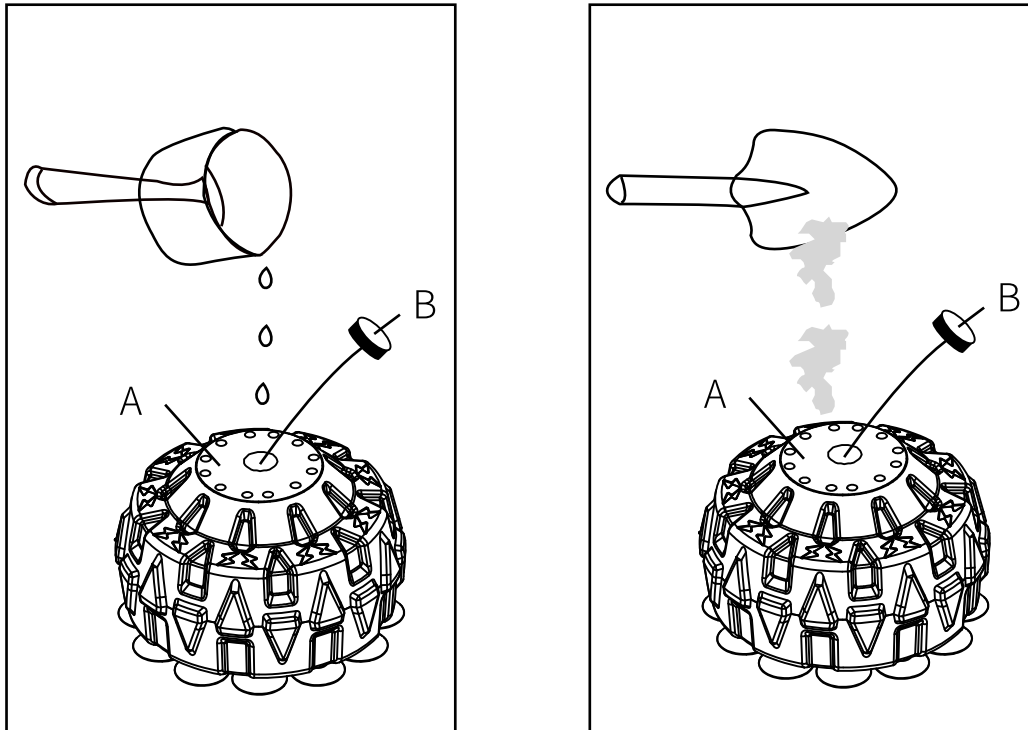

4、After installing 12 suction cups, Next take out the 12 screws placed on the cylindrical base and fasten the two, as shown in the figure below.

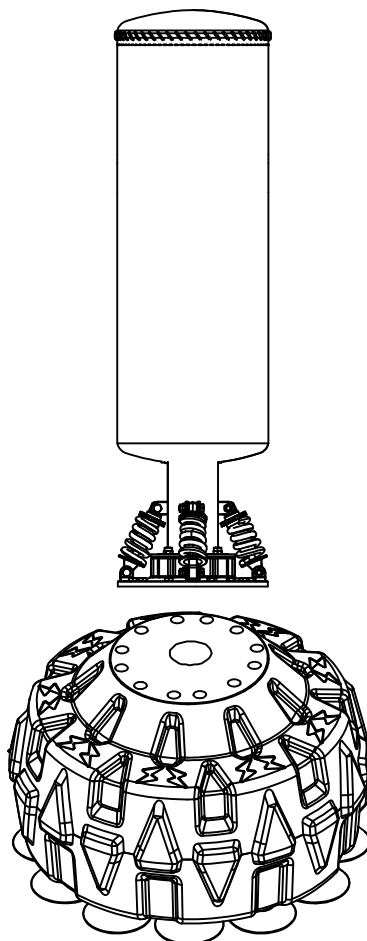

5. Connect the sandbag to the base with 12 screws, and tighten them one by one with an installation wrench.

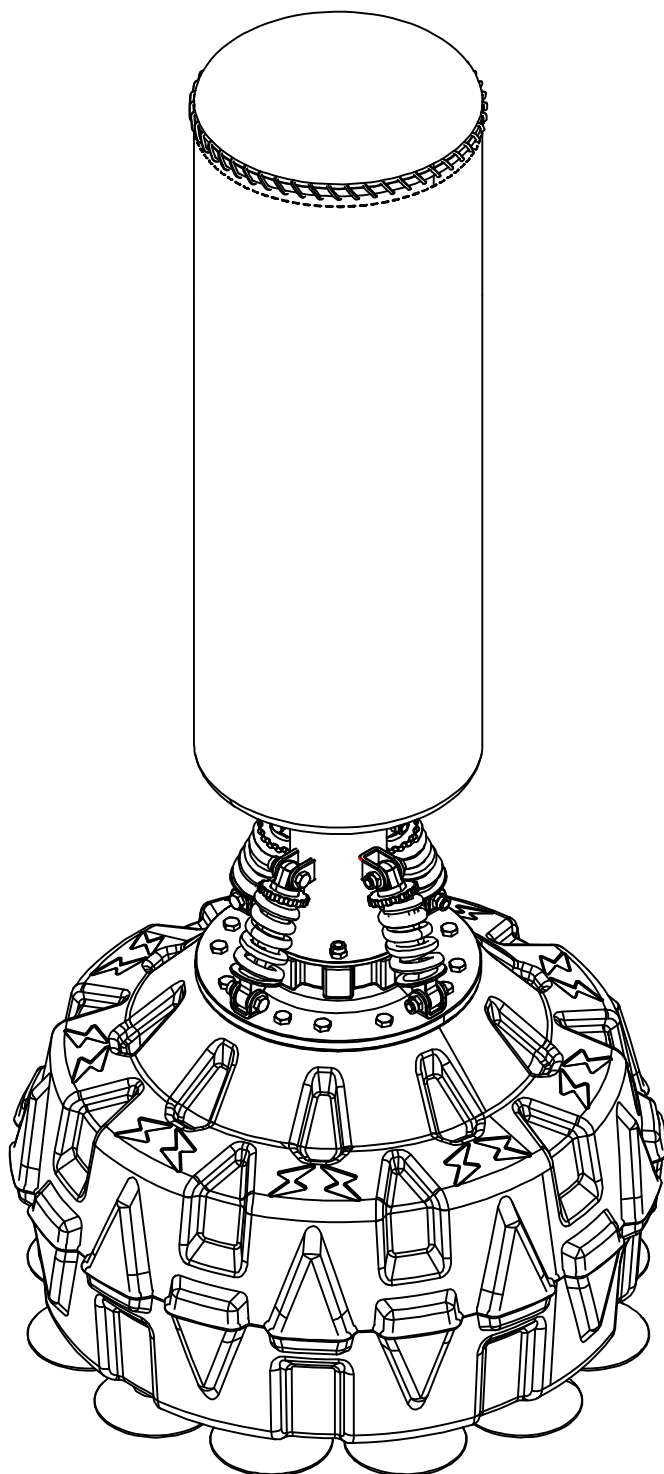



001-877-644-9366  
customerservice@aosom.com



001-855-537-6088  
customerservice@aosom.ca



0044-800-240-4004  
enquiries@mhstar.co.uk



0049-(0)40-88307530  
service@aosom.de



0033-1-84166106  
contact@aosom.fr



0034-931294512  
atencioncliente@aosom.es



0039-0249471447  
clienti@aosom.it