


Soozier

INadf002V02_CA


A91-054

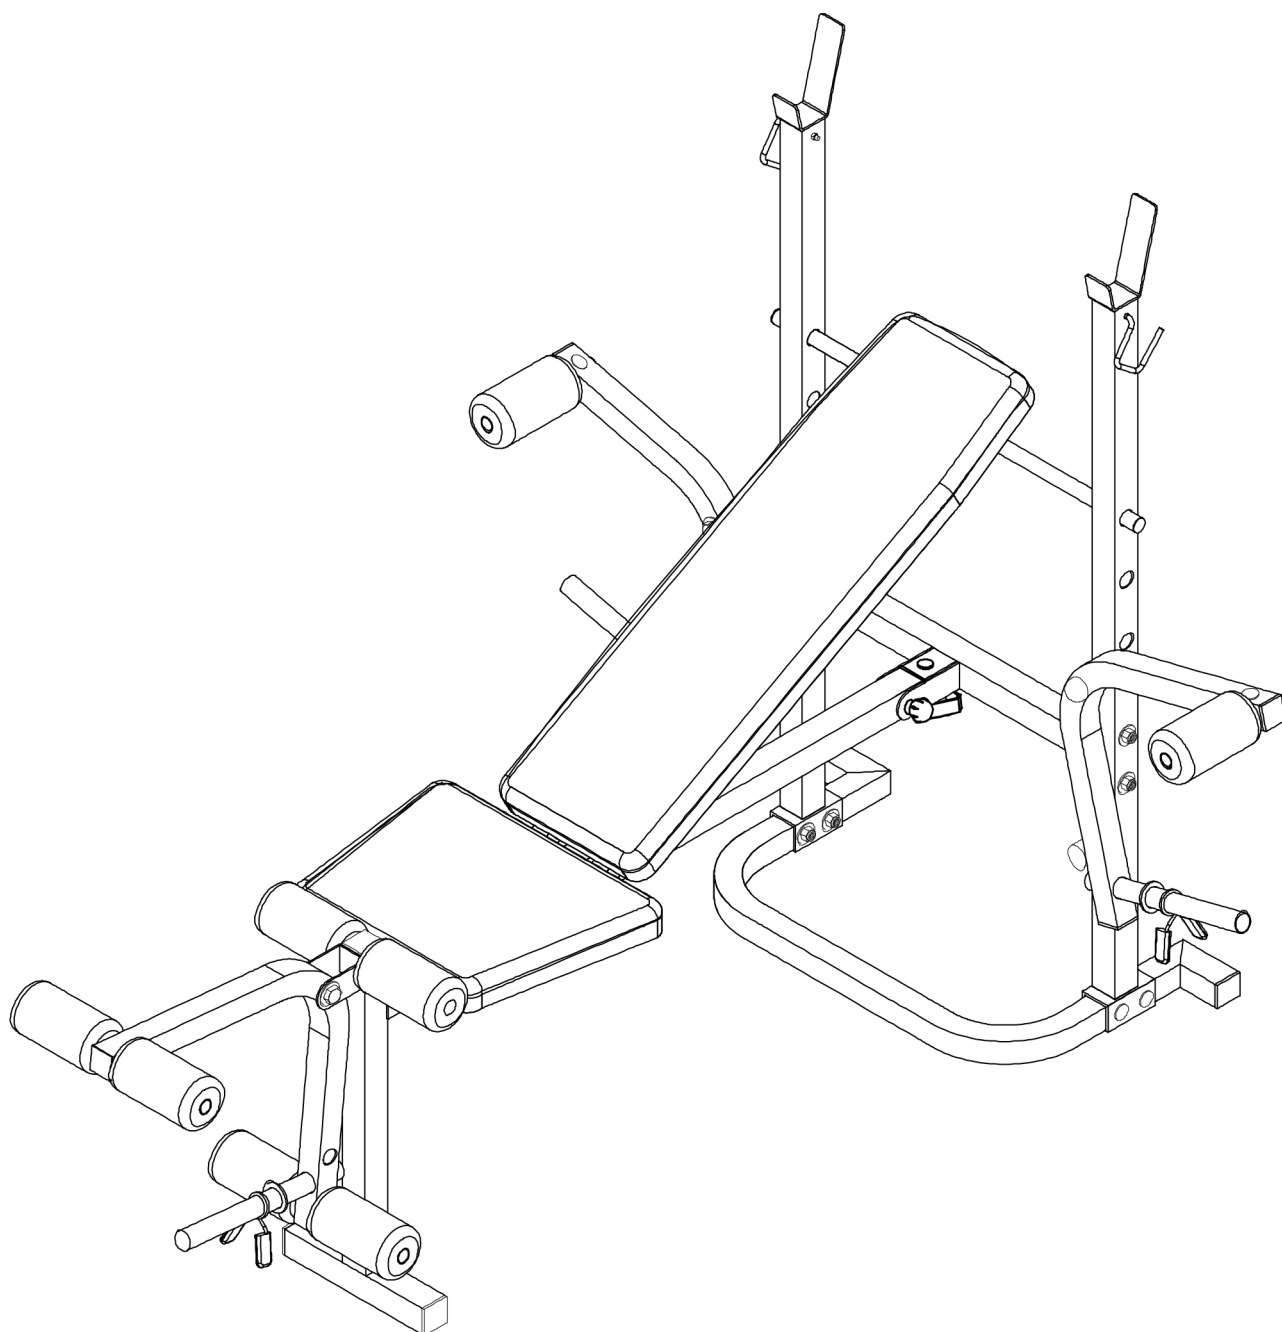

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL


PART LIST:

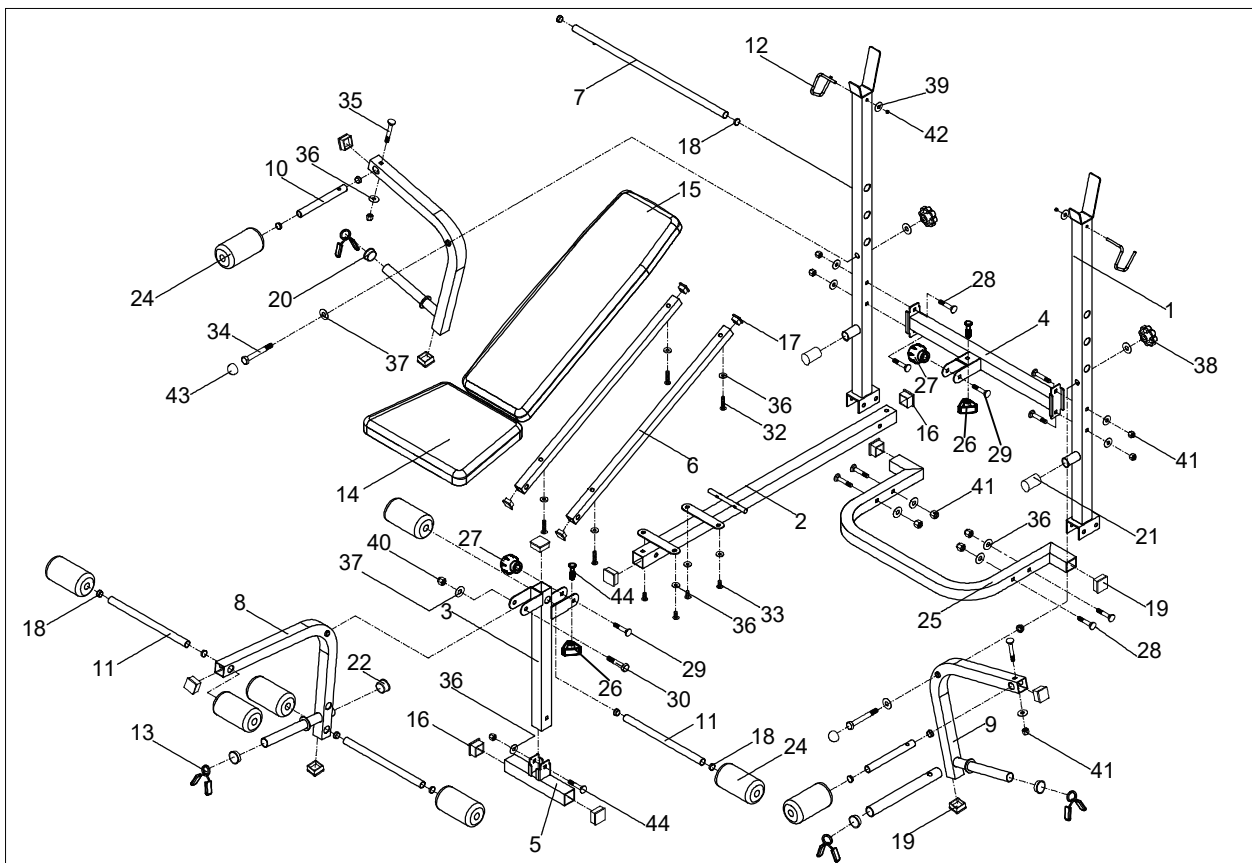

No.	DESCRIPTION	NUMBER
1	Upright	2x
2	Main beam	1x
3	Front upright	1x
4	Cross beam	1x
5	Front Stabilizer	1x
6	Pivot Bar	2x
7	Cross bar	1x
8	Leg extension bracket	1x
9	Fly arm	2x
10	Foam tube	2x
11	Foam tube	3x
12	Fix locking	2x
13	Spring locking	3x
14	Seat	1x
15	Backrest	1x
16	End cap	5x
17	End cap	4x
18	End cap	10x
19	End cap	8x
20	End cap	7x

21	Protect cap	2x
22	Protect cap	1x
24	Foam	8x
25	“U” Rear stabilizer	1x
26	Knob	2x
27	Knob	2x
28	Screw 8 x 50 mm	8x
29	Screw 10 x 60 mm	2x
30	Screw 10 x 60 mm	1x
32	Screw 8 x 40 mm	4x
33	Screw 8 x 20 mm	4x
34	Screw 10 x 120 mm	2x
35	Screw 8 x 45 mm	2x
36	Washer 8 x 16 x 1,5 mm	19x
37	Washer 10 x 20 x 2 mm	5x
38	Knob	2x
39	Washer 6 x 16 x 1 mm	2 x
40	Nut M10	1x
41	Nut M8	11x
42	Nut M6	2x
43	Protect cap	2x
44	Screw 8 x 55 mm	3x


ASSEMBLY

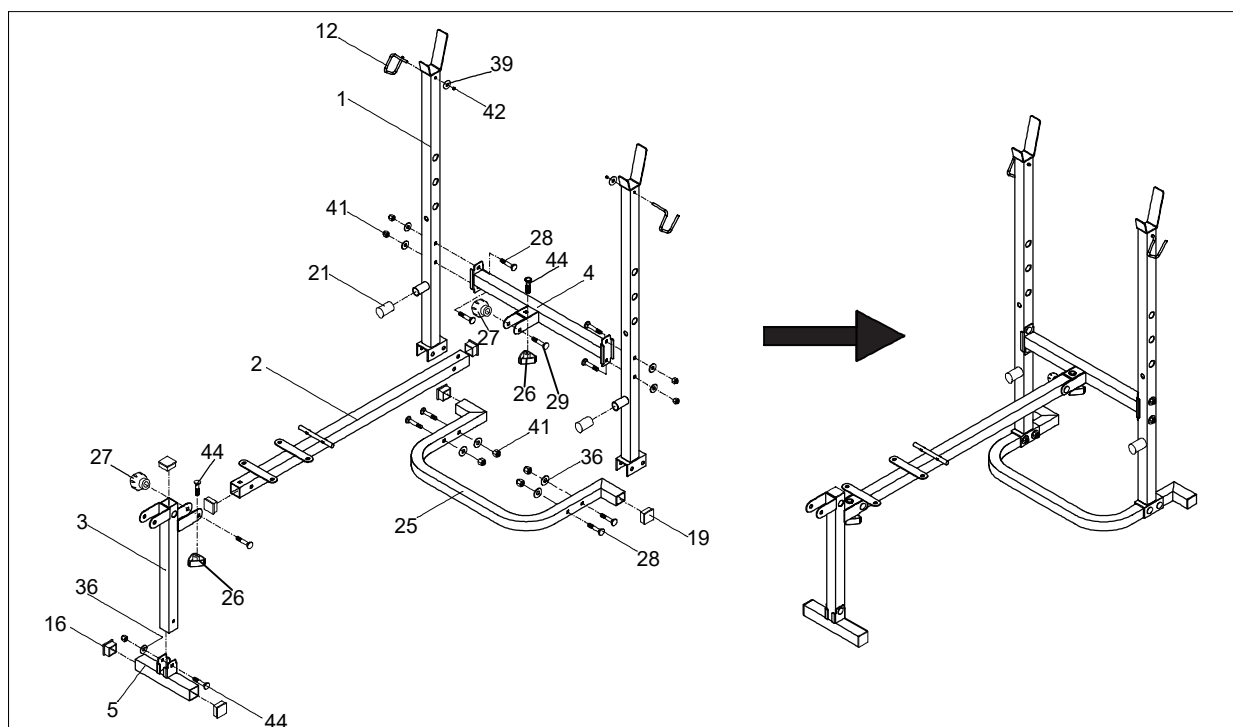

STEP 1


Fix the two uprights (1) to the “U” rear stabilizer (25) use 4 sets of screw (28), washer (36) and nut (41), connect the cross beam (4) to the two uprights (1) use 4 sets of screw (28), washer (36) and nut (41), attach the main beam (2) to the center of the cross beam (4) use one set of screw (29), knob (27) and one set of screw (44), knob (26).

Then fix the front upright (3) to the front stabilizer (5) use one set of screw (44), washer (36) and nut (41), and connect the front upright (3) to the main beam (2) use one set of screw (29), knob (27) and one set of screw (44), knob (26).

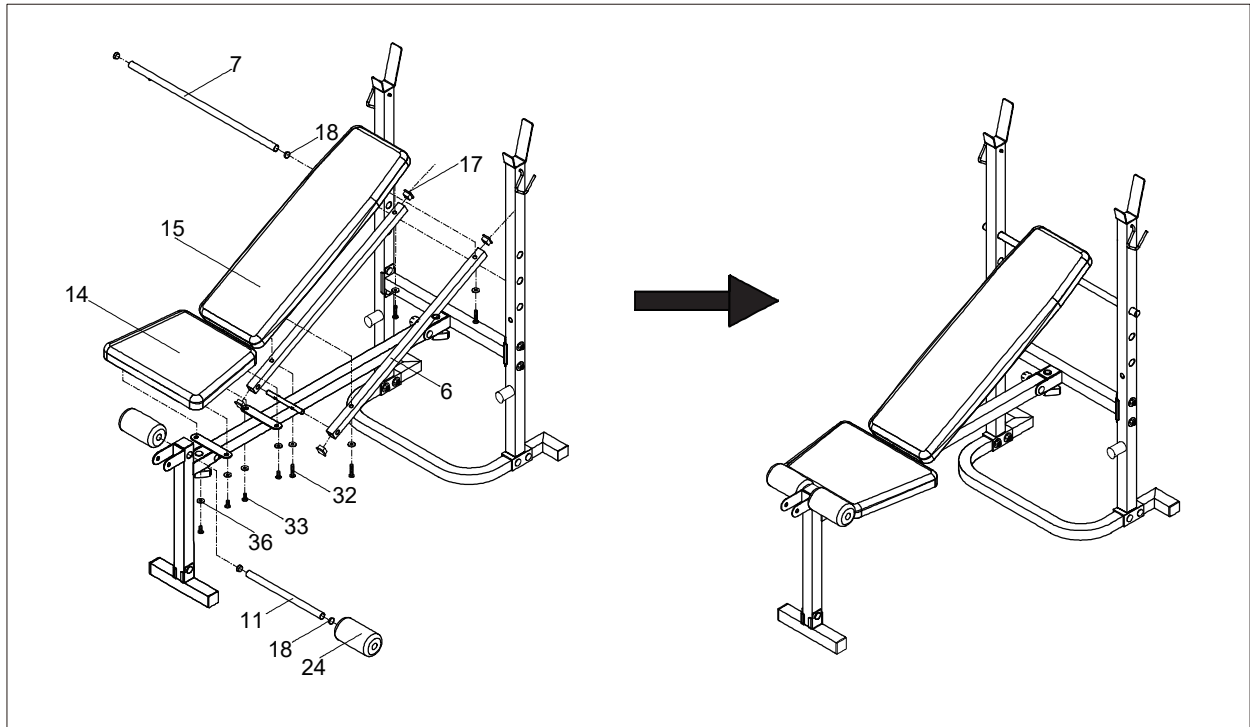

STEP 2

Insert the cross bar (7) to the hole of the two uprights (1), attach the pivot bar (6) to the main beam (2), fix the backrest (15) on the pivot bar (6) use 4 sets of screw (32) and washer (36), then fix the seat (14) on the main beam (2) use 4 sets of screw (33) and washer (36), insert the foam tube (26) to the front upright (3) and attach the foam (27) to the foam tube (26).

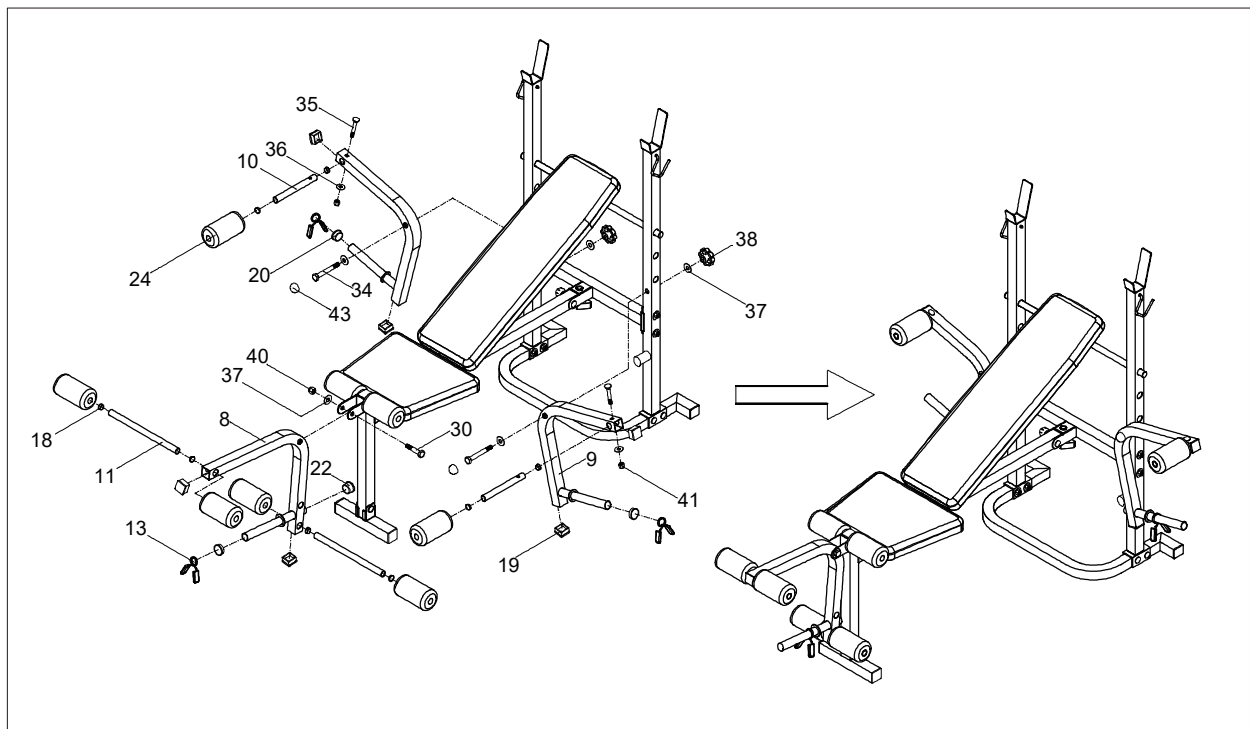


STEP 3

Attach the foam (24) to the foam tube (10), insert the foam tube to the fly arm (9) use one set of screw (35), washer (36) and nut (41), then fix the two fly arms to the two uprights (1) use 2 sets of screw (34), washer (37), and knob (38), and attach the protect cap (43) on the screw (30).


Fix the leg extension bracket (8) to the front upright (3) use one set of Screw (30), washer (37) and nut (40), insert the two foam tubes (11) to the leg extension bracket (8), then attach the foam (24) to the foam tube (11).






Liste de pièces:

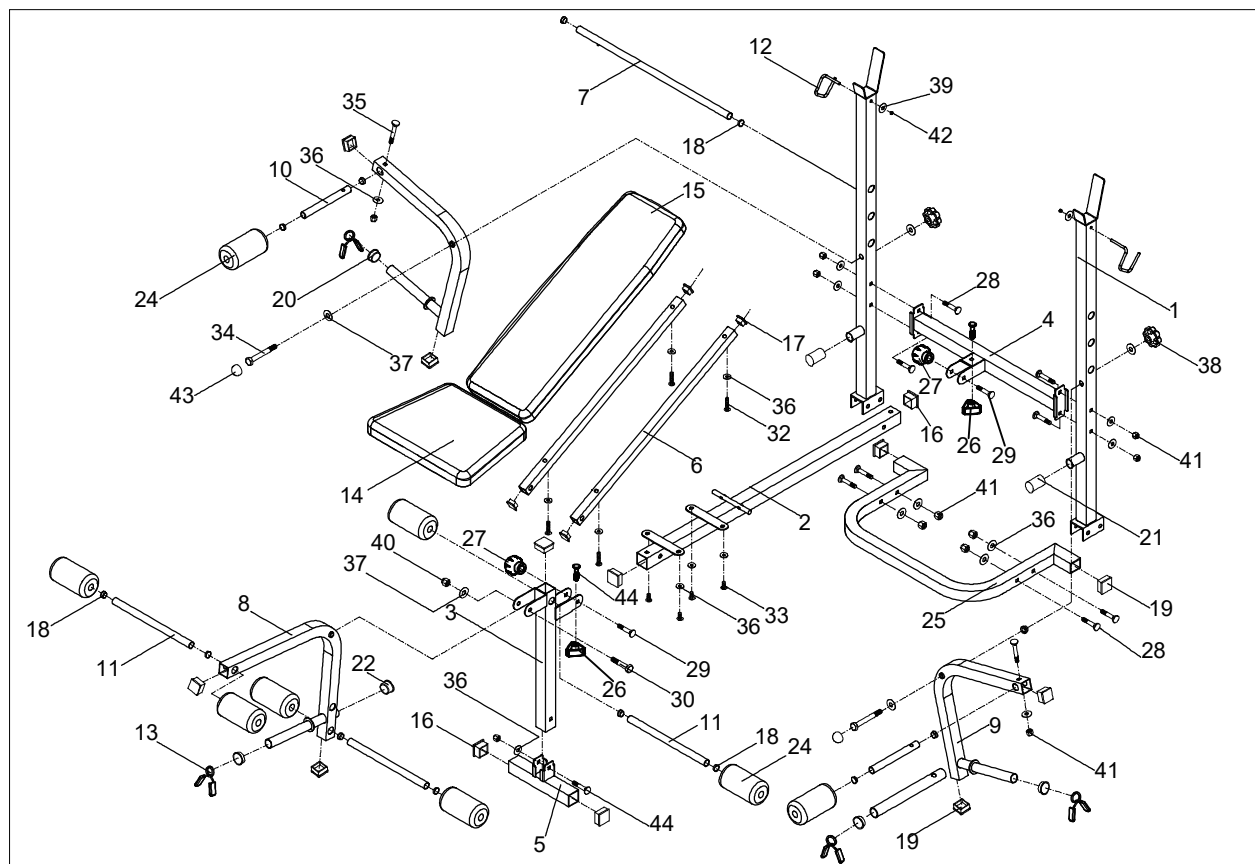


No.	La description	Numéro
1	Vertical	2x
2	Faisceau principal	1x
3	Support avant	1x
4	Barre transversale	1x
5	Stabilisation avant	1x
6	Barre pivot	2x
7	Barre transversale	1x
8	Support d'extension de jambe	1x
9	Bras de mouche	2x
10	Tube en mousse	2x
11	Tube en mousse	3x
12	Fixer le verrouillage	2x
13	Verrouillage à ressort	3x
14	Siège	1x
15	Dossier	1x
16	Capuchon d'extrémité	5x
17	Capuchon d'extrémité	4x
18	Capuchon d'extrémité	10x
19	Capuchon d'extrémité	8x

20	Capuchon d'extrémité	7x
21	Capuchon de protection	2x
22	Capuchon de protection	1x
24	Mousse	8x
25	"U" stabilisateur arrière	1x
26	bouton	2x
27	bouton	2x
28	Vis 8 x 50 mm	8x
29	Vis 10 x 60 mm	2x
30	Vis 10 x 60 mm	1x
32	Vis 8 x 40 mm	4x
33	Vis 8 x 20 mm	4x
34	Vis 10 x 120 mm	2x
35	Vis 8 x 45 mm	2x
36	Rondelle 8x16x1,5mm	19x
37	Rondelle 10 x 20 x 2 mm	5x
38	Bouton	2x
39	Rondelle 6 x 16 x 1 mm	2x
40	écrou M10	1x
41	écrou M8	11x
42	écrou M6	2x
43	Capuchon de protection	2x
44	Vis 8 x 55 mm	3x

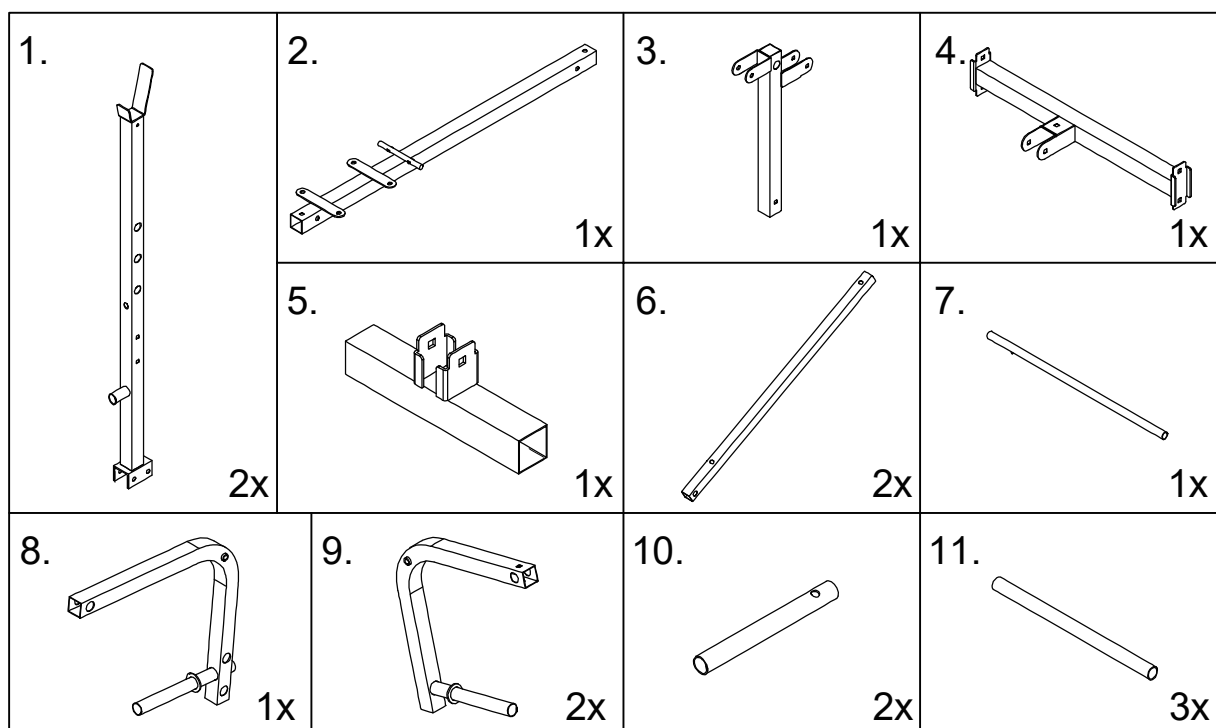

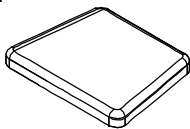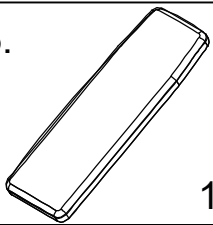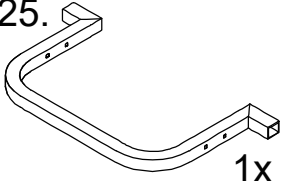
12.  2x	13.  3x	14.  1x	15.  1x
16.  Pre Assembled 5x	17.  Pre Assembled 4x	18.  Pre Assembled 10x	19.  Pre Assembled 8x
20.  Pre Assembled 7x	21.  Pre Assembled 2x	22.  Pre Assembled 1x	
24.  8x	25.  1x	26.  2x	27.  2x
28.  M8x50 9x	29.  M10x60 2x	30.  M10x60 1x	32.  M8x40 4x
33.  M8x20 4x	34.  M10x120 2x	35.  M8x45 2x	36.  M8 19x
37.  M10 5x	38.  2x	39.  M6 2x	40.  M10 1x
41.  M8 11x	42.  M6 2x	43.  2x	44.  M8x55 3x

Assemblée

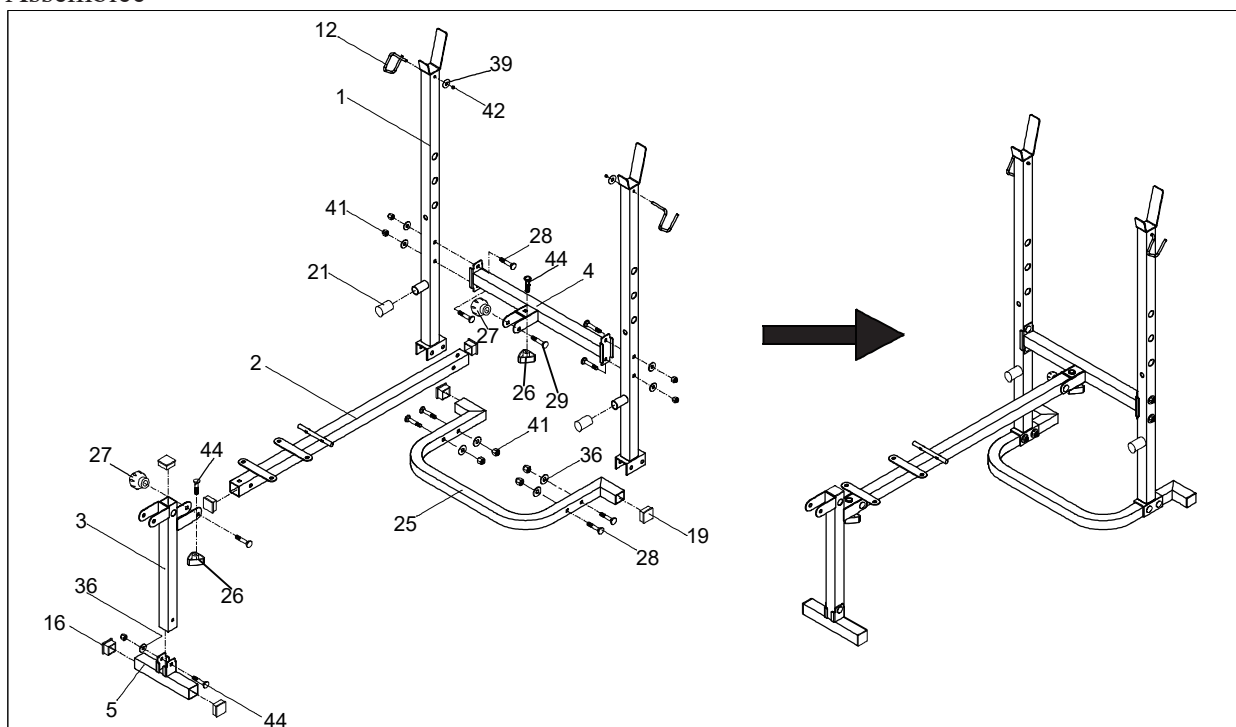


ÉTAPE 1

Fixez les deux montants (1) au stabilisateur arrière "U" (25) utilisez 4 ensembles de vis (28), la rondelle (36) et l'écrou (41), reliez la traverse (4) aux deux montants (1) Utilisez 4 ensembles de vis (28), rondelle (36) et écrou (41), fixer le faisceau principal (2) au centre de la traverse (4) utiliser un jeu de vis (29), le bouton (27) et Un jeu de vis (44), le bouton (26). Ensuite, fixez le montant avant (3) au stabilisateur avant (5) utilisez un jeu de vis (44), la rondelle (36) et l'écrou (41), et connectez le support avant (3) à l'utilisation du faisceau principal (2) Un ensemble de vis (29), le bouton (27) et un jeu de vis (44), le bouton (26).

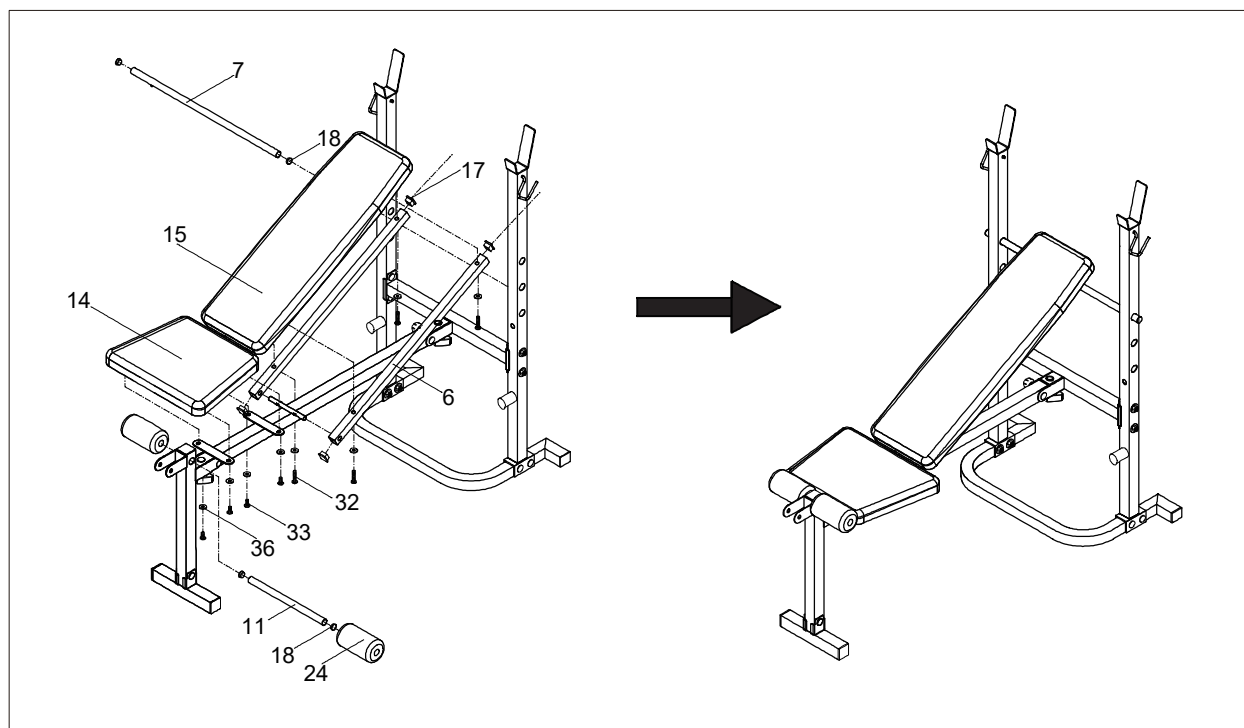

ÉTAPE 2

Insérez la barre transversale (7) sur le trou des deux montants (1), fixez la barre de pivotement (6) au faisceau principal (2), fixez le dossier (15) sur la barre de pivotement (6), utilisez 4 ensembles de vis (32) et l'écrou (36), puis fixez le siège (14) sur le faisceau principal (2) utilisez 4 ensembles de vis (33) et la rondelle (36), Insérer le tube en mousse (26) sur le montant avant (3) et attacher la mousse (27) au tube en mousse (26).

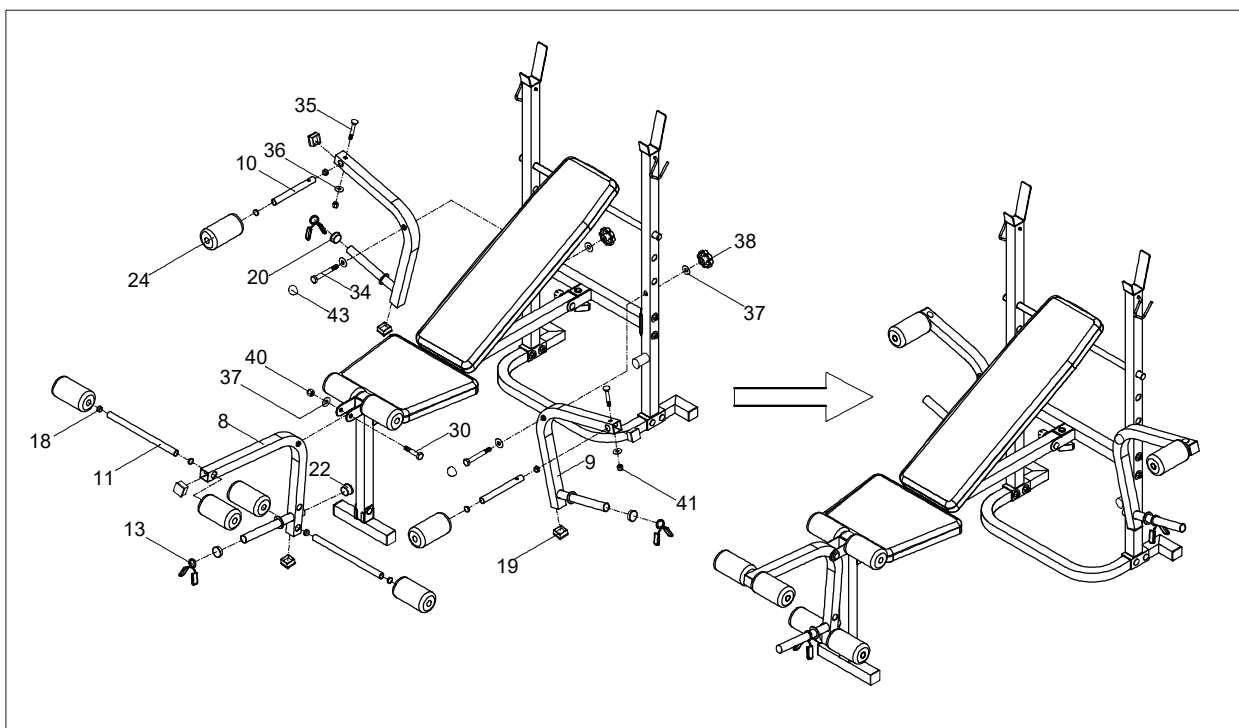

ÉTAPE 3

Fixez la mousse (24) au tube de mousse (10), insérez le tube de mousse dans le bras de la mouche (9) utilisez un jeu de vis (35), la rondelle (36) et l'écrou (41), puis fixez les deux bras de mouche Sur les deux montants (1), utilisez 2 jeux de vis (34), la rondelle (37) et le bouton (38) et fixez le capuchon de protection (43) sur la vis (30).

Fixez le support d'extension de jambe (8) au montant avant (3) utilisez un ensemble de vis (30), l'écrou (40) et la rondelle (37), insérez les deux tubes en mousse (11) sur le support d'extension de jambe (8) , Puis attachez la mousse (24) au tube de mousse (11).