





INag060_CA

C20-035


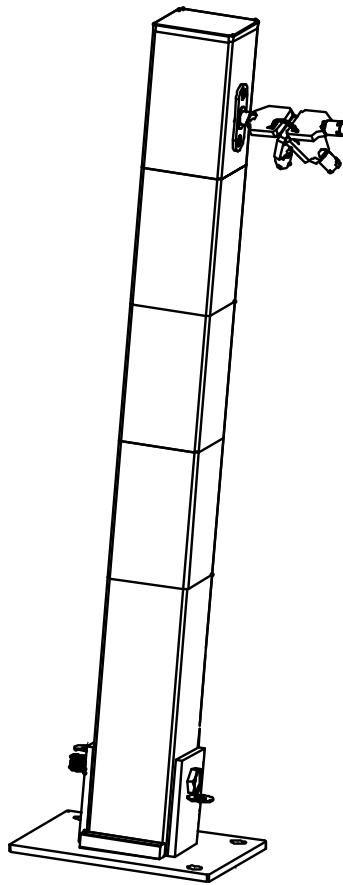


READ AND SAVE THESE INSTRUCTIONS FOR FUTURE USE

ASSEMBLY INSTRUCTION

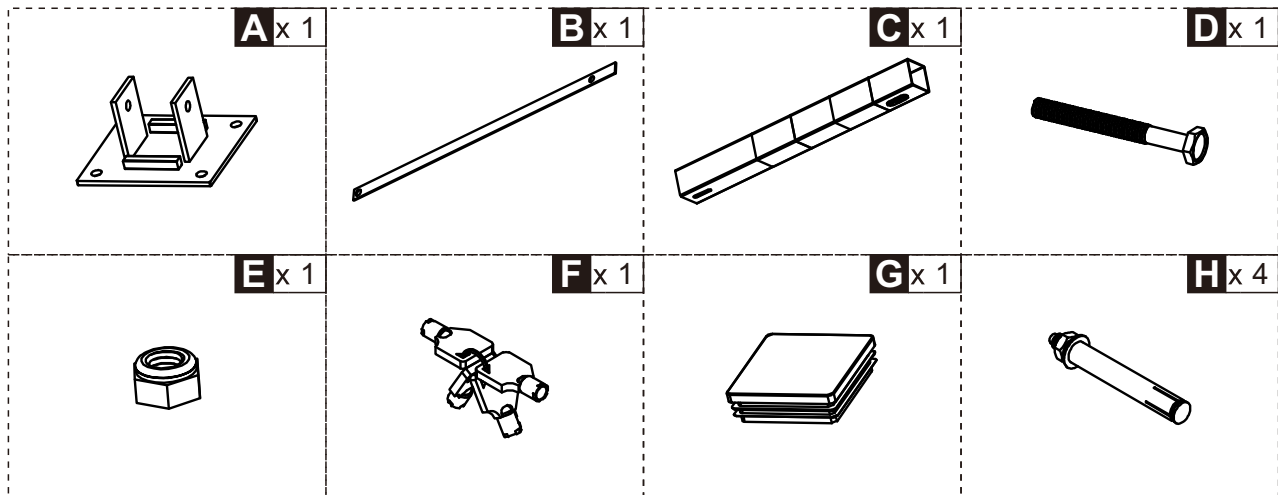

TOOLS RECOMMENDED

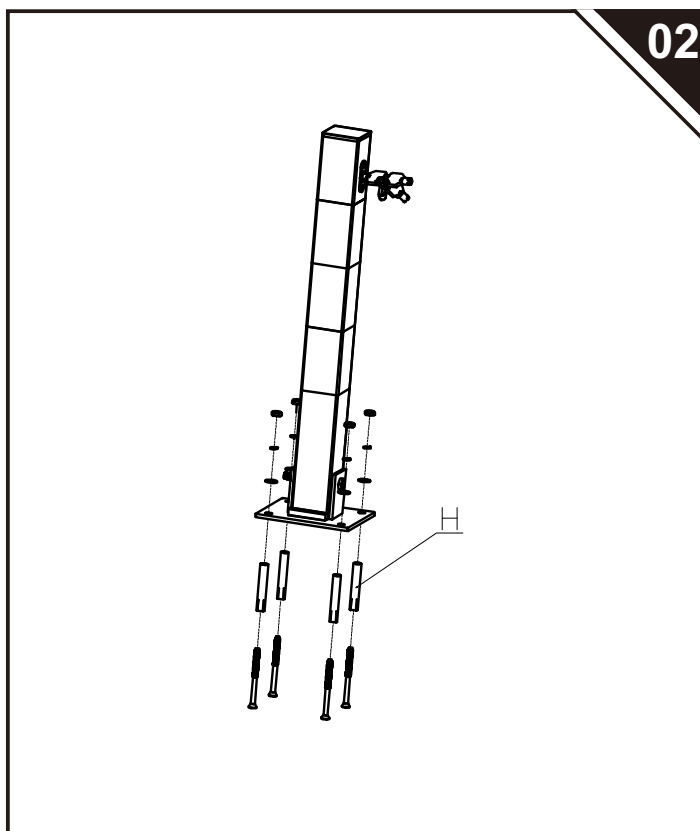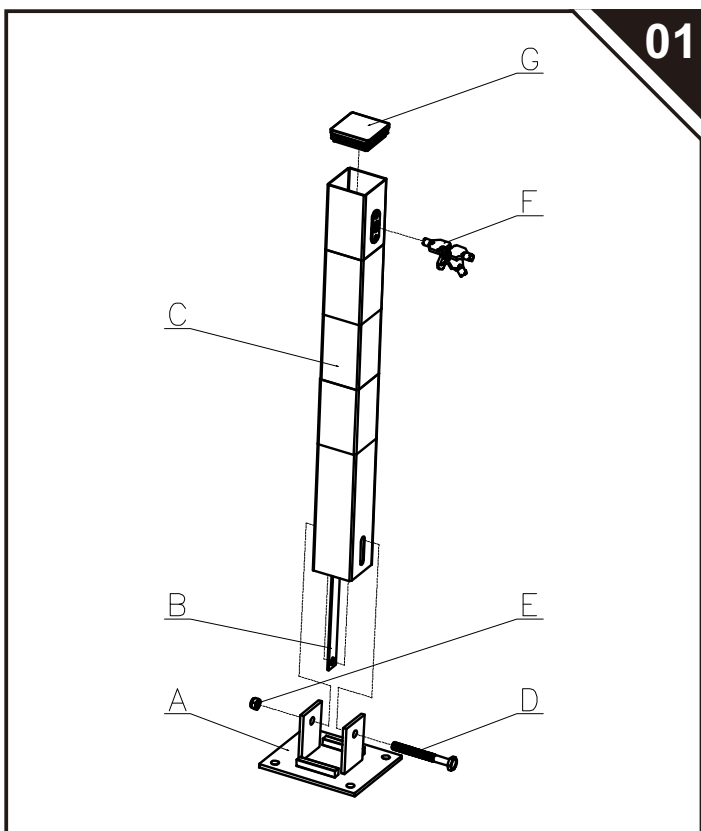


How to Install :

1. Dig holes in the ground by drilling firstly
2. Put the expansion and screw on the hole
3. Use the wrench to tighten the screw

Comment installer:

1. D'abord, creusez des trous dans le sol en forant d'abord
2. Puis mettez l'expansion et vissez le trou
3. Utilisez la clé pour serrer la vis

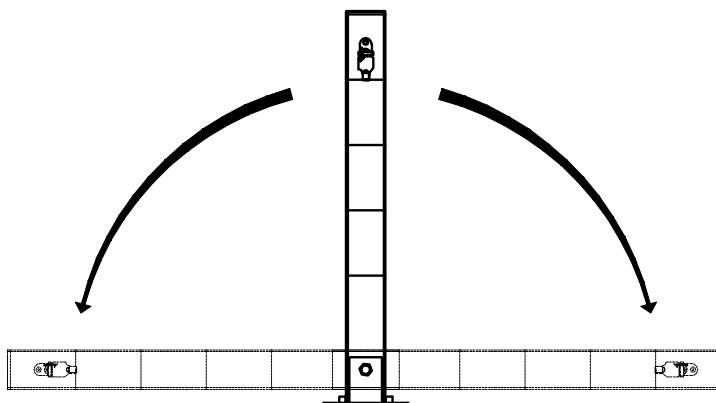



US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it