


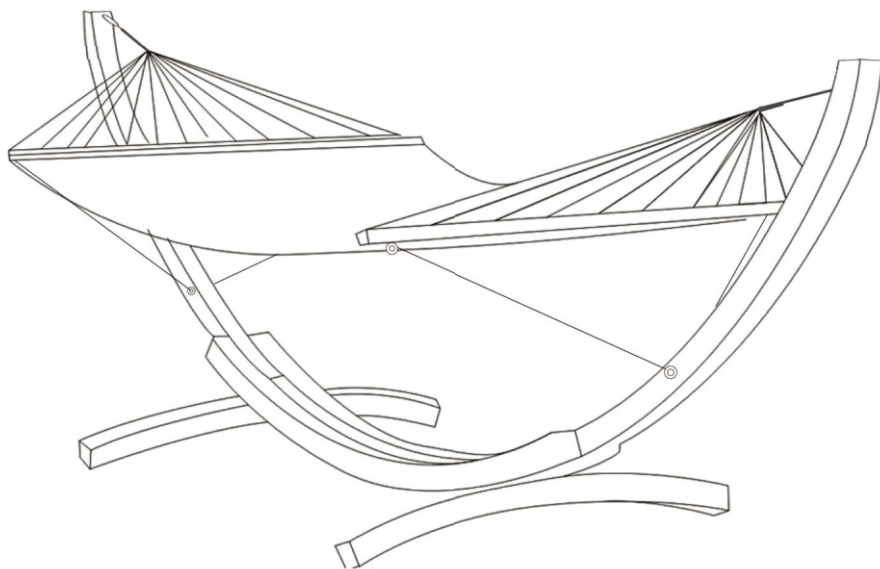




















INba011V01\_GL




5662-0119\_84A-129





**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**


**ASSEMBLY INSTRUCTION**

	Ax2		Px2
	Bx2		Qx4
	Cx2		Rx4
 <b>M10*120MM</b>	Dx4		x1
	Ex13		Tx1
	Fx11		
	Gx2		
	Hx2		
 <b>M10*195MM</b>	Hx4		
 <b>M10*65MM</b>	Kx2		
 <b>M10*80MM</b>	Lx2		
	Mx4		
	Nx5		
	Ox4		

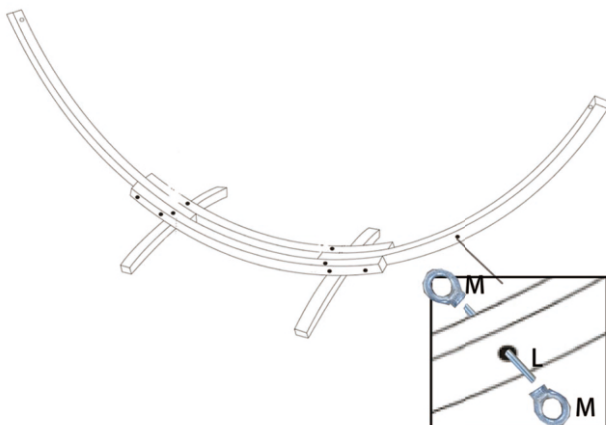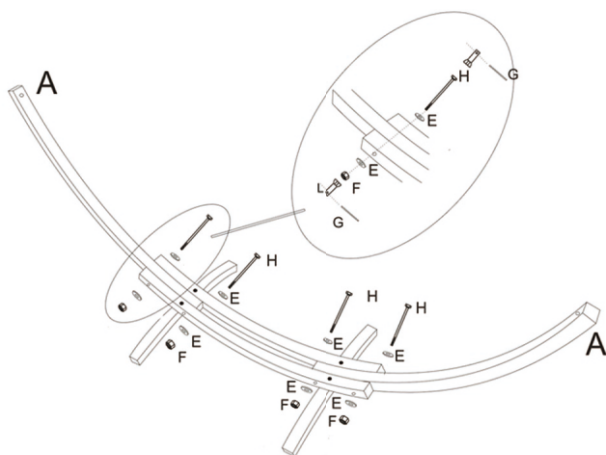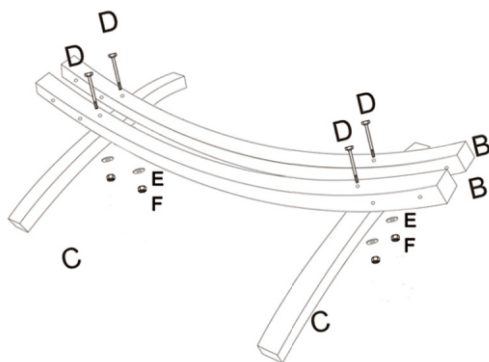

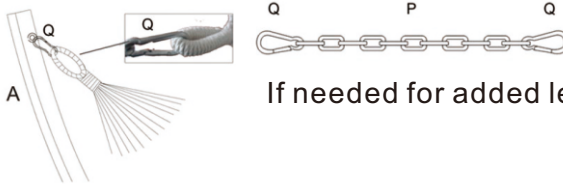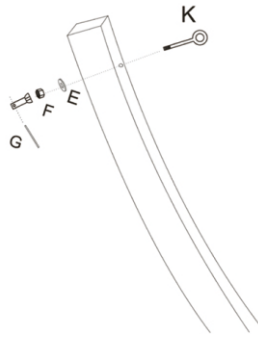

If needed for added length.

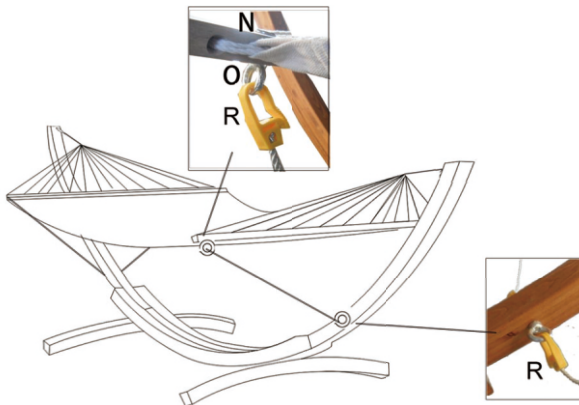

## NOTE

1. Bolts for all the steps should not be tightened all the way until all bolts are fully put in, otherwise the holes will not line up. Once all in place then tighten bolts.
2. Diagrams showing bolts "D" and washers "E" for part "B" + "C". Tighten them well otherwise part "C" will crack if not secured.
3. Two or more people for assembly.