## **Outsunny** Assembly Instructions Adirondack Chair With Ottoman

## ■ Parts list Seat (A) \_\_\_\_\_ 1pc Right Leg (B) \_1pc Left Leg (C) \_1pc Left Arm (D) 1pc Right Arm (E) -1pc Seat-back (F) -1pc Ottoman(H) -1pc Ottoman Legs(I) 2pcs Bolt-and-nut-sets(J) 16pcs Screws (K) 4 pcs

## ■ Remarks

- ⚠ We highly recommend wearing safety goggles during assembly.
- ⚠ Unpack all parts on clean soft surface to prevent scratching of paint.
- ⚠ Do not completely tighten screws until the chair is fully assembled on a level surface.

## ■ How to assemble

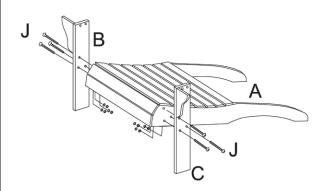


Fig. 1
Attach Right Leg (B) and
Left Leg (C) to the Seat (A)
using 6pcs Bolt-and-nut-sets (J).

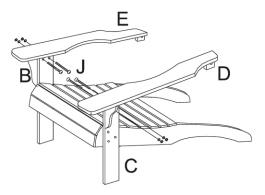


Fig. 2
Attach the front of the Left Arm
(D) to the Left Leg (C) using 2pcs
Bolt-and- nut-sets (J). Attach the
front of the Right Arm (E) to the
Right Leg (B) using 2pcs
Bolt-and-nut-sets (J).

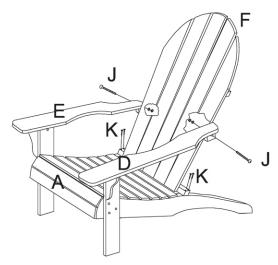


Fig. 3
Attach the back of Left Arm (D) and Right Arm (E) to the Seat-back (F) using 2pcs
Bolt-and-nut-sets (J). Attach the bottom of Seat Back (F) to the back of the Seat (A) using 4pcs Screws (K).



Fig. 4
Make sure all Bolt-nut-sets and all screws are tight.
The chair assembly is complete.

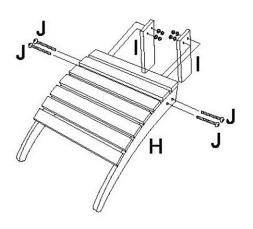


Fig. 5
Attached the Ottoman Legs(I)
on the Ottoman(H) with 4 pcs
Bolt-and-nut-sets(J) as shown
in Fig.5.



Fig. 6 The ottoman assembly is complete.



Made In China