


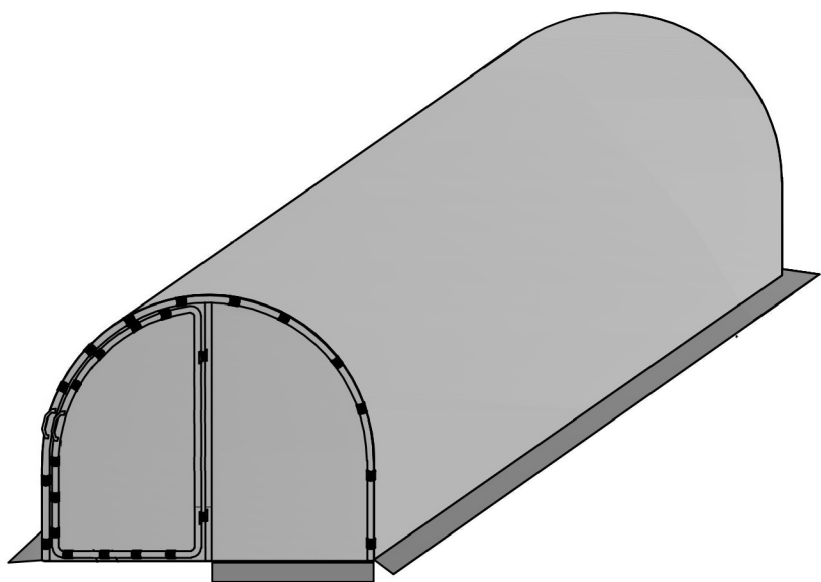

845-076GN 845-076WT



NO.	1	1a	2	3	4	5	6	7	8
									
	18PCS	2PCS	5PCS	5PCS	7PCS	7PCS	14PCS	4PCS	2PCS
NO.	9	10	11	11a	12	13	14	15	16
		 M6X58	 M6X30	 M6X40					
	2PCS	35PCS	14PCS	10PCS	59PCS	1PC	1PC	1PC	2PCS



NO.	A	B	C	D	E	F	G	H	I
									
	2PCS	2PCS	2PCS	2PCS	2PCS	2PCS	4PCS	2PCS	60PCS

Remark:


- 1) Please carefully follow the assembly instructions.
- 2) Loosely assemble complete frame, before tightening all bolts in final position
- 3) 2-3 person assembly together.
- 4) For maximum stability of your polytunnel, please dig trench to bury base frame poles and back fill covering flaps of plastic canopy

Remarque:


- Veuillez lire attentivement les instructions de montage
- Serrer légèrement toutes les vis de la structure, puis serrer au maximum toutes les vis.
- 2 ou 3 personnes nécessaires au montage
- Pour une stabilité maximum, veuillez creuser une tranchée autour de la serre, y-déposer le film plastique et recouvrir de terre

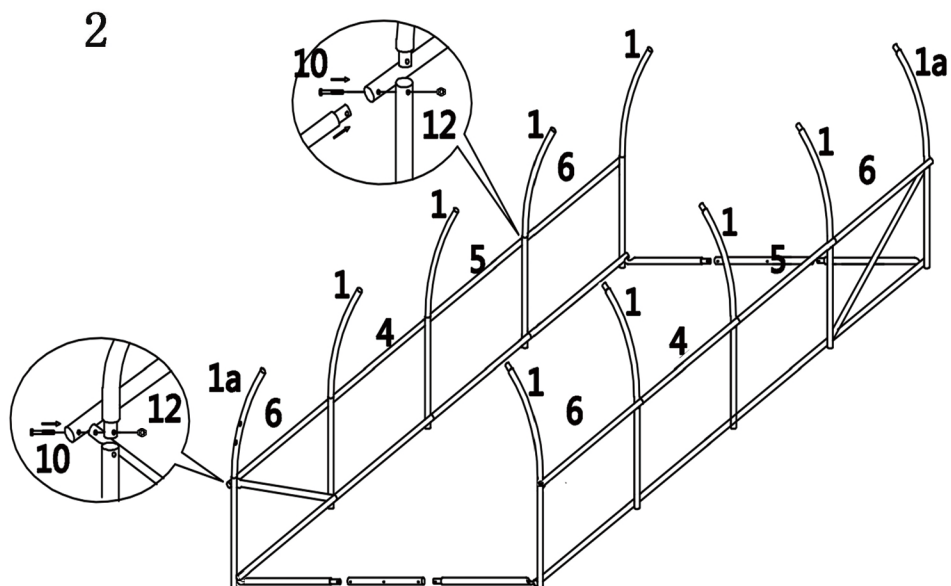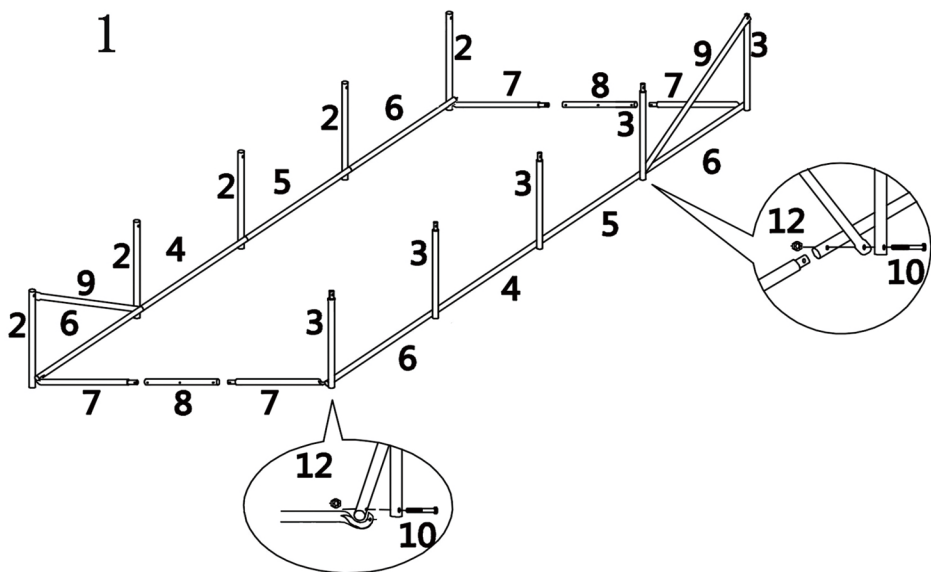


3

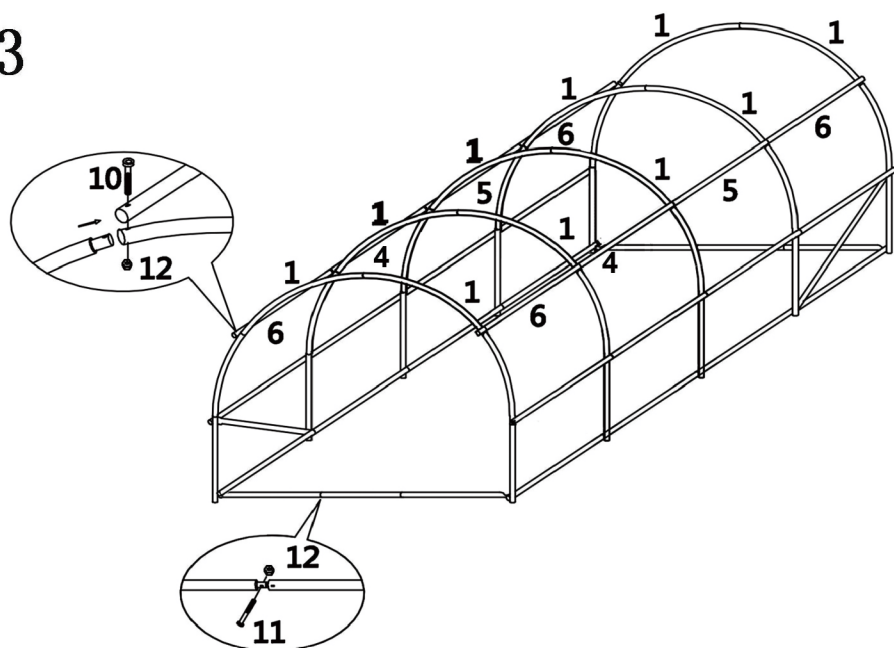

4

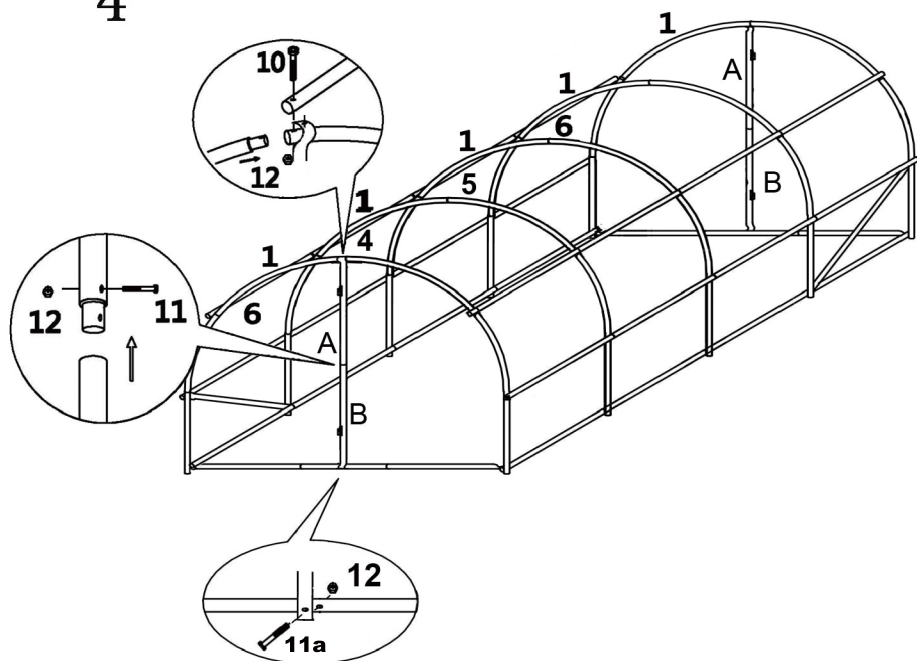

5

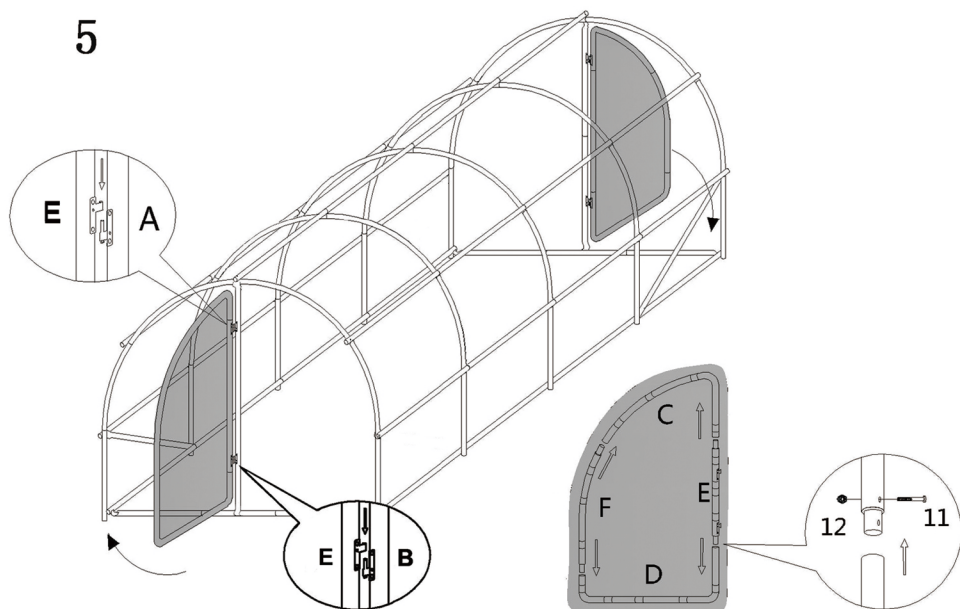

6

