





845-241

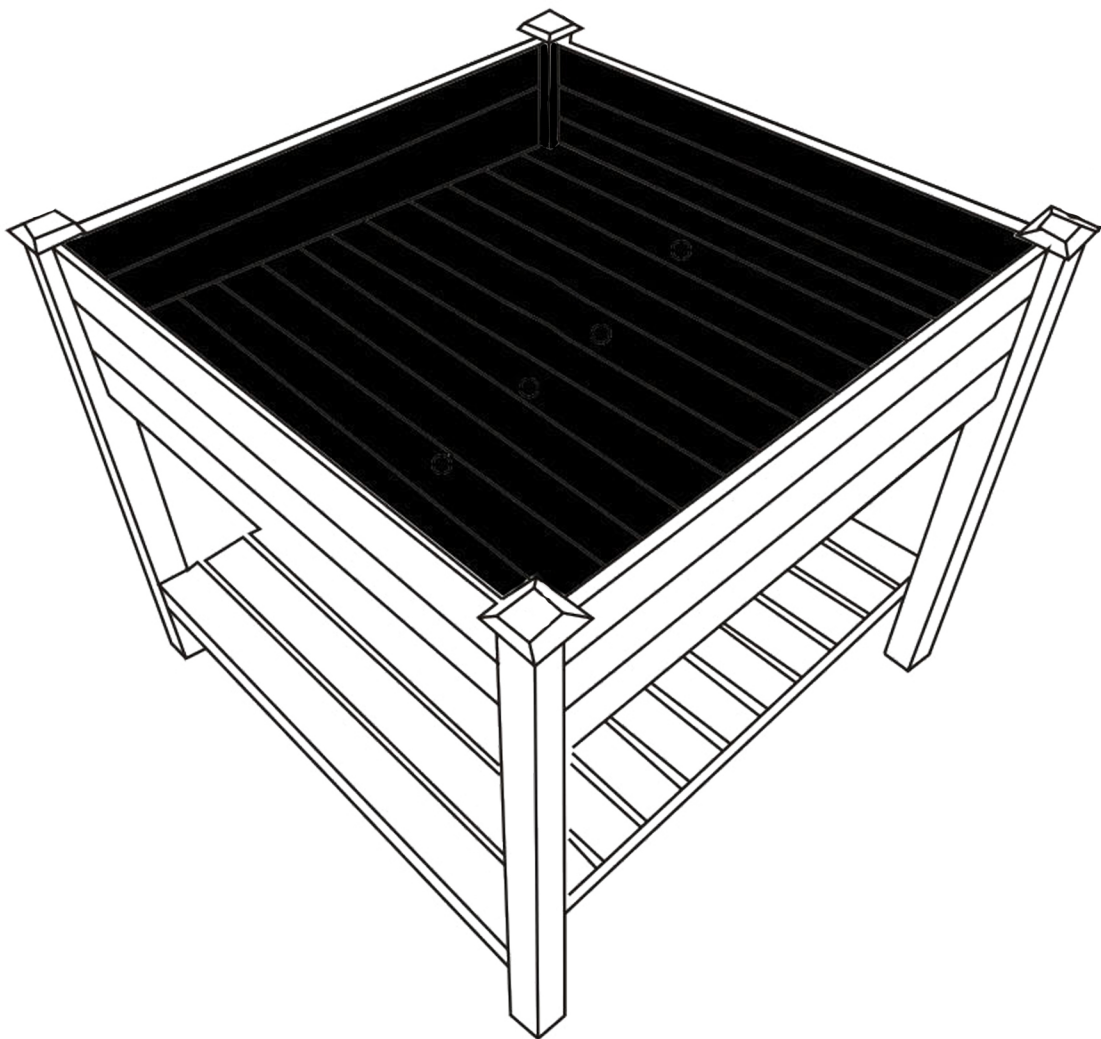


READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

ASSEMBLY INSTRUCTION

**A x 2**

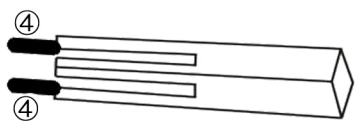


**F x 4**




**K x 2**



**B x 2**

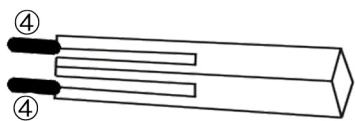

**G x 2**

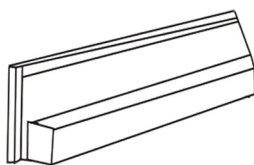


**L x 1**



**C x 2**




**H x 1**



**① x 8**



**D x 2**



**I x 4**




M3.5\*25


**② x 8**



**E x 4**

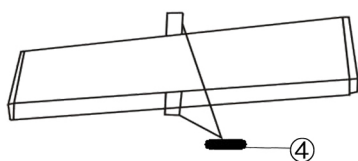

**J x 2**

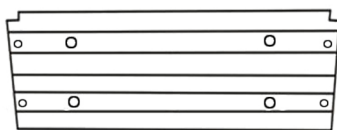

M3.5\*35

**③ x 4**



M6.0\*75

**④ x 16**




**C** x 2

**K** x 2

**②** x 8

**01**

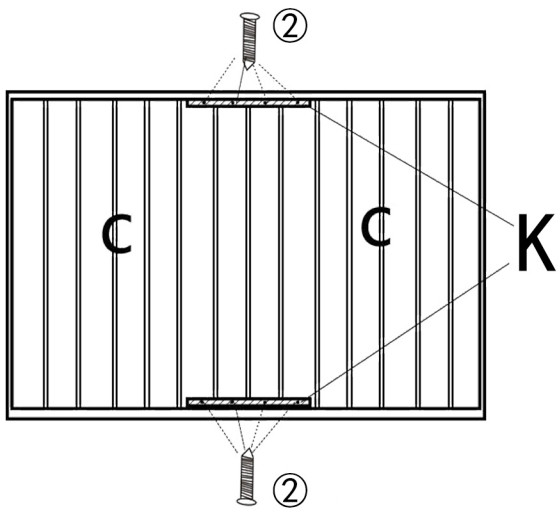


**A** x 2

**B** x 2

**③** x 4

**02**

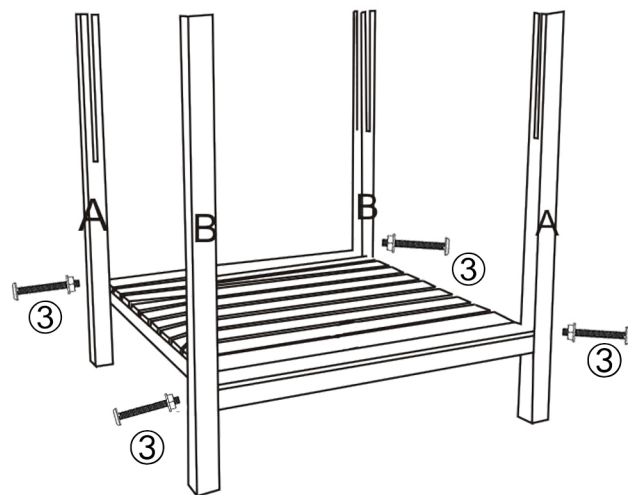


**D** x 1

**E** x 1

**F** x 1

**03**

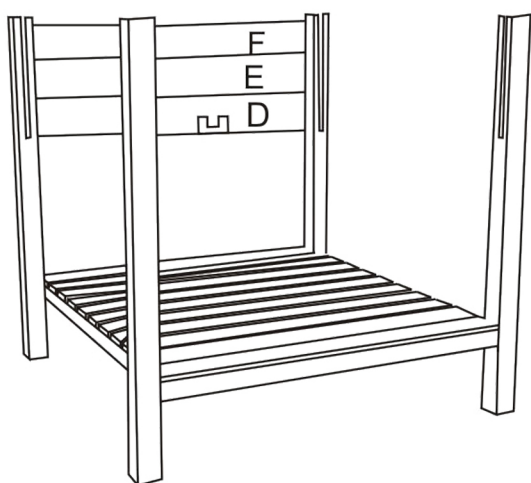


**E** x 1

**F** x 1

**G** x 1

**04**

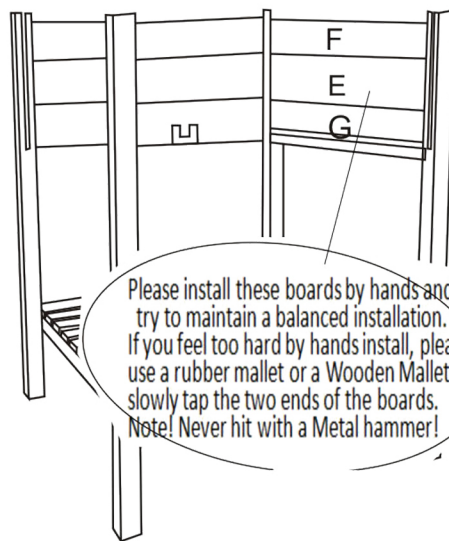


Please install these boards by hands and try to maintain a balanced installation. If you feel too hard by hands install, please use a rubber mallet or a Wooden Mallet to slowly tap the two ends of the boards. Note! Never hit with a Metal hammer!

**D** x 1

**E** x 1


**F** x 1

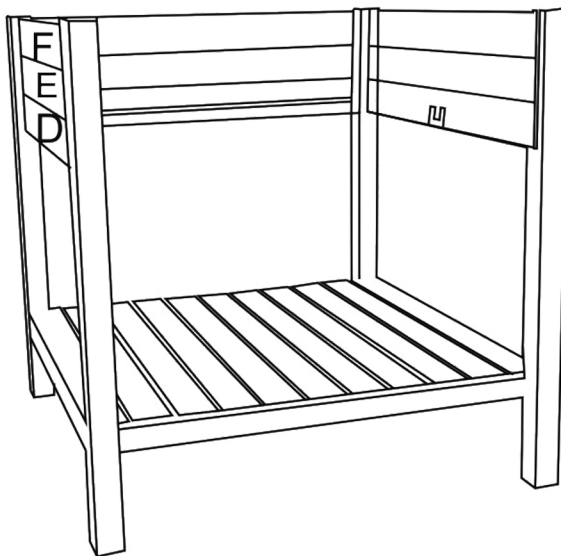


**E** x 1

**F** x 1

**G** x 1

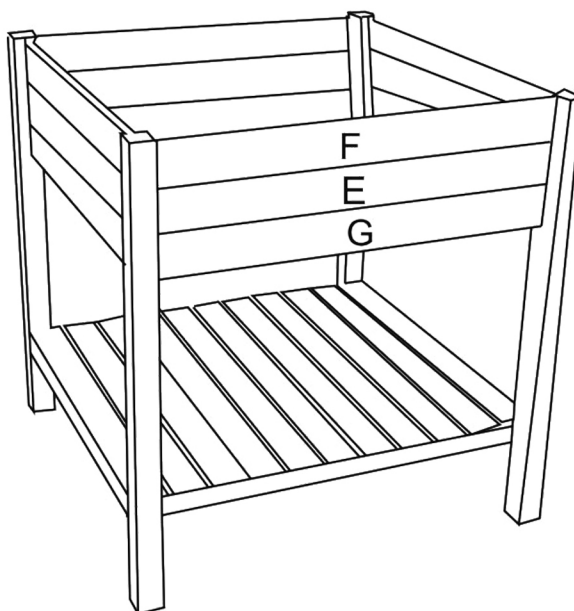


**H** x 1

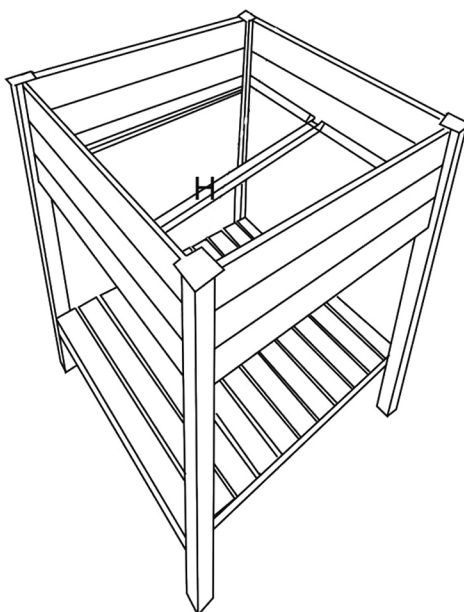


J x 2

① x 8

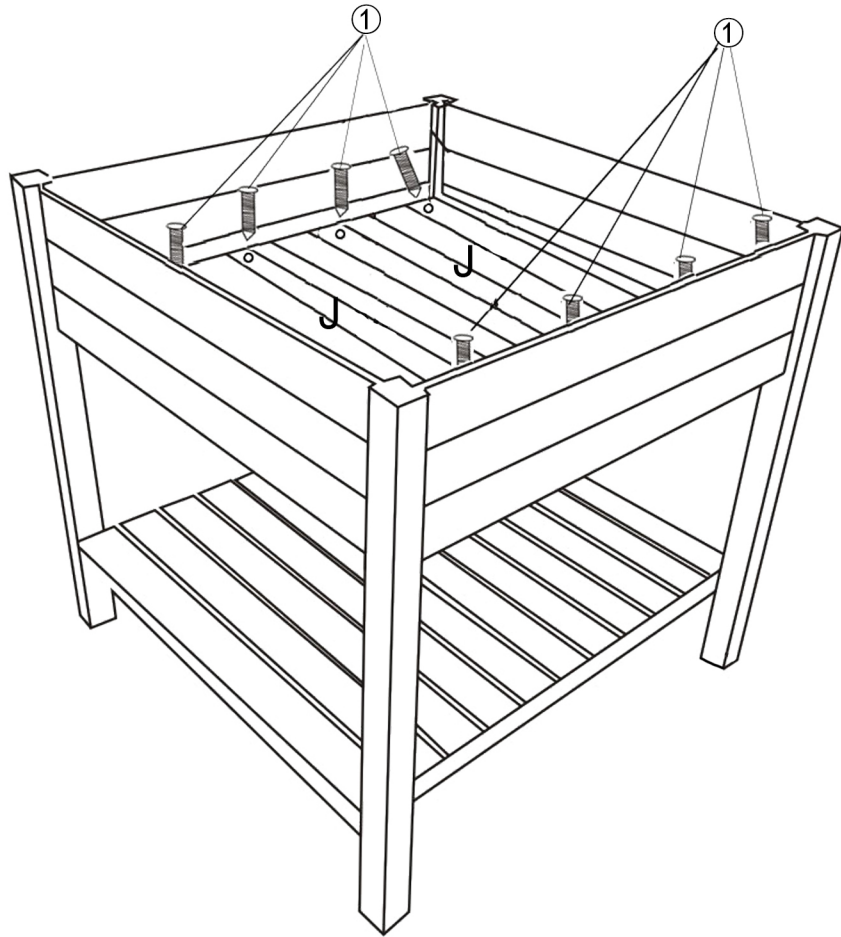

I x 4

L x 1

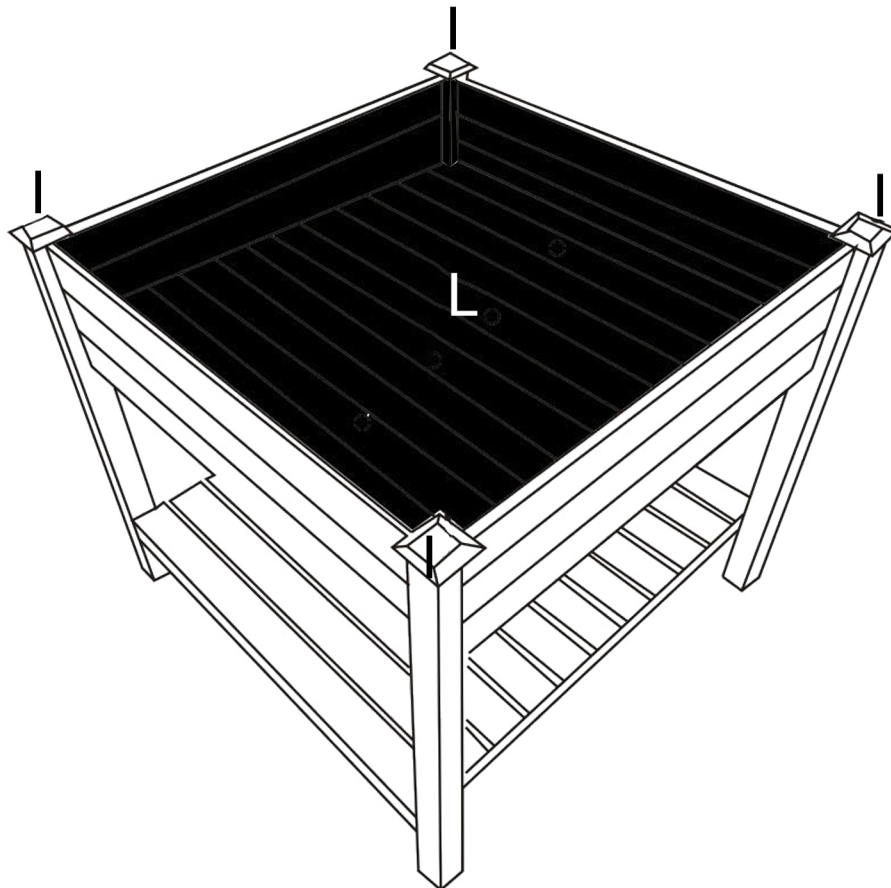

US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it