


845-276

C000000

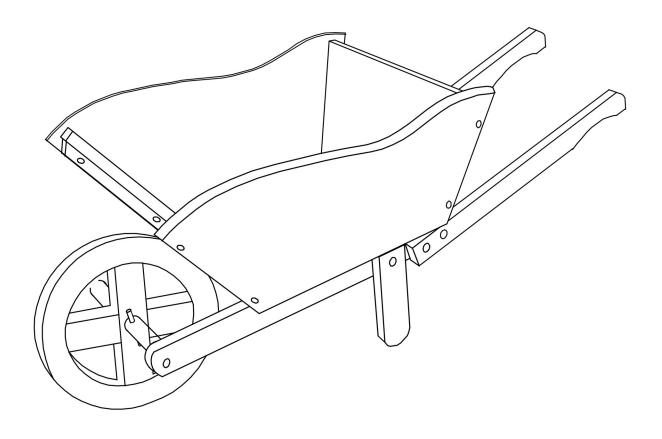

ASSEMBLY INSTRUCTION

■ Parts list	Side Board(A) —	2pcs
	Back Board(B) —	_1pc
	Front Board(C)	_1рс
	Bottom Board(D)	_1pc
	Wheel(E)	_ 1рс
	Axle (F)	– 1pc
	Wood Dowel(G)	2pcs
0	Wheel Frame(H) ————	_ 2pcs
	Handle(I) ————	— 2pcs
	Leg(J) —	-2pcs
00	Small Bolt,nut,washer(6x40mm) (K)—	-8pcs
Onnana 00	Large Bolt,nut,washer(6x50mm) (L)—	-6pcs
	Screws(4x30mm) (M)	_10pcs

■ Remarks

- ▲ We highly recommend using a rubber mallet to assemble this product and a power drill to screw in screws.
- ▲ We highly recommend wearing safety goggles during assembly.
 ▲ Unpack all parts on clean soft surface to prevent scratching of wood.
- ▲ Solid Wood such as this has knots, marks, and cracking which are normal and which should be considered an enhancement to the natural beauty of the product.

■ How to assemble

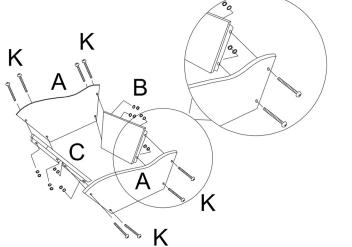


Fig. 1 Attach the Side Board (A) to the Back Board (B) using 8pcs of small Bolt, nut, washers (K)


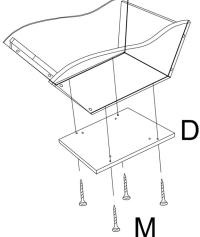


Fig. 2 Secure the Bottom Board(D) to the Wheel Barrow body with 4pcs Screws (M)

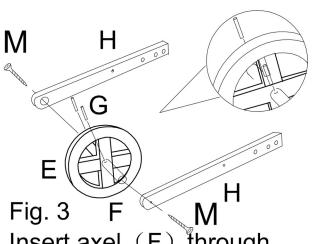

Insert axel (F) through the Wheel (E) and secure the wheel by inserting the 2 Wood Dowel (G) into the holes in the Axle. Attach the Wheel Frames(H) to the Axle as shown using 2 screws (M).

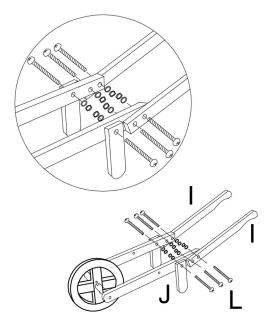


Fig. 4
Attach the Handles (I) and Leg (J) to the Wheel Frame (H), using 6pcs of Large Bolt,nut,washers (L)

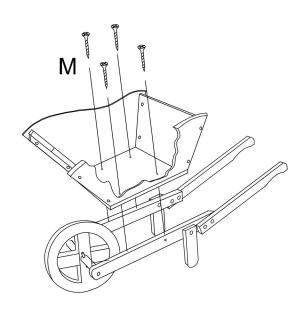


Fig. 5
Attach the Wheel Barrow body to the Wheel Frame(H) using 4pcs of Screws (M)

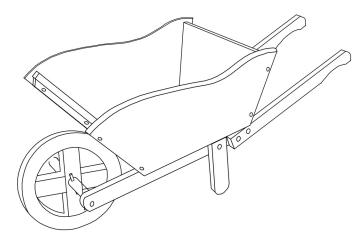


Fig. 6 Assembly is complete.















0034-931294512 atencioncliente@aosom.es

