




INbwa002_US_FR

845-075V02

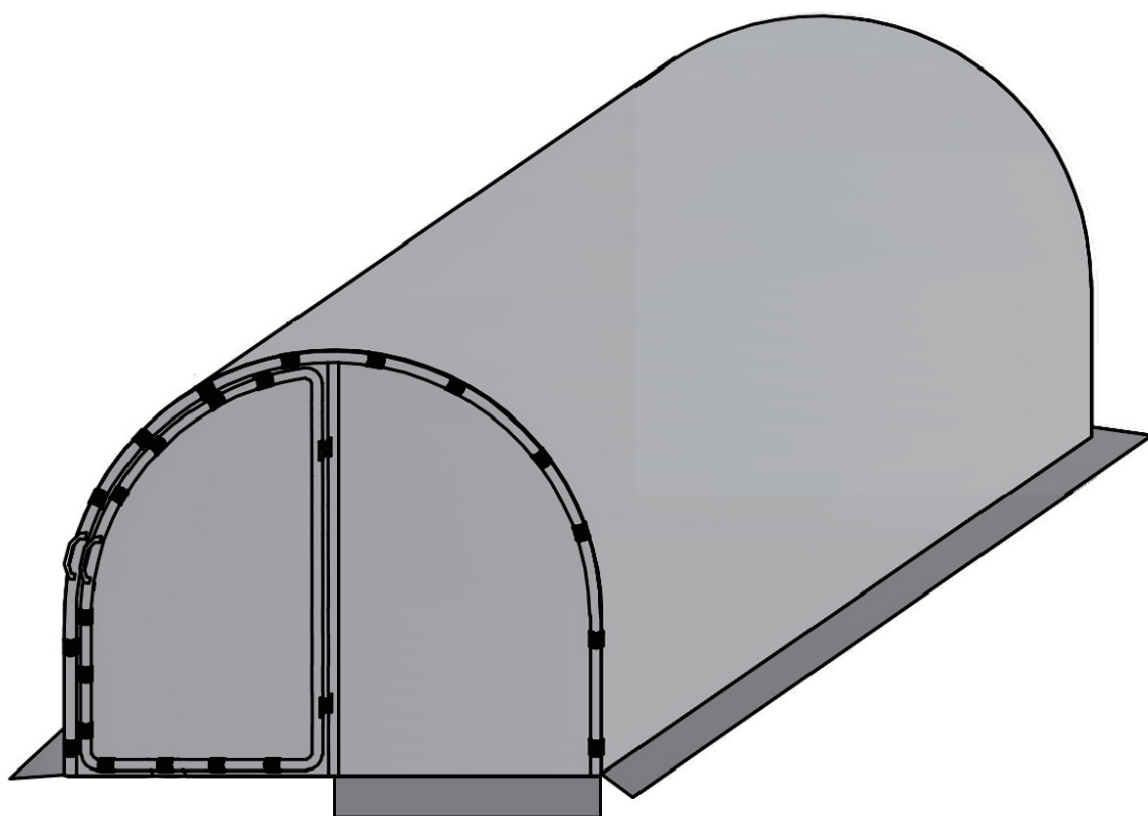

READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

ASSEMBLY & INSTRUCTION MANUAL

Remark:



- 1) Please carefully follow the assembly instructions.
- 2) Loosely assemble complete frame, before tightening all bolts in final position
- 3) 2-3 person assembly together.
- 4) For maximum stability of your polytunnel, please dig trench to bury base frame poles and back fill covering flaps of plastic canopy

Remarque:

- Veuillez lire attentivement les instructions de montage
- Serrer légèrement toutes les vis de la structure, puis serrer au maximum toutes les vis.
- 2 ou 3 personnes nécessaires au montage
- Pour une stabilité maximum, veuillez creuser une tranchée autour de la serre, y-déposer le film plastique et recouvrir de terre

PACKING DETAILS: TOTAL 2 BOXES

BOX-1/2

NO.	PARTS	QTY
1		14
1a		2
2		4
3		4
8		2
14		1
15		2
C		2

D		2
E		2
F		2
G		4
H		2
I		60
9 ↓ 13		1


BOX-2/2

NO.	PARTS	QTY
4		7
5		14
6		4
6A		2
7		2
A		2
B		2

	① x14		⑧ x 2		A x 2
	①a x 2		⑨ x28		B x 2
	② x 4	M6*58			C x 2
		⑩ x14			
	③ x 4	M6*30			D x 2
		⑩a x10			
	④ x 7	M6*40			E x 2
		⑪ x52			
	⑤ x14		⑫ x 1		F x 2
	⑥ x 4		⑬ x 1		G x 4
	⑥A x 2		⑭ x 1		H x 2
	⑦ x 2		⑮ x 2		I x60


⑨ x 8

⑪ x 8

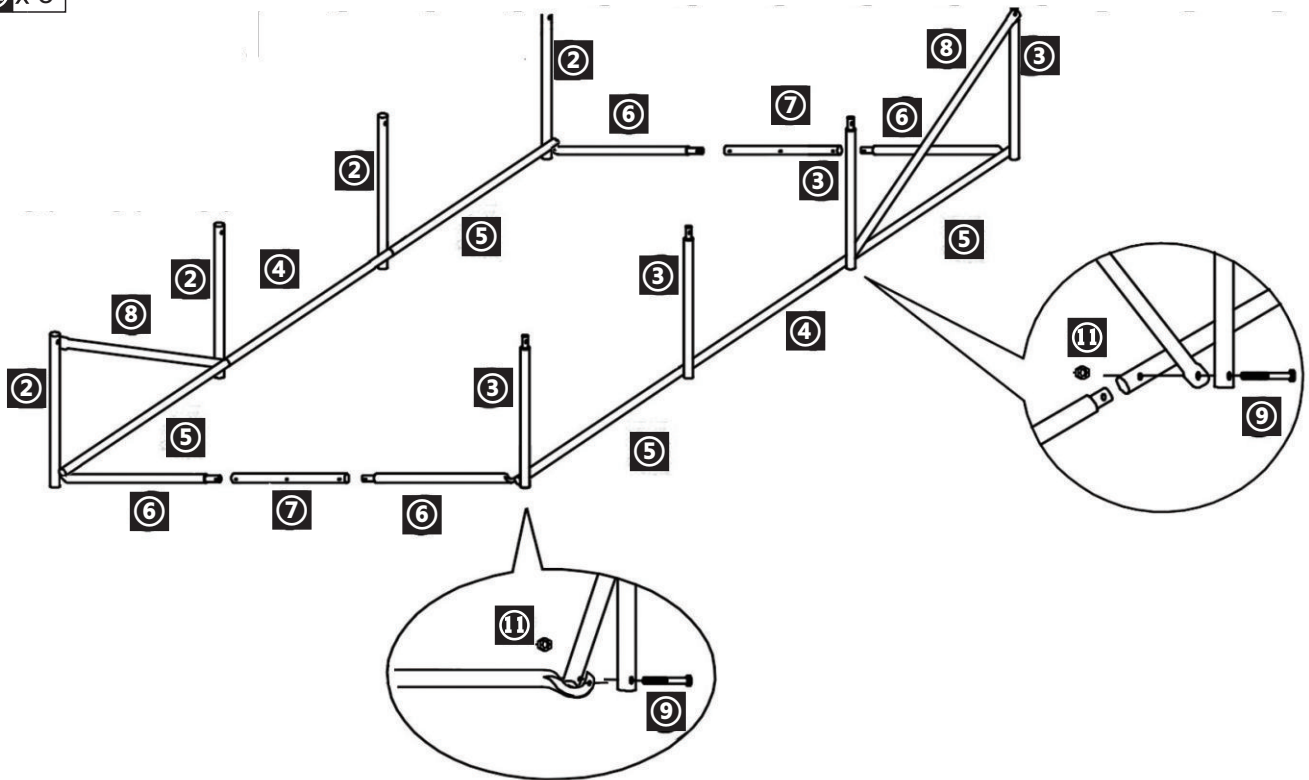

⑨ x 8




⑪ x 8

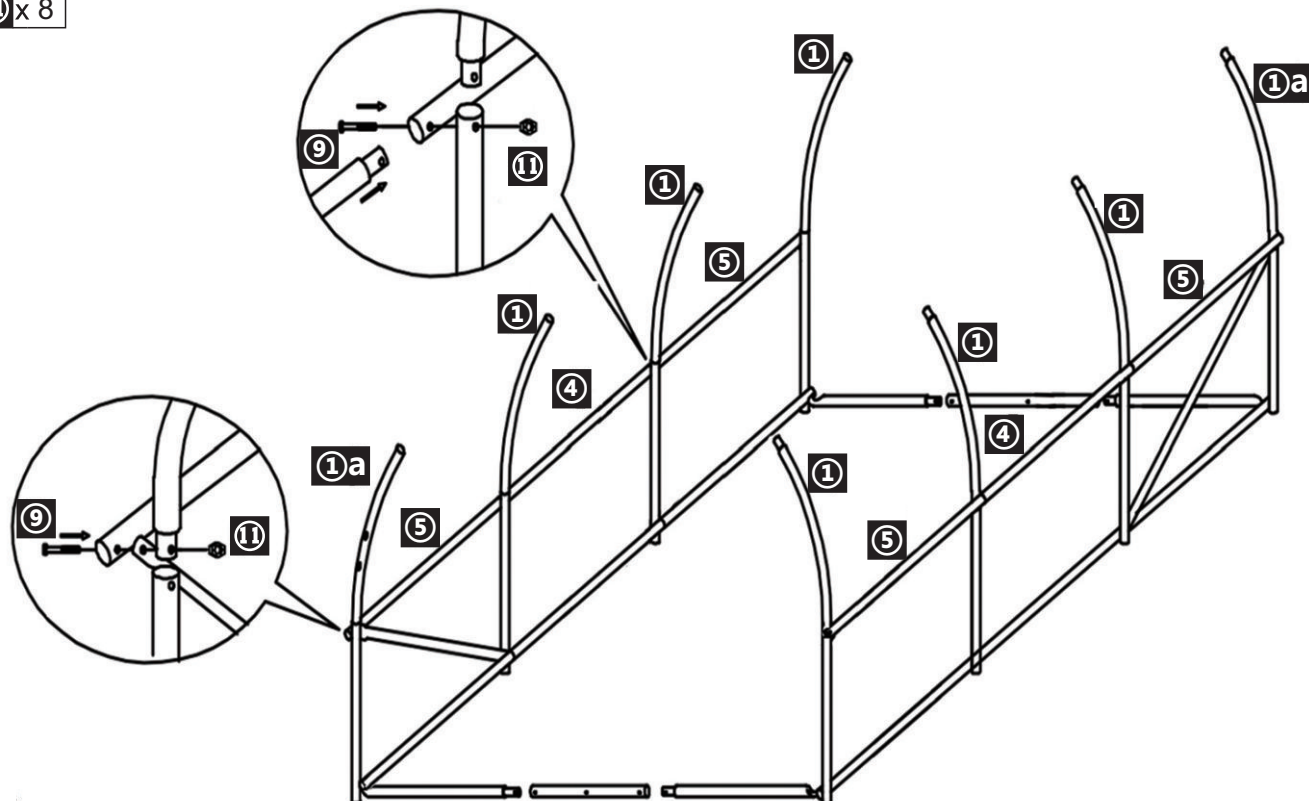

⑨ x 8

⑩ x 4

⑪ x 12


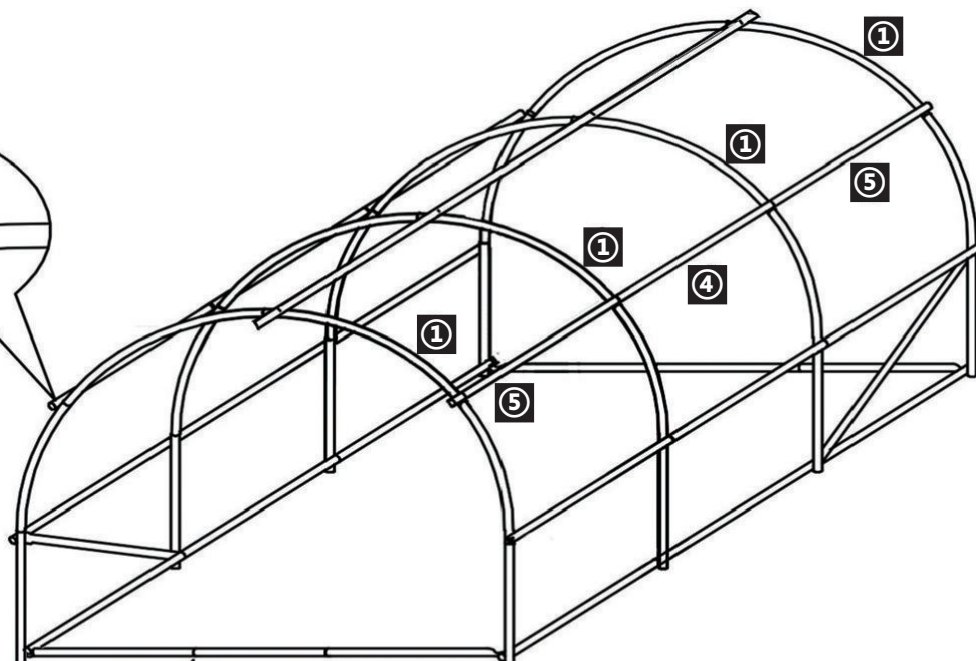
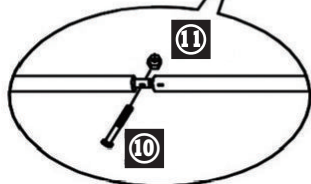
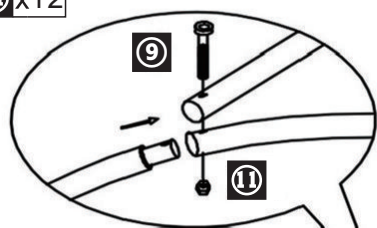


⑨ x 4

⑩ x 2


⑩a x 2

⑪ x 8

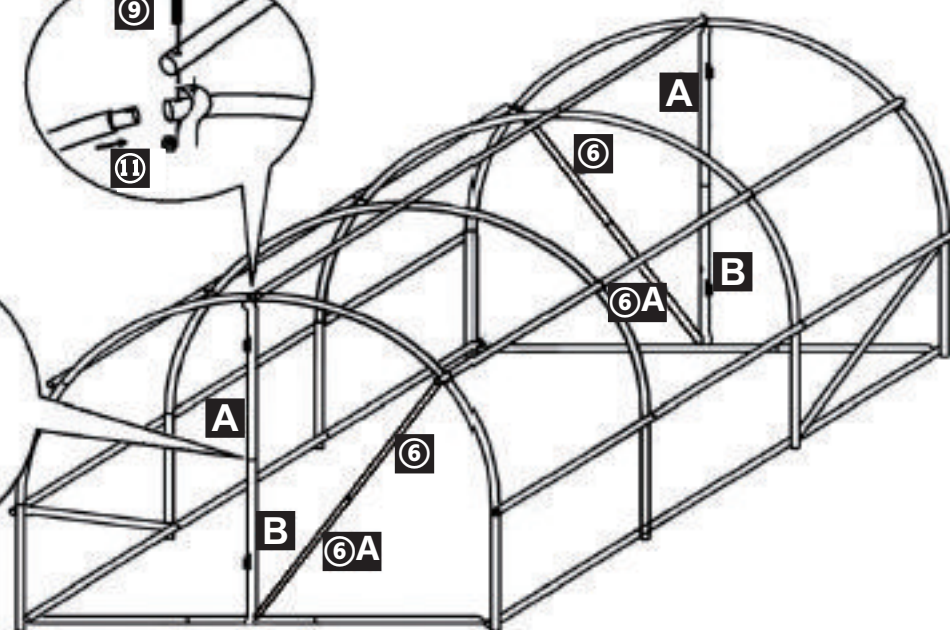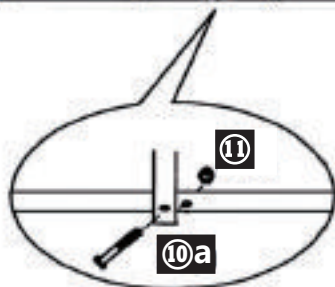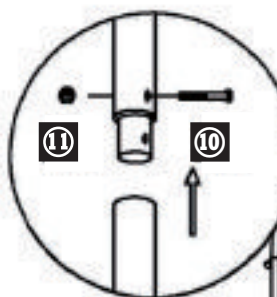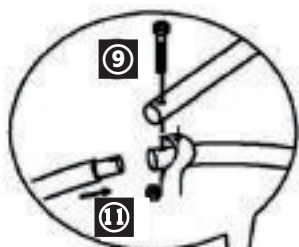


⑩ x 8

⑪ x 8

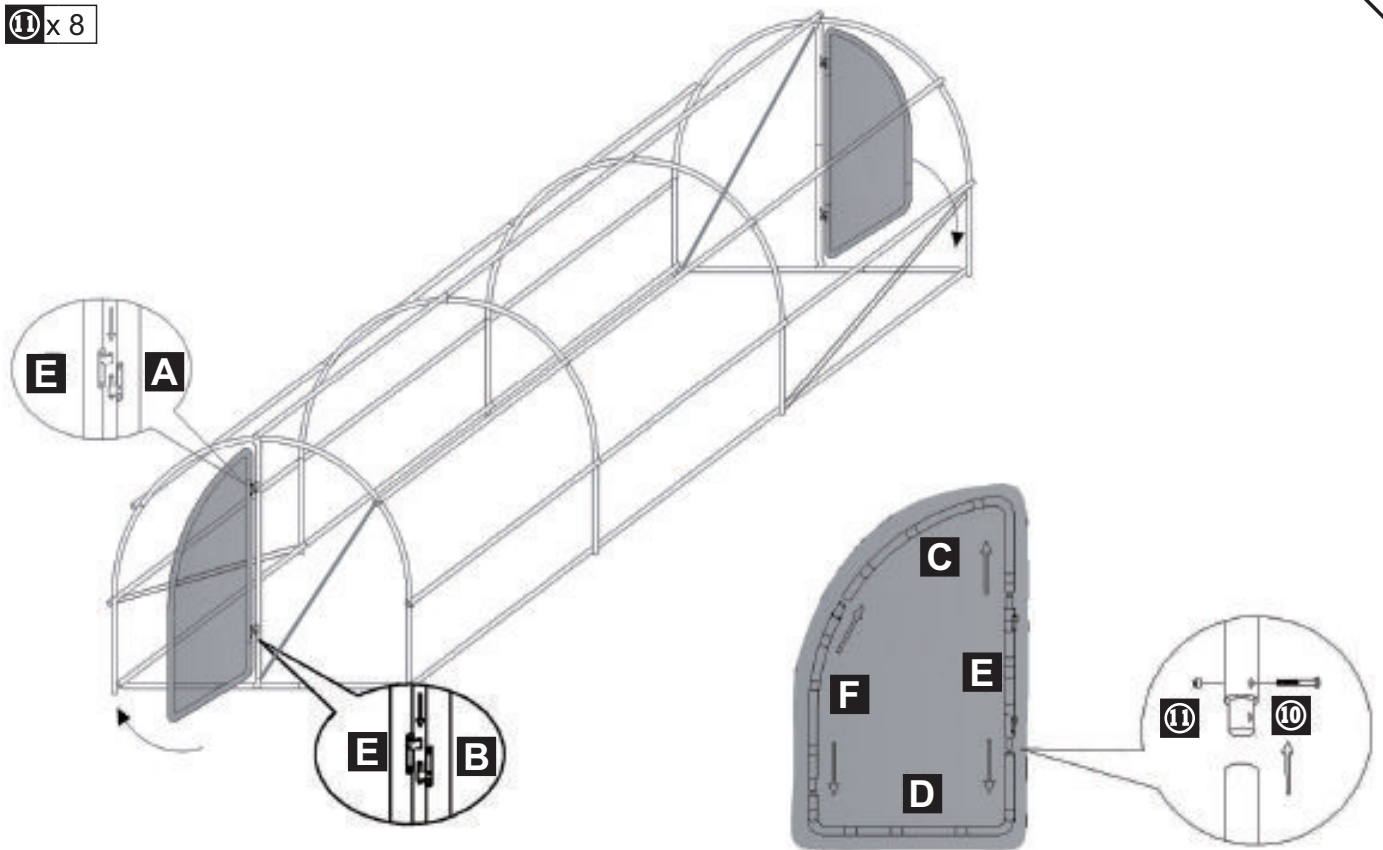

⑩a x 8

⑪ x 8

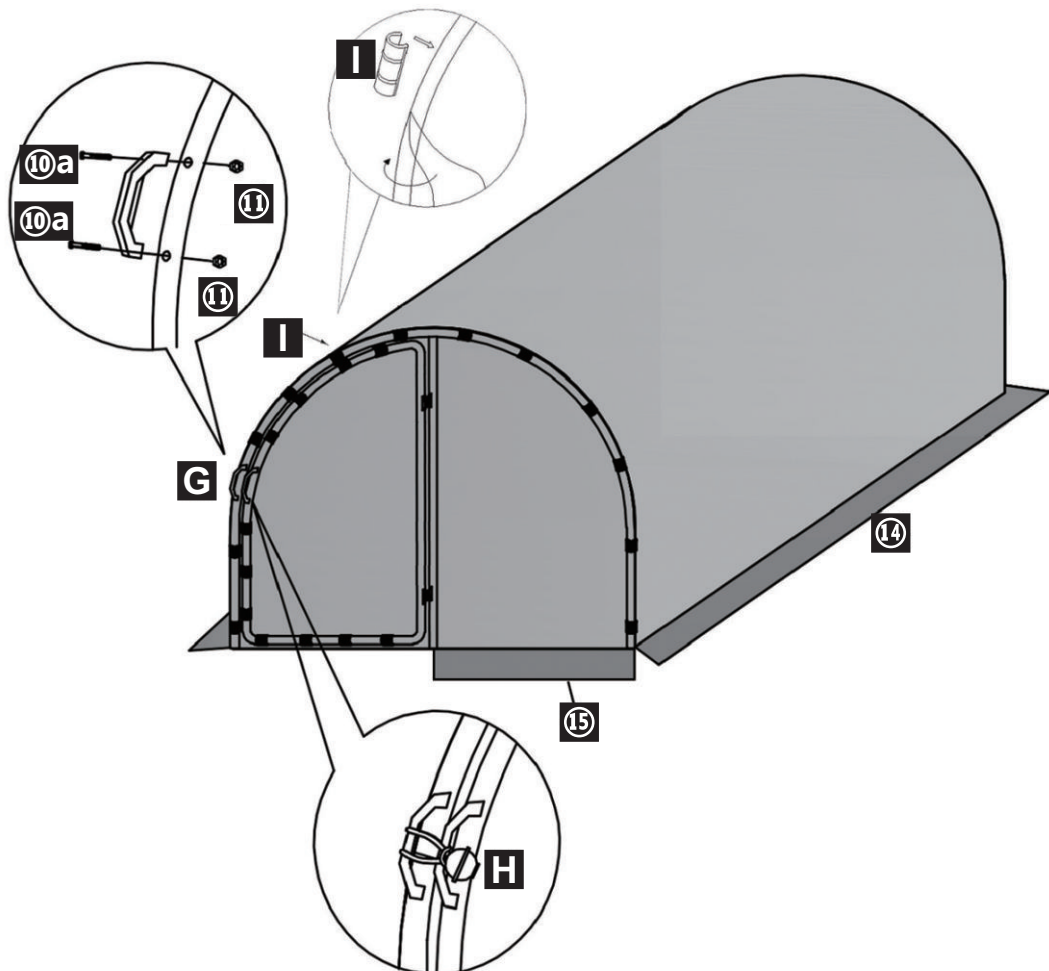

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it