


# Mailbox Instruction Manual:

## Accessories:

- 2x Keys
- 4x Screws
- 4x Dowels
- 4x Rubber Stoppers

## Notice:

The included installation material is just for strong masonry.  
Please check before the installation of the mailbox if it's the right installation material for your masonry.  
Change the installation material if it's necessary.

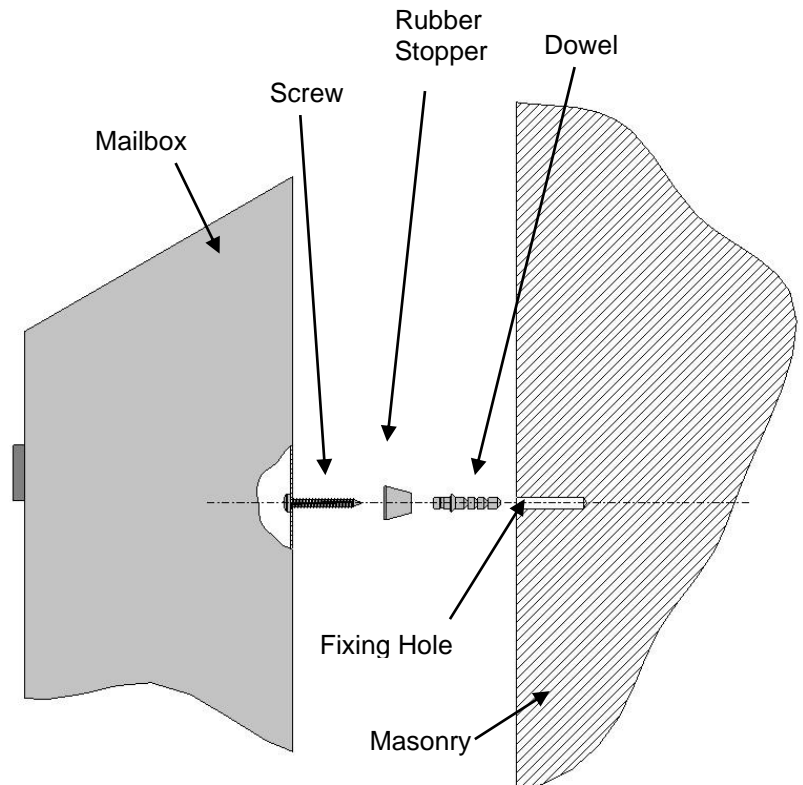

1.

Choose the right position for your mailbox.

2.

Mark the holes for the installation of the mailbox on the masonry  
Make sure the mail box hole is in level.

3.

Pre-drill the holes for the dowel.

4.

Use a hammer to tap the dowels into the pre-drilled holes until they are completely inside the hole

5.

Install the mailbox on the masonry.  
Use the rubber stoppers to get a distance between mailbox and masonry.