




INcji011_UK

820-316V00


Rail Radiator

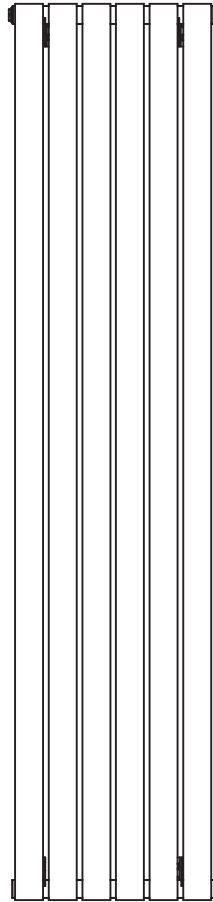

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

UESR'S MANUAL

Unit:mm

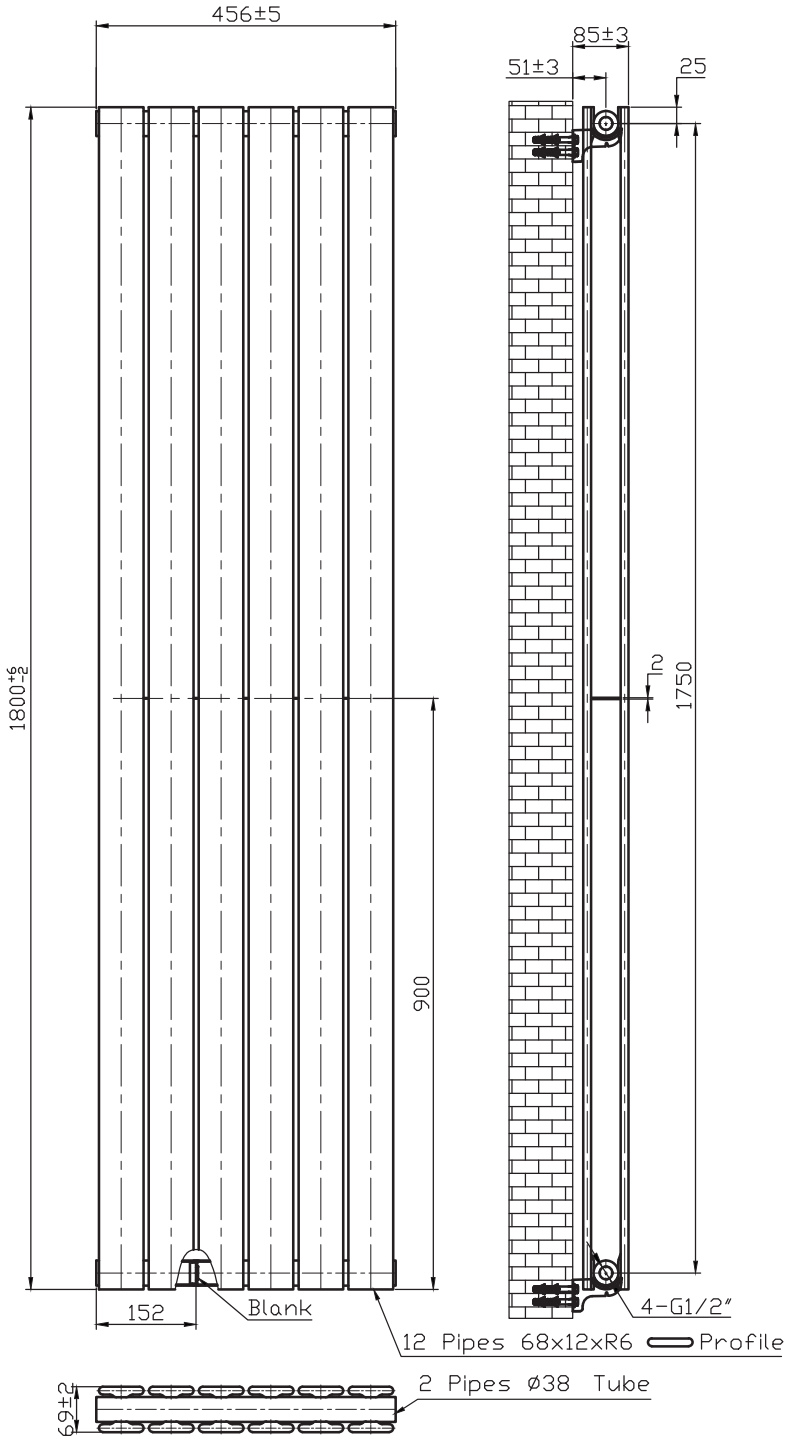


Dear customer,







Thank you for purchasing this product. For you to protect and install this appliance properly, please read the manual thoroughly before using. Keep this manual safe for future reference.

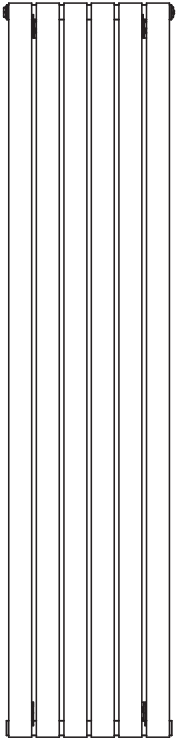1. Product features

Pictures in this manual is for reference only – always refer to the actual product. If you have any questions about the product and its features, please contact customer service.

2. Accessory checklist



| | | |
|---|-------------------|------------------------------|
|  | Blanking Plug | x1 |
|  | Air Vent | x1 |
|  | Washer | x8 <small>+1spare</small> |
|  | Long Screw | x8 <small>+1spare</small> |
|  | Masonry Wall Plug | x8 <small>+1spare</small> |
|  | HOOK | x4 |






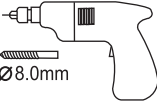


3. Installation notes

- 1) Installation must be completed by a qualified person.
- 2) Dispose of all packaging in a responsible manner.
- 3) For installation, ensure the wall can hold the weight of this product. A brick or cinderblock type wall is suitable.
- 4) This product is for indoors only.
- 5) Use a tape measure to insure there is enough space to fit this product.

4. Towel rail installation:


- Read instructions carefully before installation.
- Installation must be completed by a qualified person.
- Dispose of all packaging in a responsible manner.




Tools required

| | |
|--|---|
| Phillips screwdriver  | PTFE tape(not supplied)  |
| Slotted screwdriver  | Active spanners  |
| Marker pen  | Electric drill  8mm Drill Bit  Ø8.0mm |
| Tape Measure  | |


Apply PTFE tape (not supplied) to the blanking plug – insert them into the top left threaded holes. Apply PTFE tape (not supplied) to the air vent plug – insert them into the top right threaded holes.

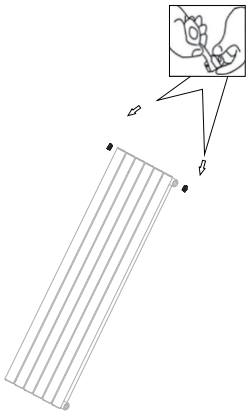1.



| | | |
|---|-------------------------|----|
|  | Blanking Plug | x1 |
|  | Air Vent | x1 |
|  | PTFE tape(not supplied) | x1 |

2.

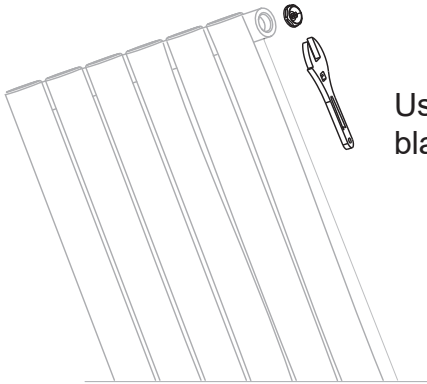






Use a wrench to secure the blanking plug and air vent.







Mark the position of the wall bracket screws with a pencil, then drill 8mm holes into the marked position.
Tap the masonry wall plug into the hole.



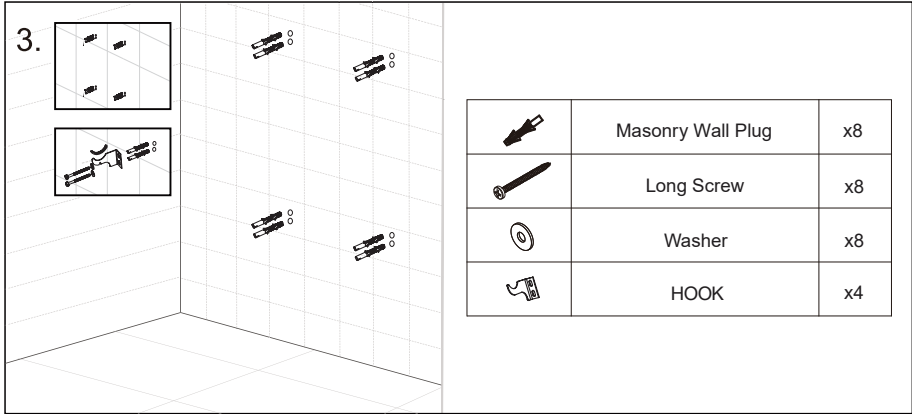
Secure to the wall using a long screw, washer and spencer in that order (hole facing out). See picture below.

3.



| | | |
|---|-------------------|----|
|  | Masonry Wall Plug | x8 |
|  | Long Screw | x8 |
|  | Washer | x8 |
|  | HOOK | x4 |

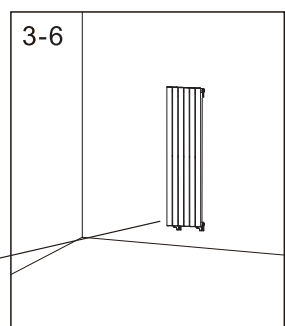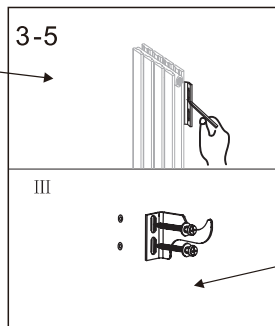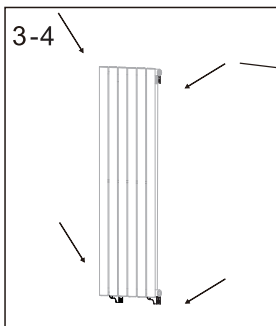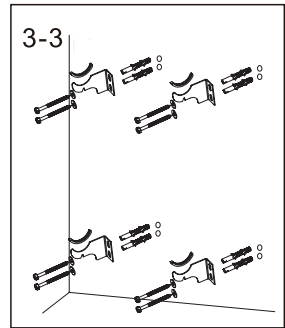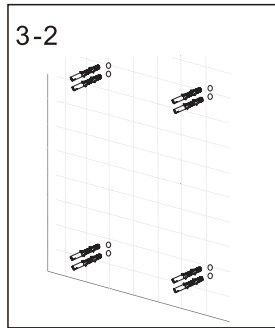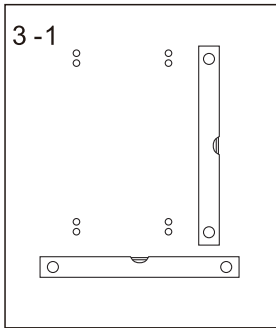

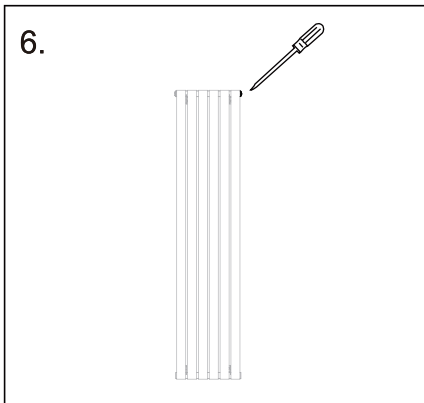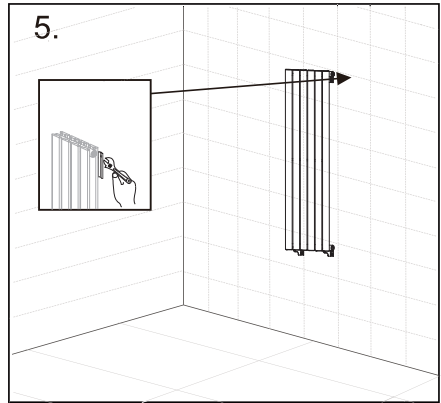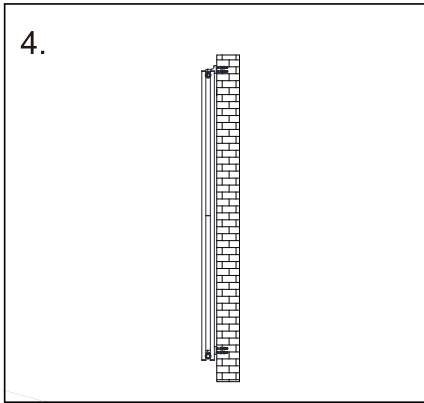


After installation:

- Use a screwdriver to open the air vent, open the valve and let the water flow into the product. Check all connection points for possible leaks.
- Once the water flows from the air vent, there will be no air in the tube.
- Use a screwdriver to close the vent, then turn on the valve – the product is ready to use.

Attention!

- Inspect the heater regularly. If you find any leaks, close the main valve straight away.
- Be cautious of hot water to prevent scalding.

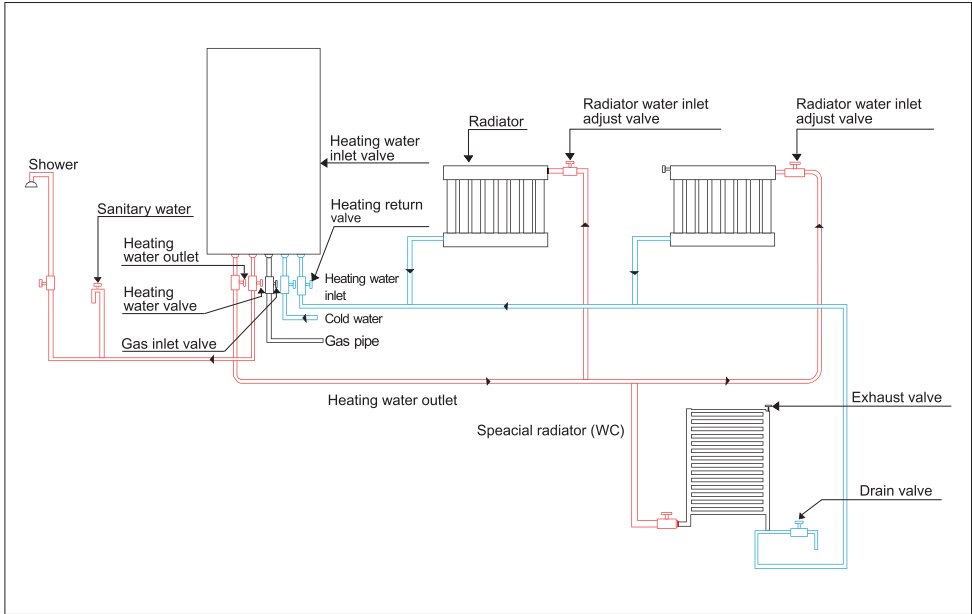

Be careful of high temperature surface



do not stack too many items



Keep away from flammable and explosive materials