





  
**2 Persons**      **2 hours**

Tools required


   
    
Ø6

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

# ASSEMBLY INSTRUCTION

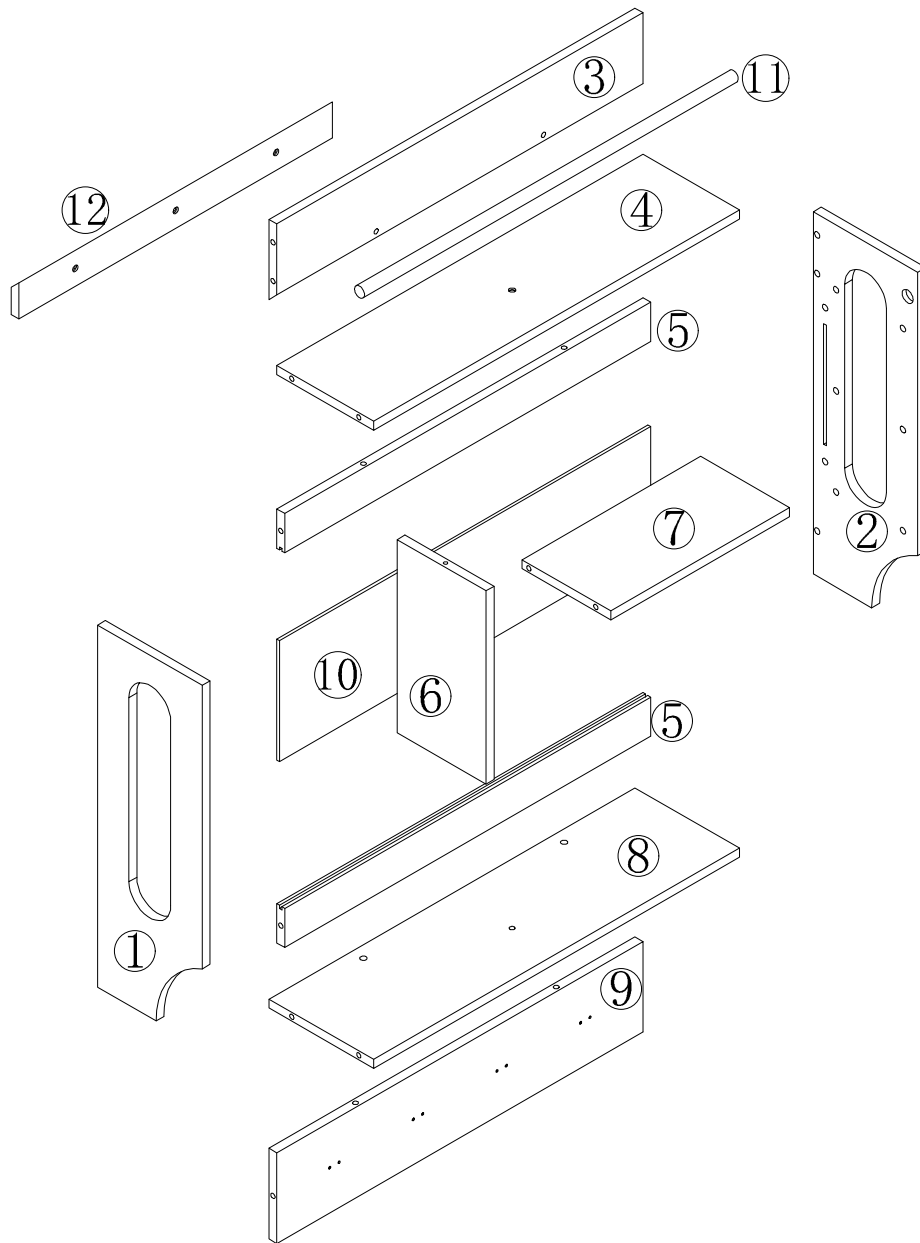

Disassembly and installation of accessories

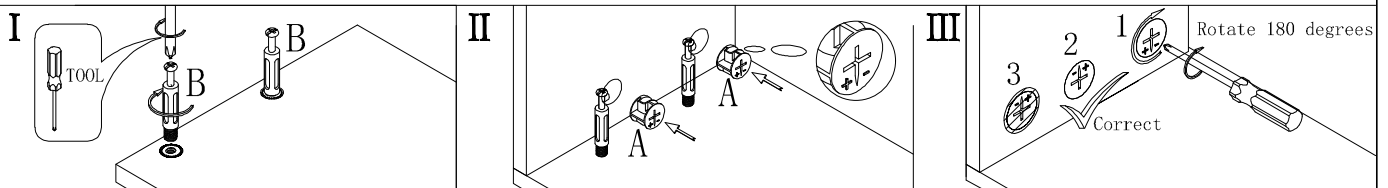

A 28PCS	B 28PCS	C 4PCS	D 8PCS	E 4PCS	F 3PCS	G 3PCS	H 1PC
15*10mm	6*28mm	∅6mm	∅3.5*14mm	∅7*38mm	7*30mm	∅4*45mm	M4

Note : Do not tighten bolts fully until all parts are connected!


Note : Ne serrez pas les boulons à fond tant que toutes les pièces ne sont pas connectées!

Hinweis: Ziehen Sie die Schrauben erst fest an, wenn alle Teile verbunden sind!

Nota: non serrare completamente i bulloni fino a tutte le parti non sono ancora collegate!

Nota: No apriete los tornillos completamente hasta que todas las partes están conectadas!



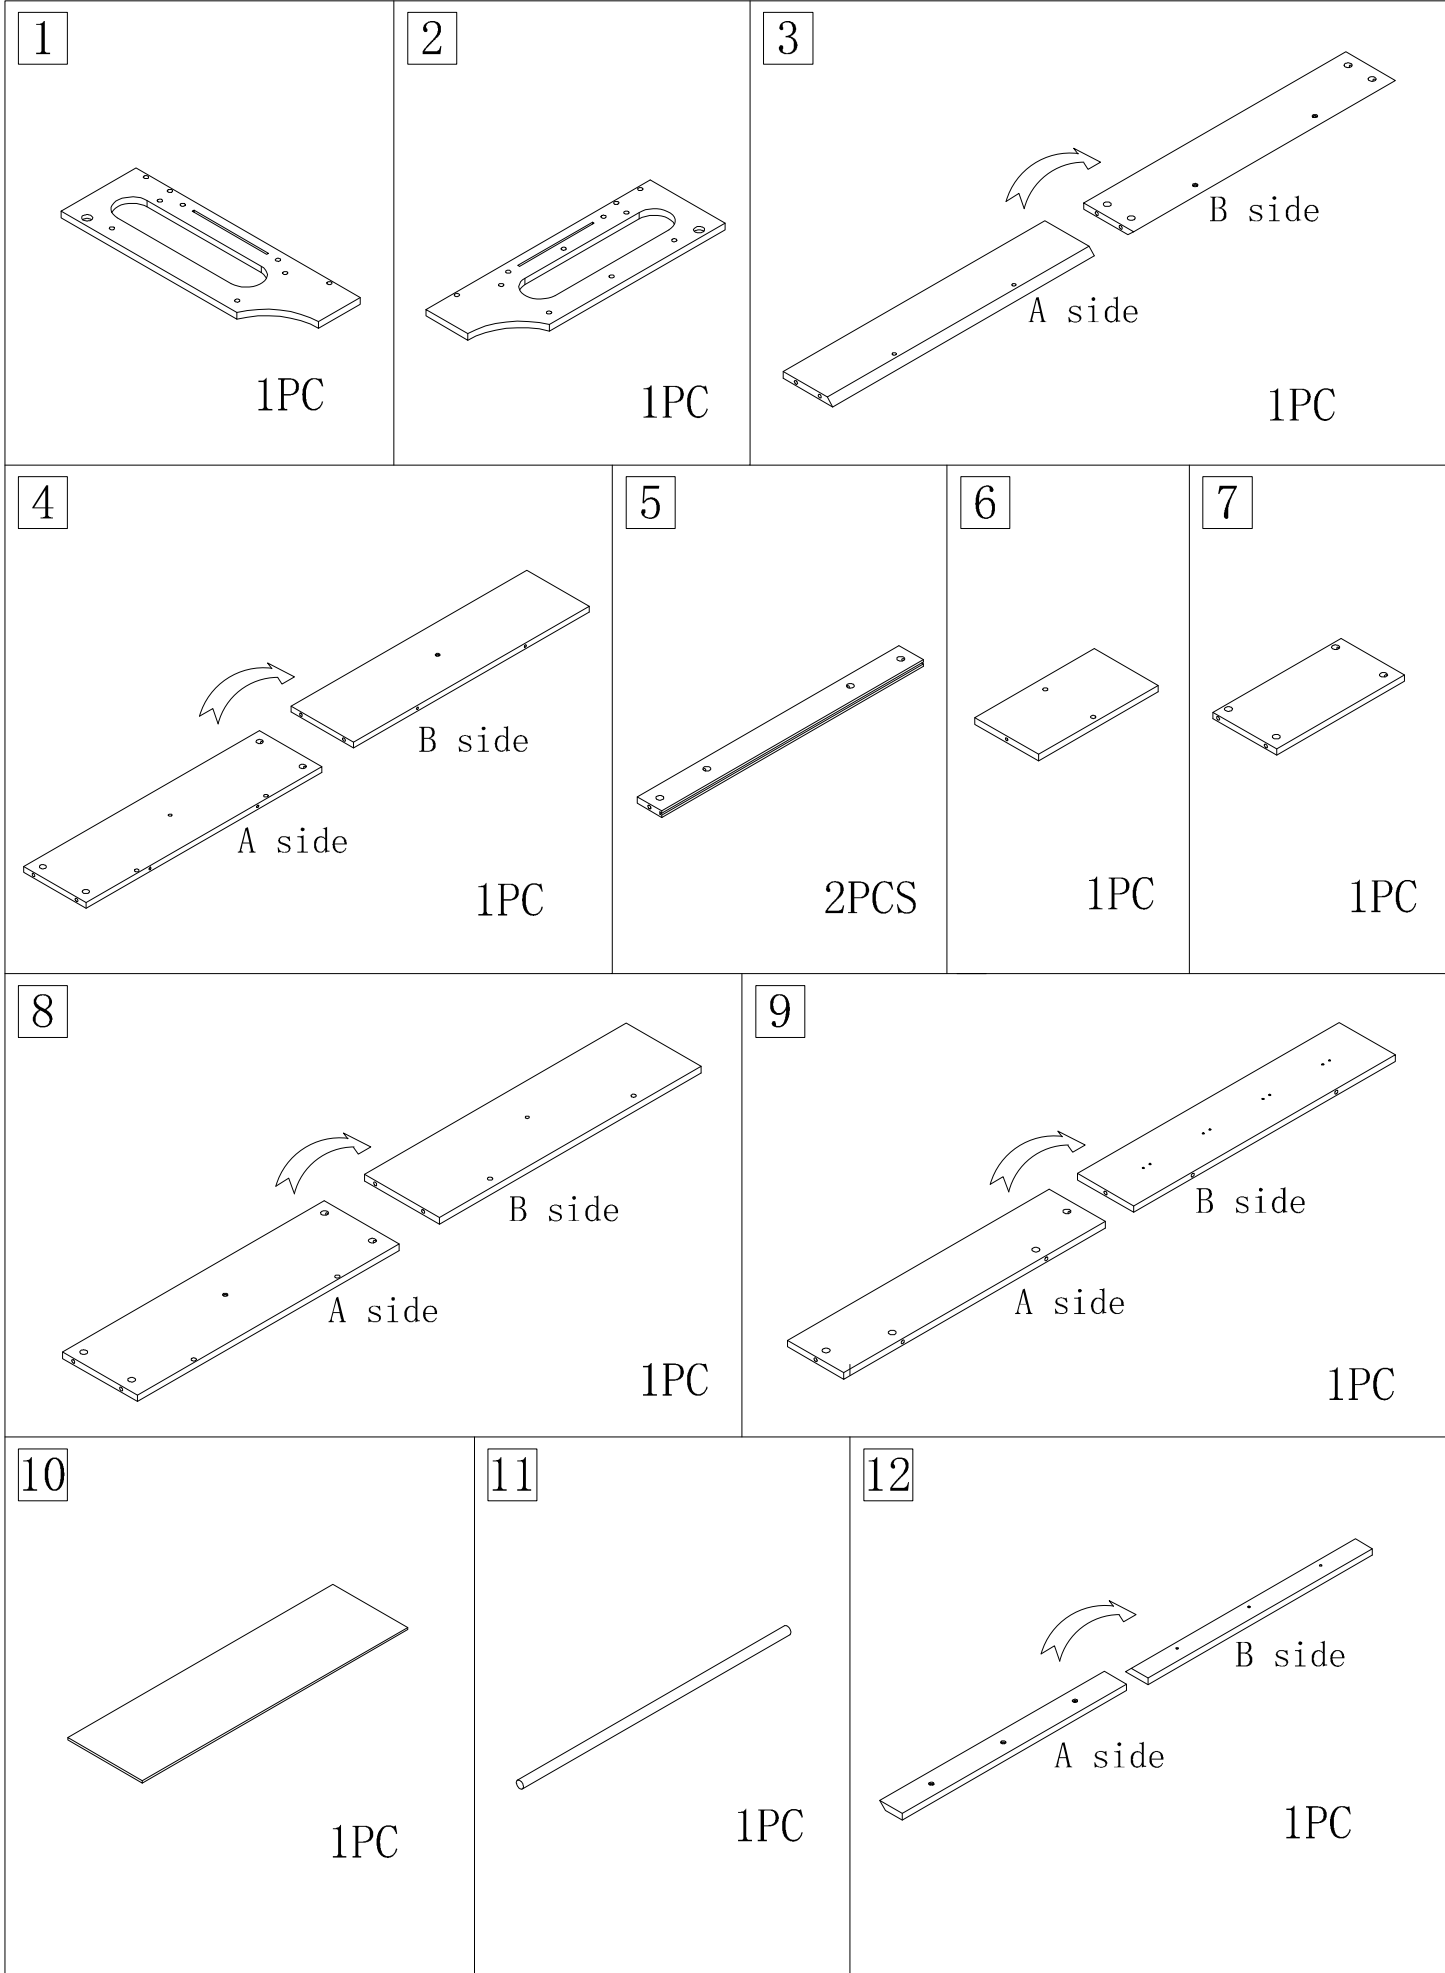

1

A side

H	1PC	B	2PCS
6*28mm			

2

A

A	2PCS
15*10mm	

3

A side

B side

B	4PCS
6*28mm	

4

CX4  
DX8

B side

C	4PCS	D	8PCS
Ø6mm		Ø3.5*14mm	

5

A side

A side

A	4PCS
15*10mm	

6

B

B	2PCS
6*28mm	

7

A





A	2PCS
15*10mm	

8

BX9

1

B	9PCS
6*28mm	

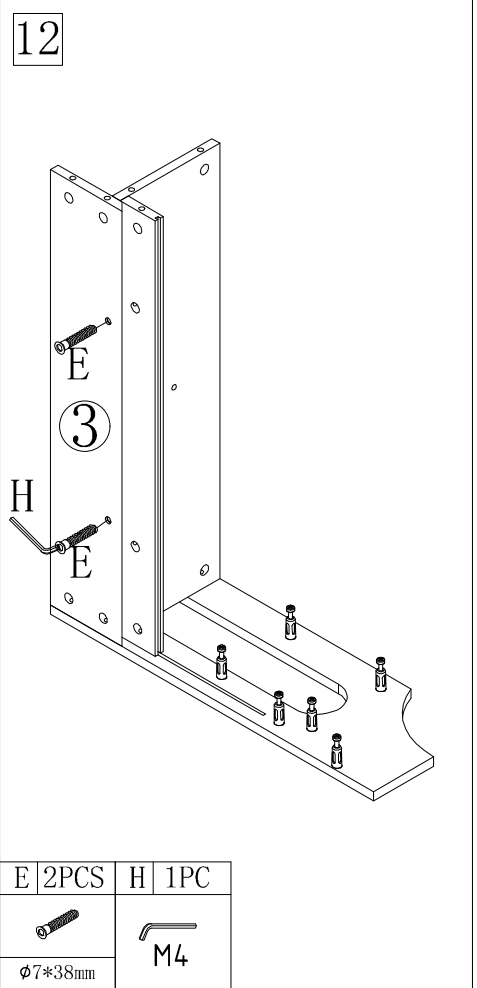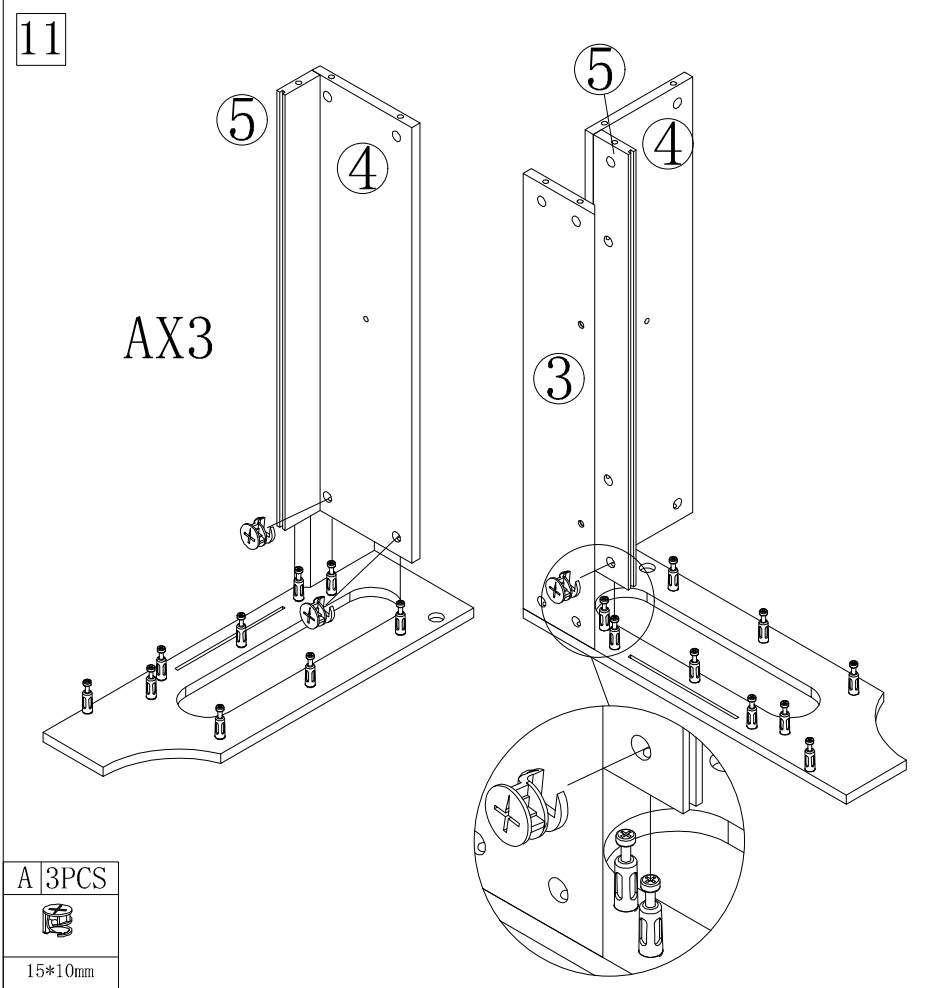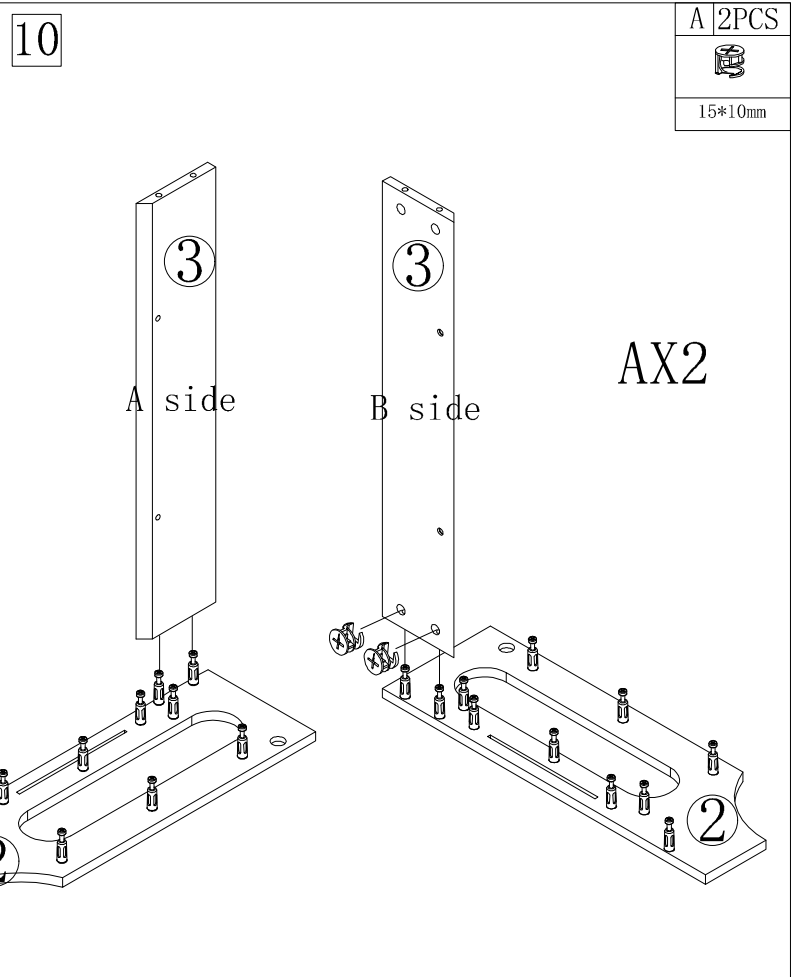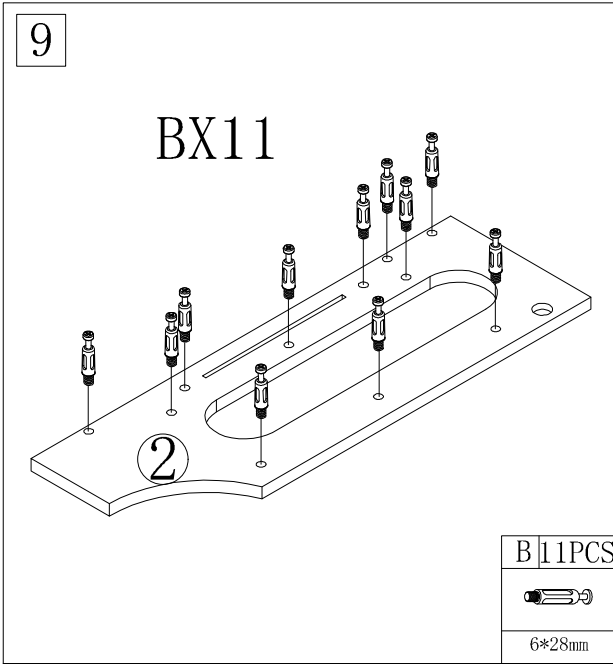


13

A 2PCS




15\*10mm

AX2

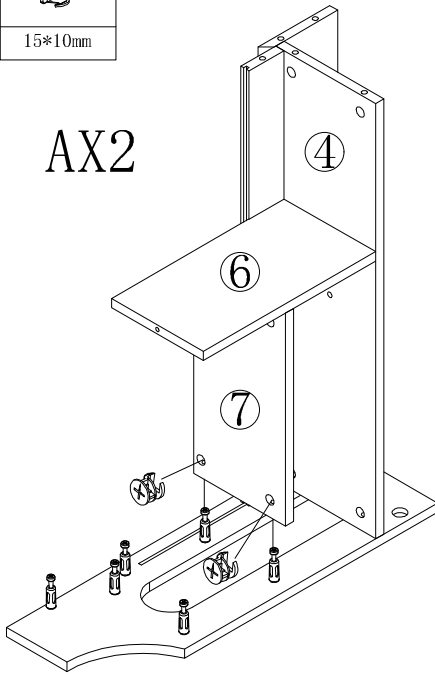

14

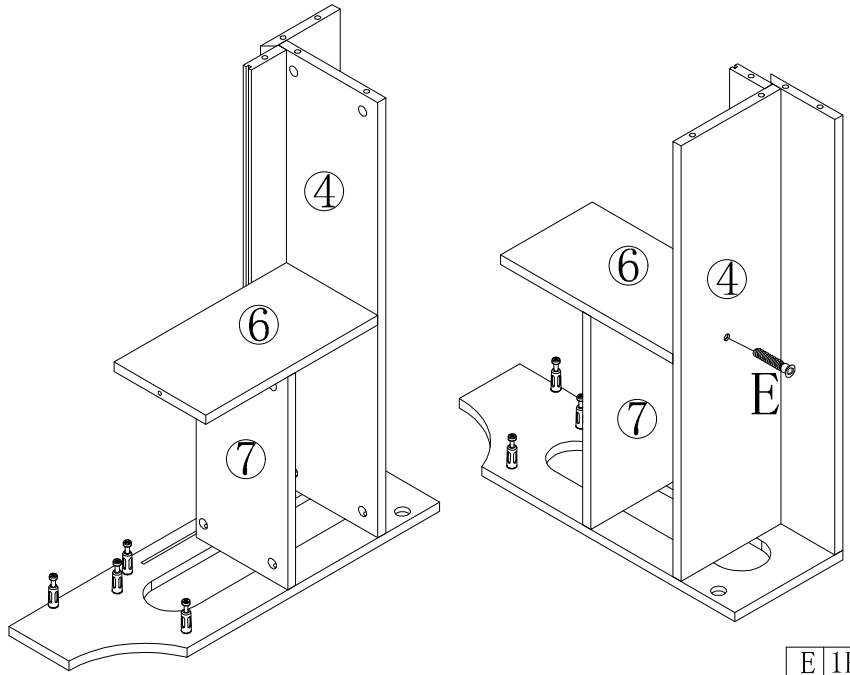

E 1PC




Ø7\*38mm

15

A 4PCS




15\*10mm

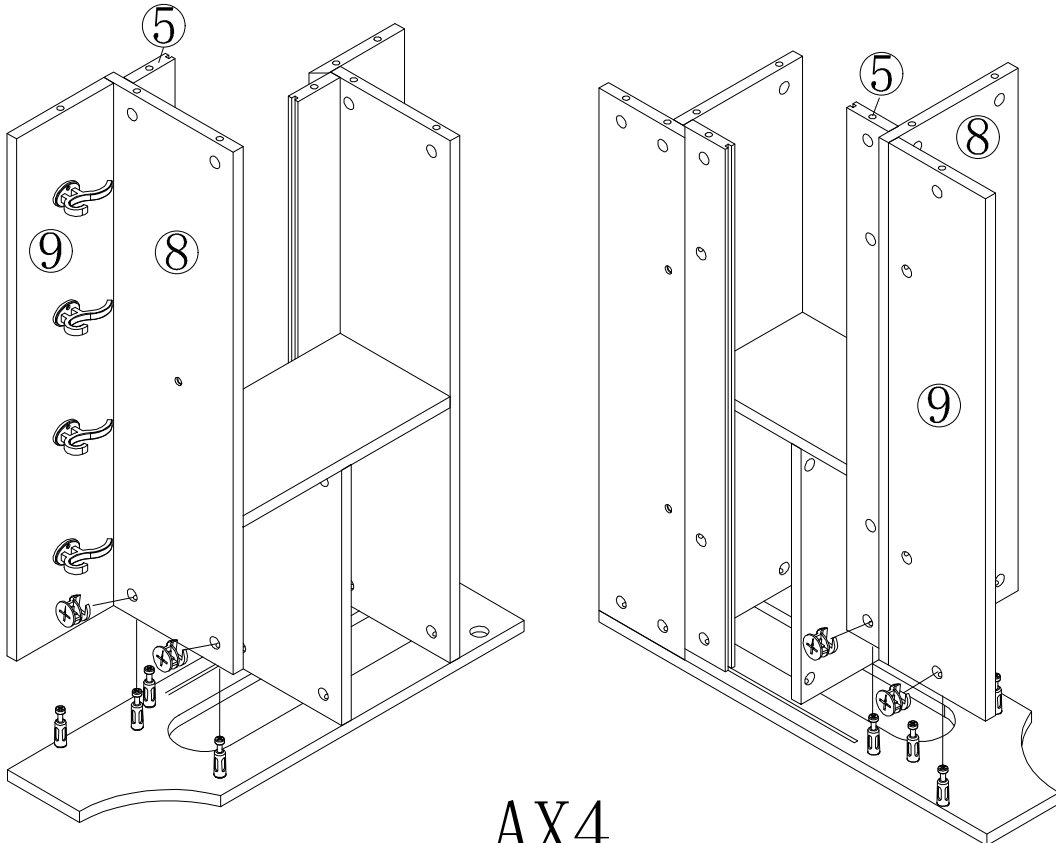



AX4

16


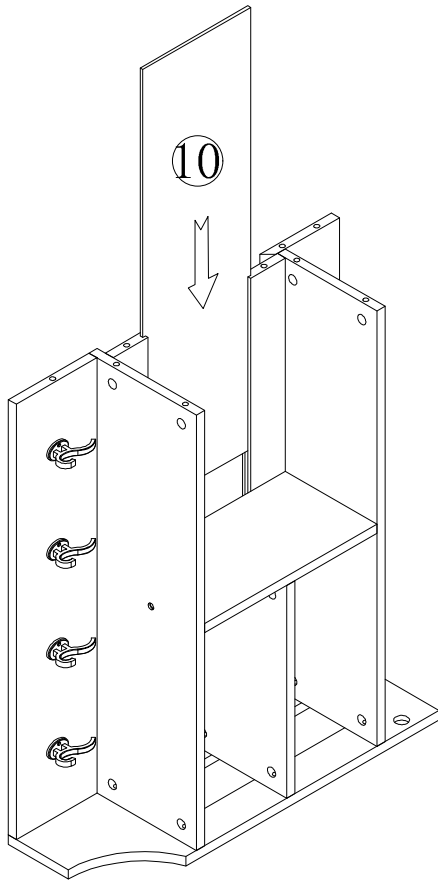


17

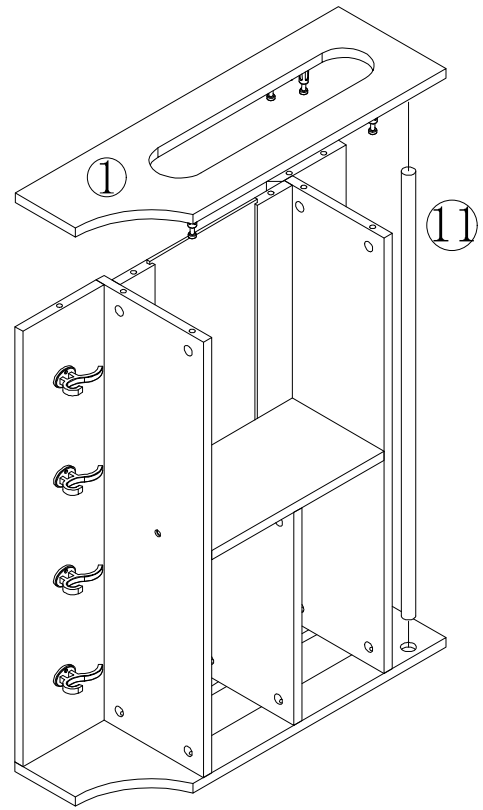

A 9PCS

15*10mm

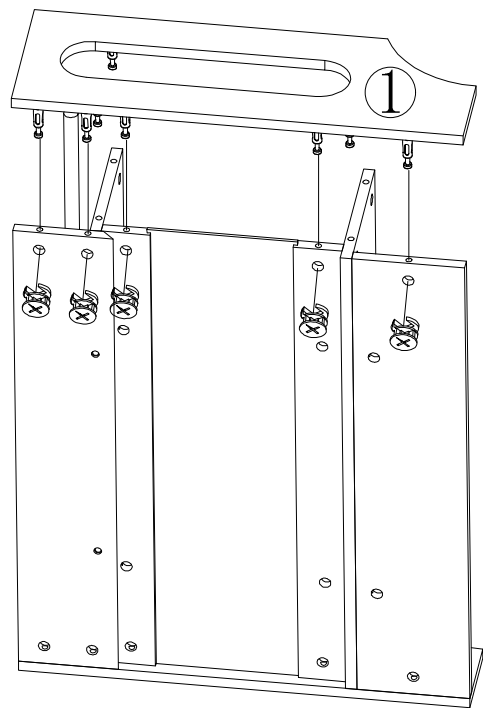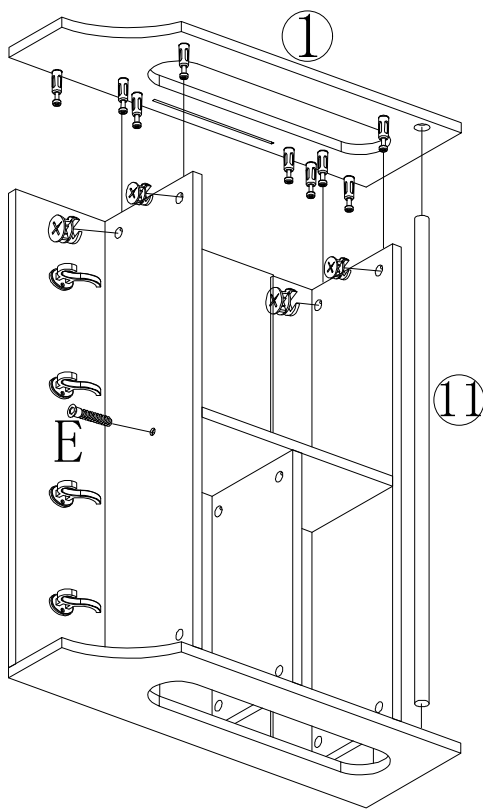AX9




E 1PC






φ7\*38mm

FX3

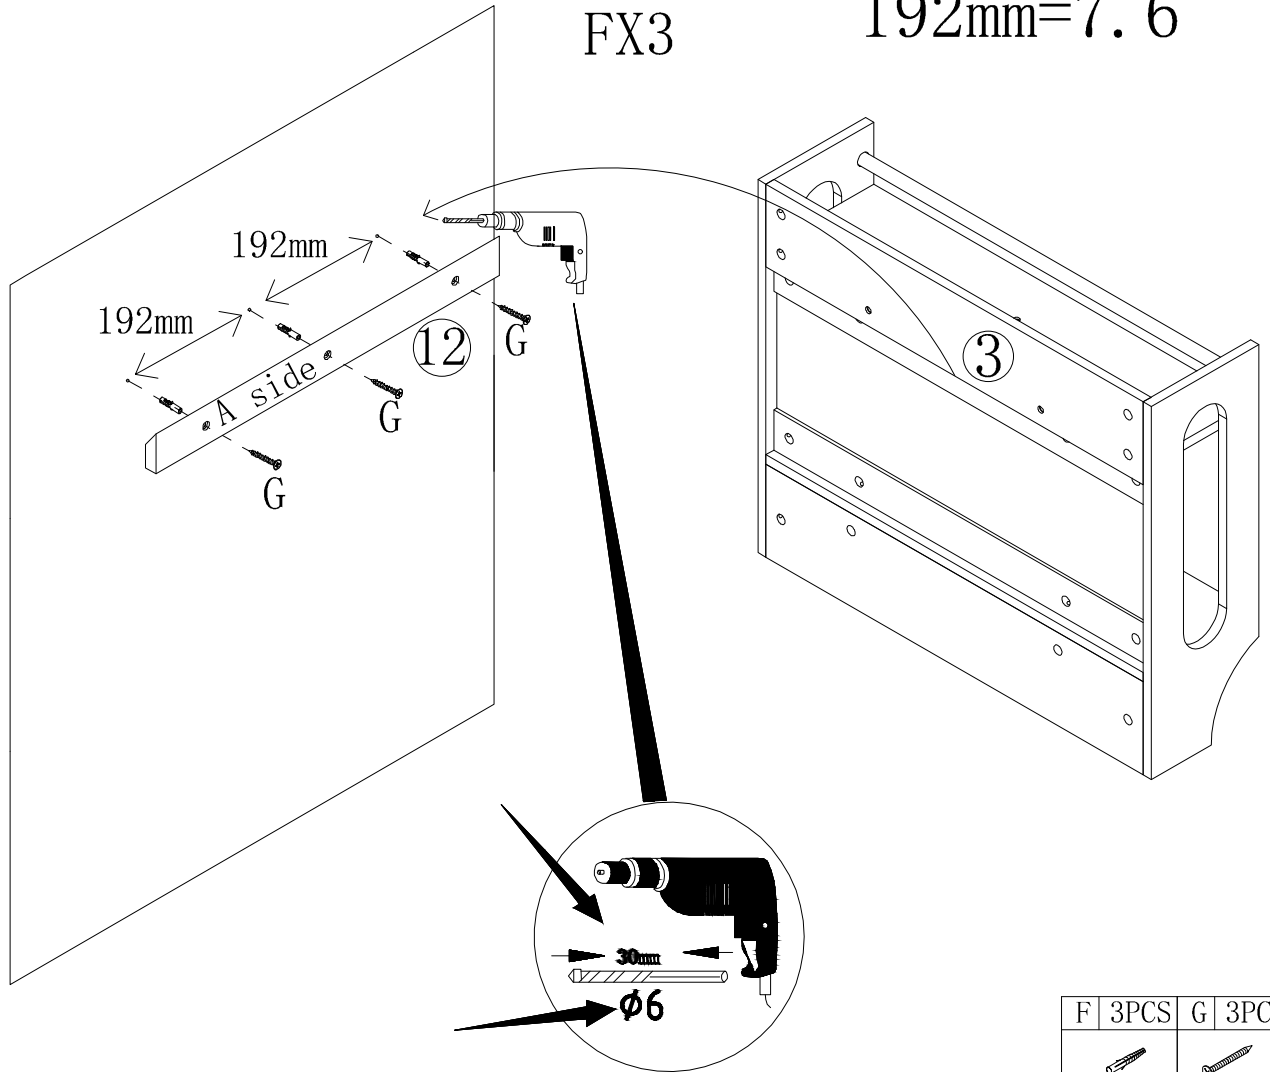192mm=7.6"



F	3PCS	G	3PCS
			
7*30mm		Ø4*45mm	

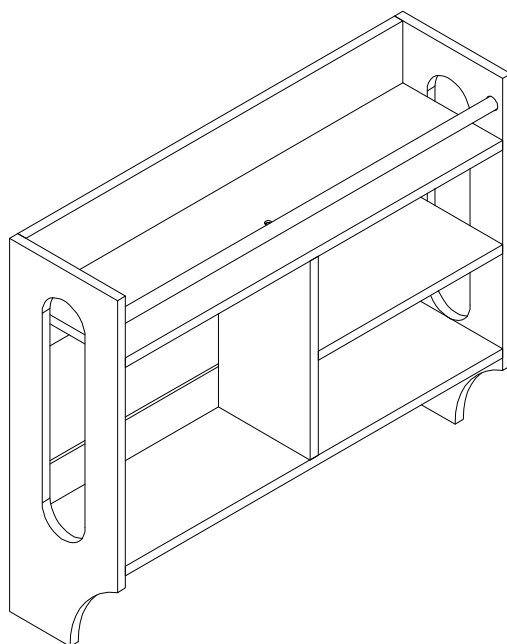

OK



US



001-877-644-9366  
customerservice@aosom.com

CA



001-855-537-6088  
customerservice@aosom.ca

UK



0044-800-240-4004  
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530  
service@aosom.de

FR



0033-1-84166106  
contact@aosom.fr

ES



0034-931294512  
atencioncliente@aosom.es

IT



0039-0249471447  
clienti@aosom.it