







834-212

C000000

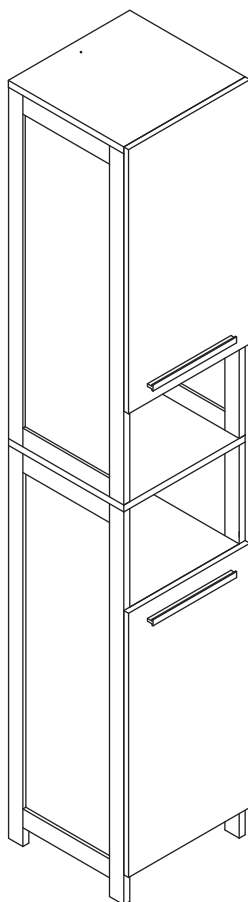


ASSEMBLY INSTRUCTIONS



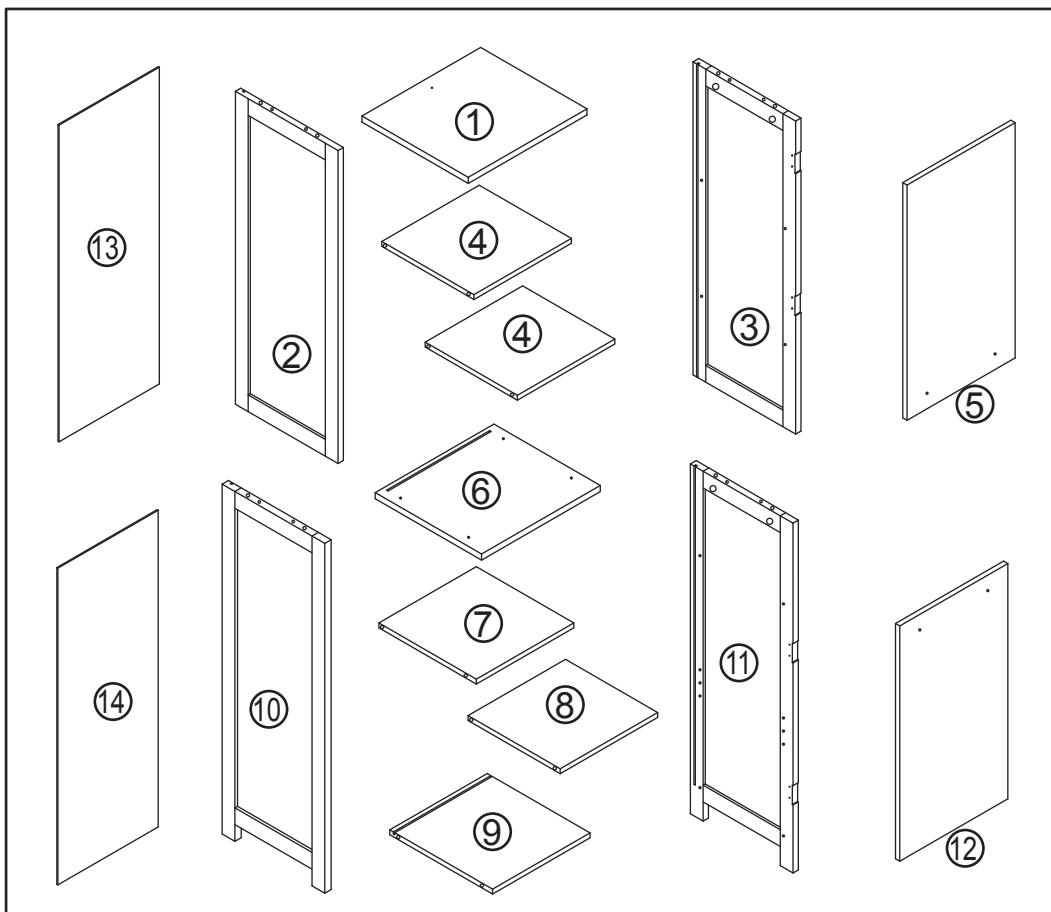


Ax24  6x35mm	Bx24  15x10mm	Cx8  6x30mm	Dx2 	Ex12  3x14mm	Fx4 
Gx18  3x12mm	Hx2 	Ix8 	Jx8 	Kx4 	Lx1 
Mx1 	Nx5  4x35mm	Ox1 	Px2 	Qx4 	2/12

1

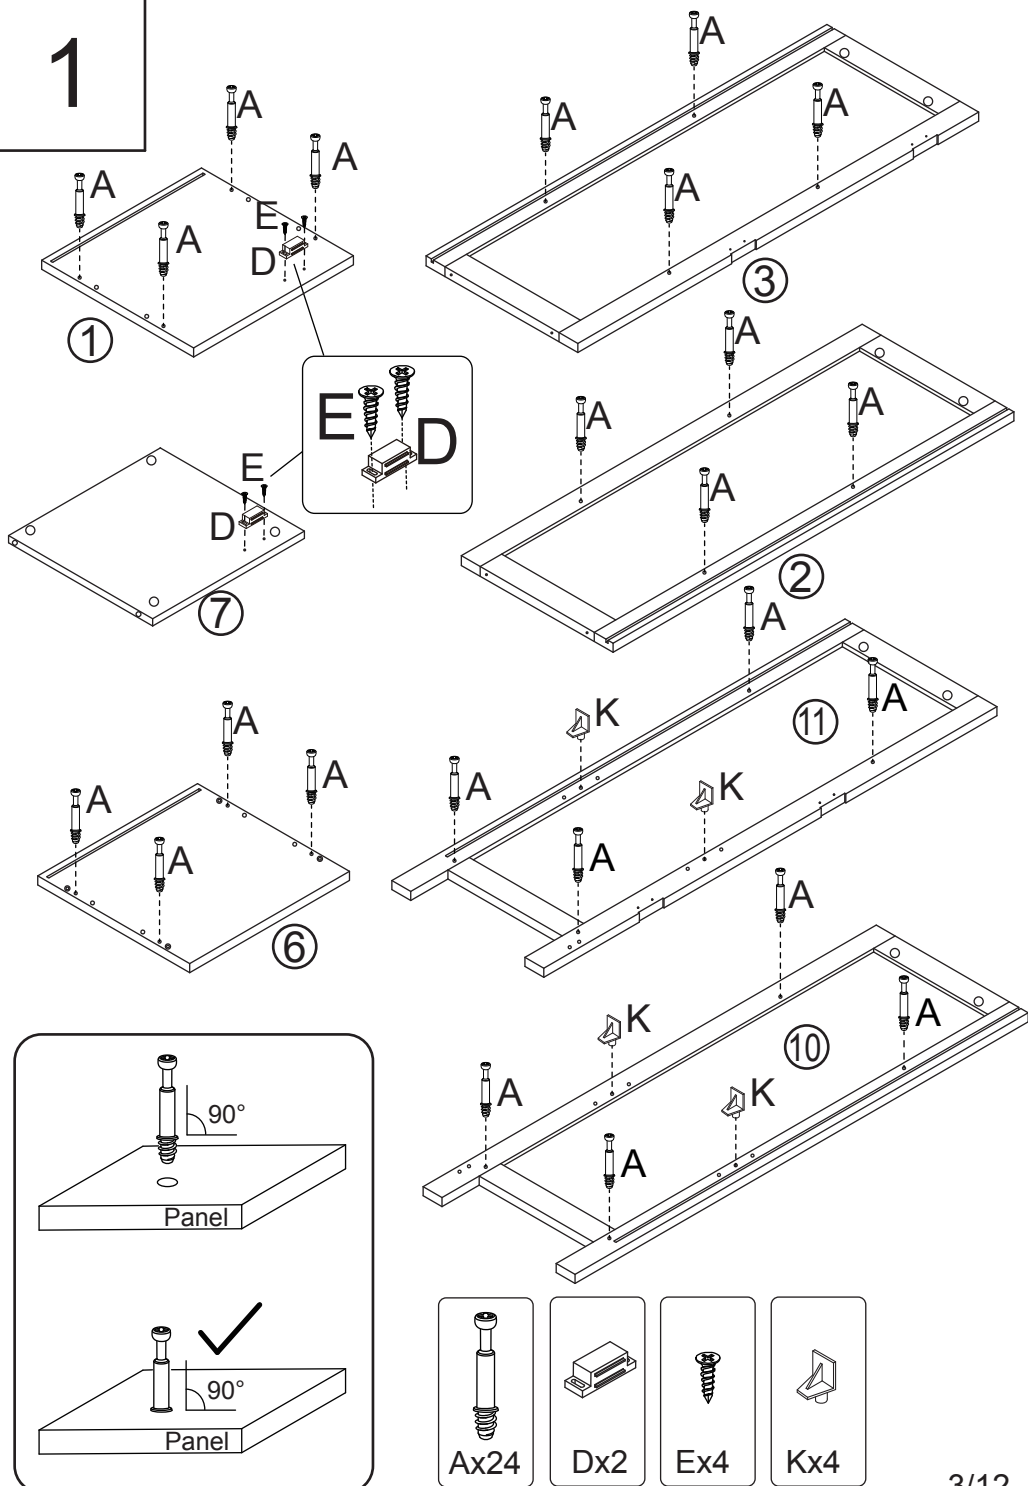


2

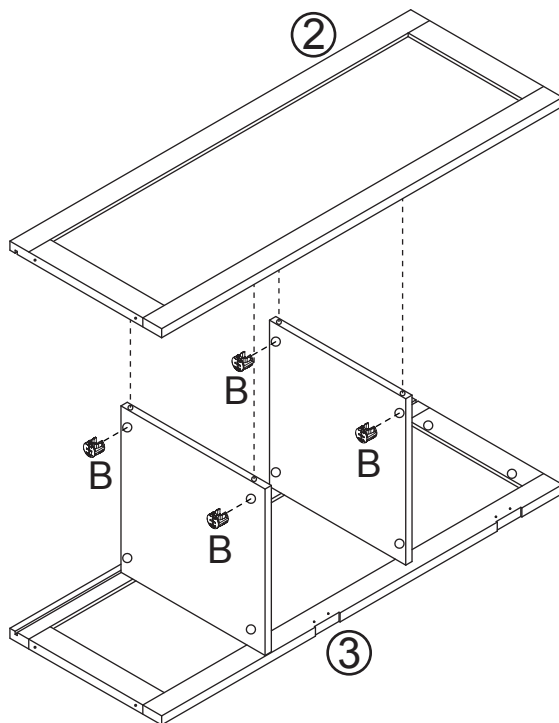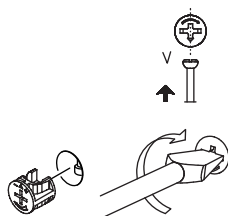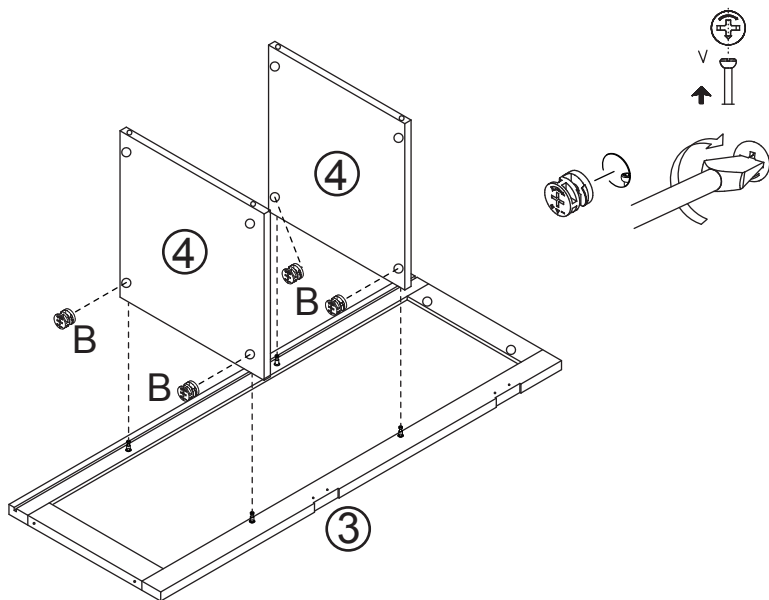



Bx8

3

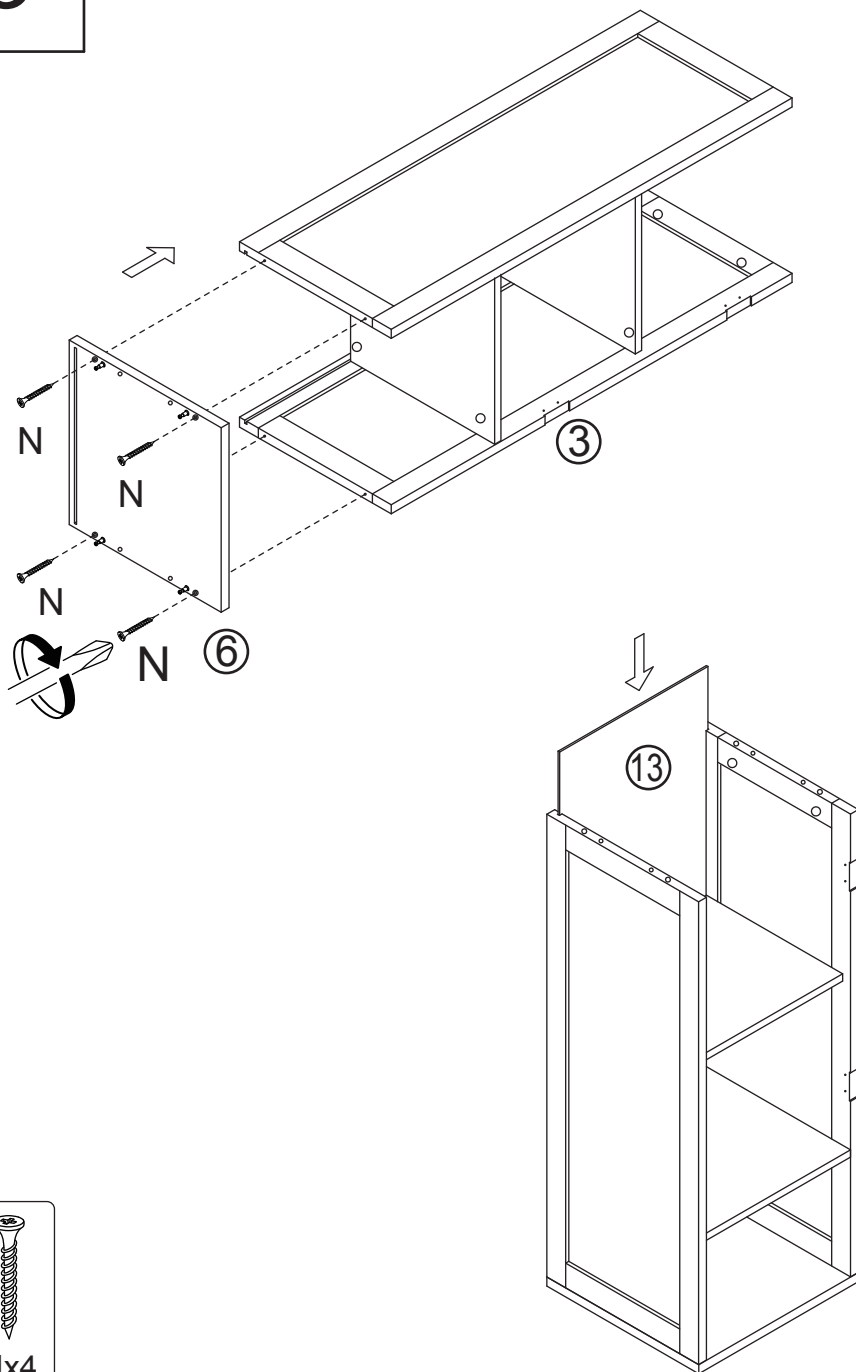

Nx4

4

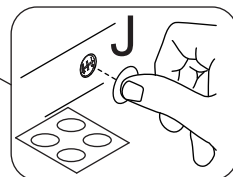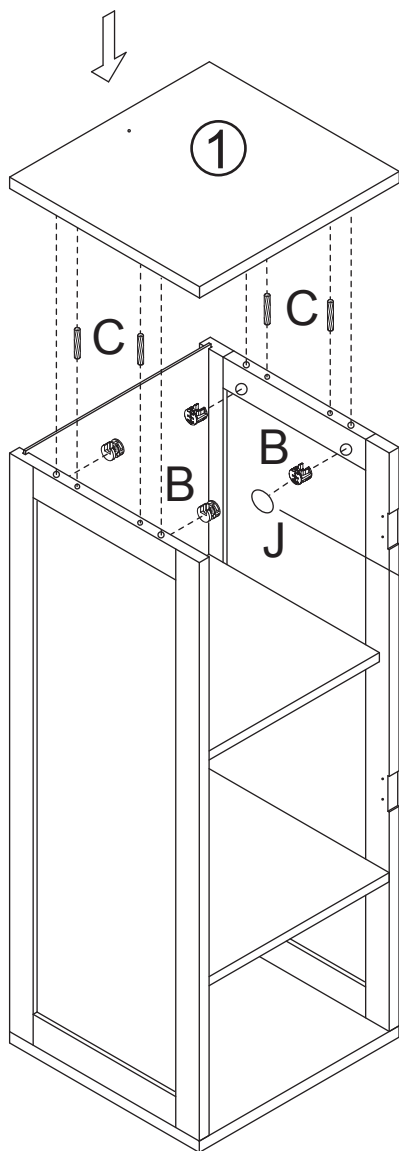

Bx4




Cx4







Jx4

5

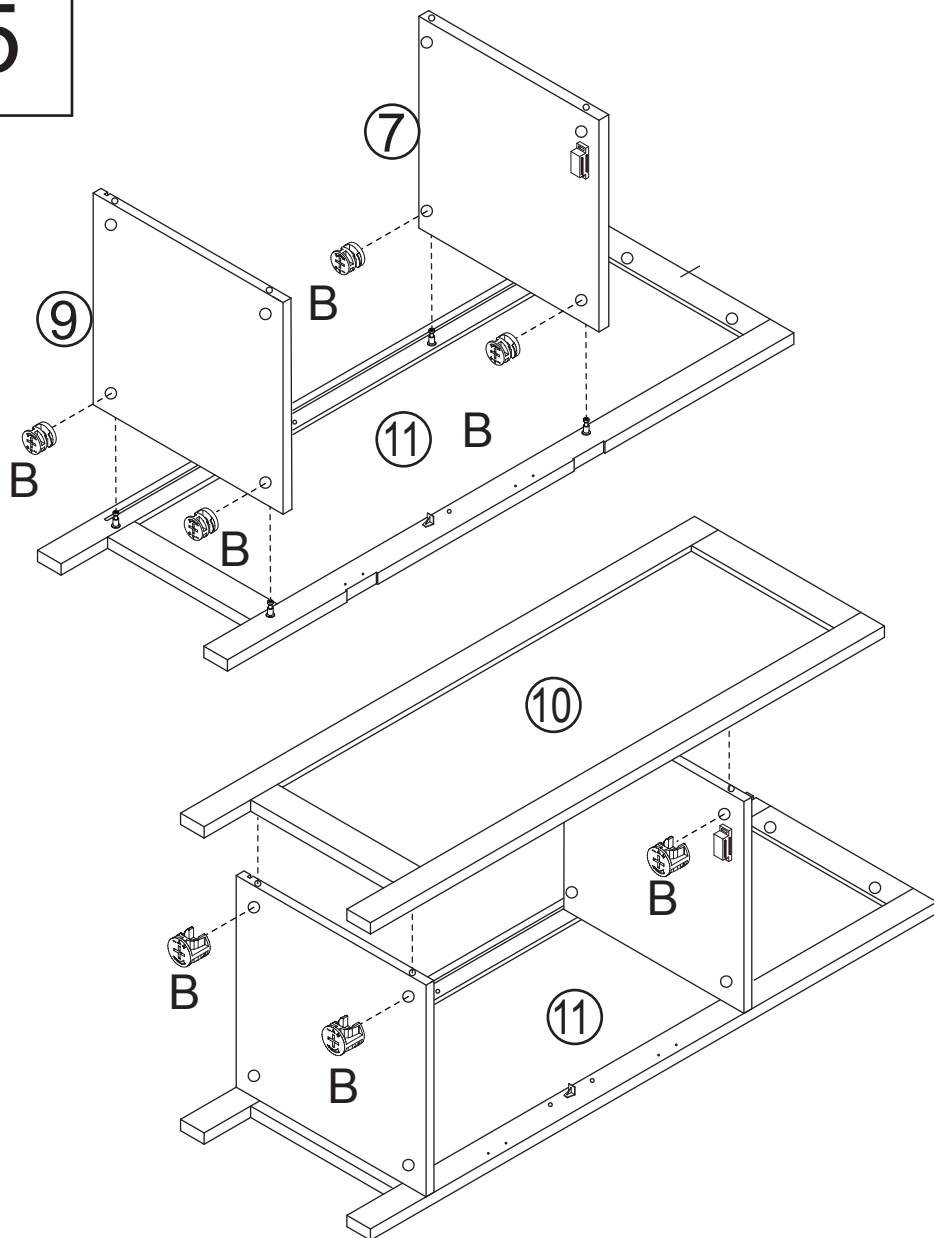

Bx8

6

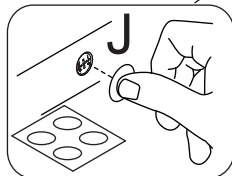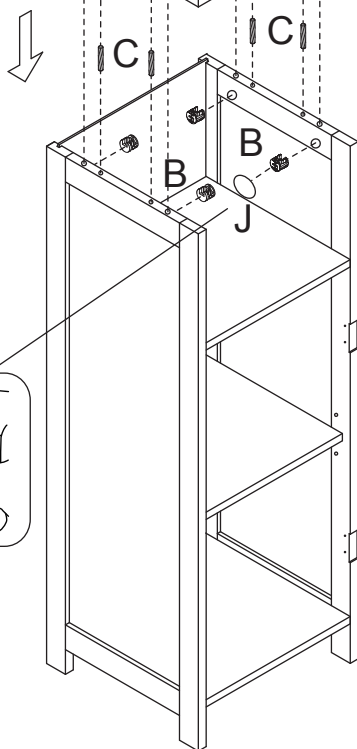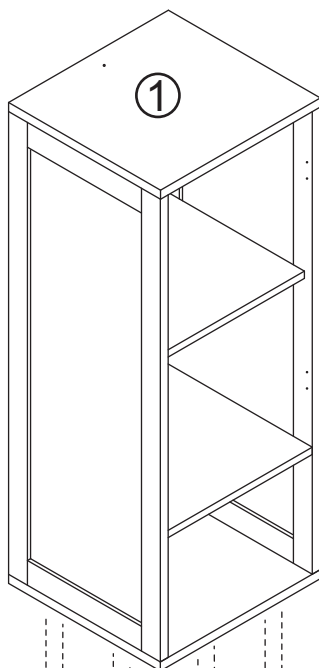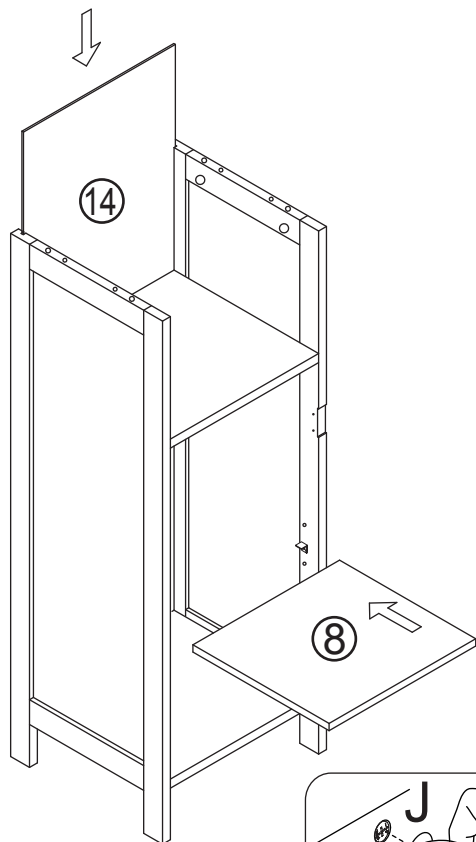

Bx4









Cx4




Jx4

7

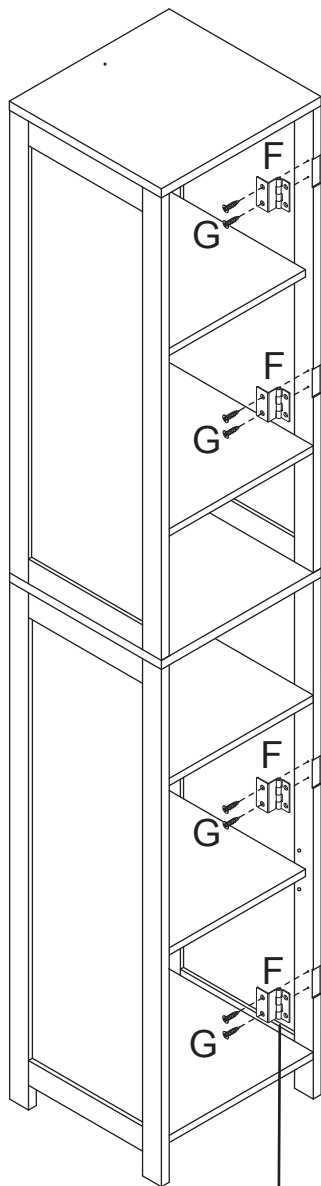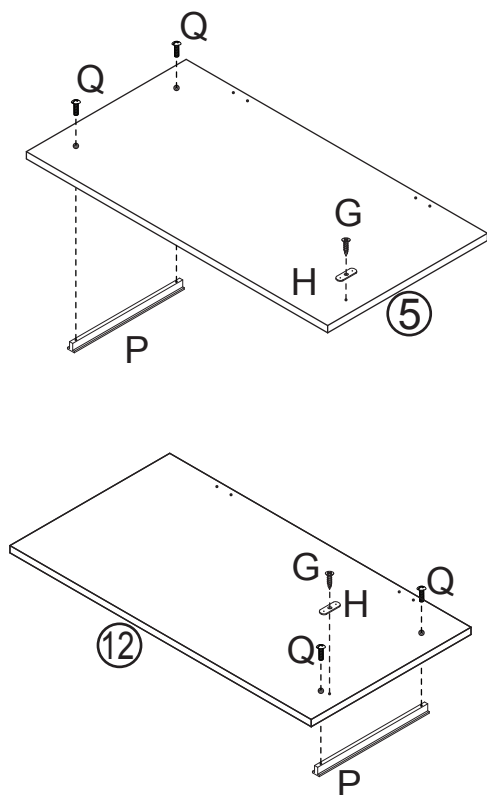

S'assurer de fixer les charnières sur la structure dans un premier temps, ensuite fixer les portes.
Please make sure to fix hinges on frame first, then to fix on door.

8


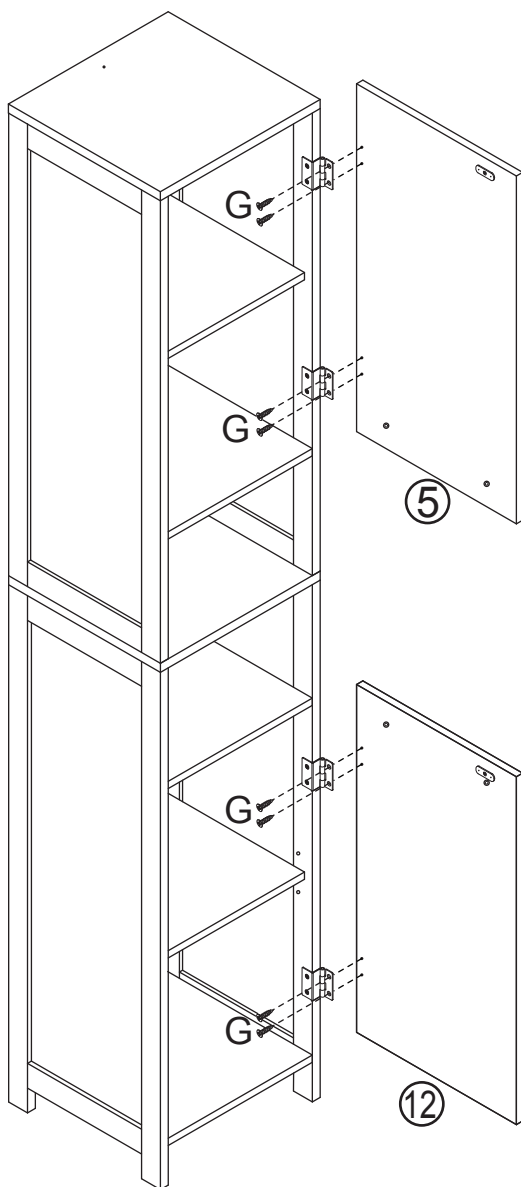


Gx8

9

Avant de fixer "I",
s'assurer que la dimension "XX=YY".



Before fix "I",
please make sure size "XX=YY".

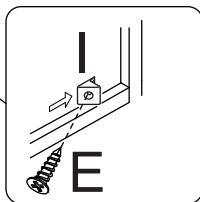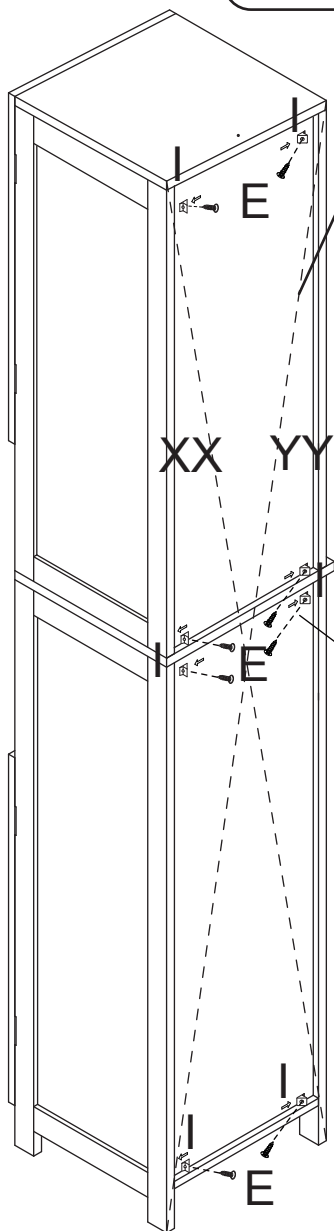

Ex8



Ix8

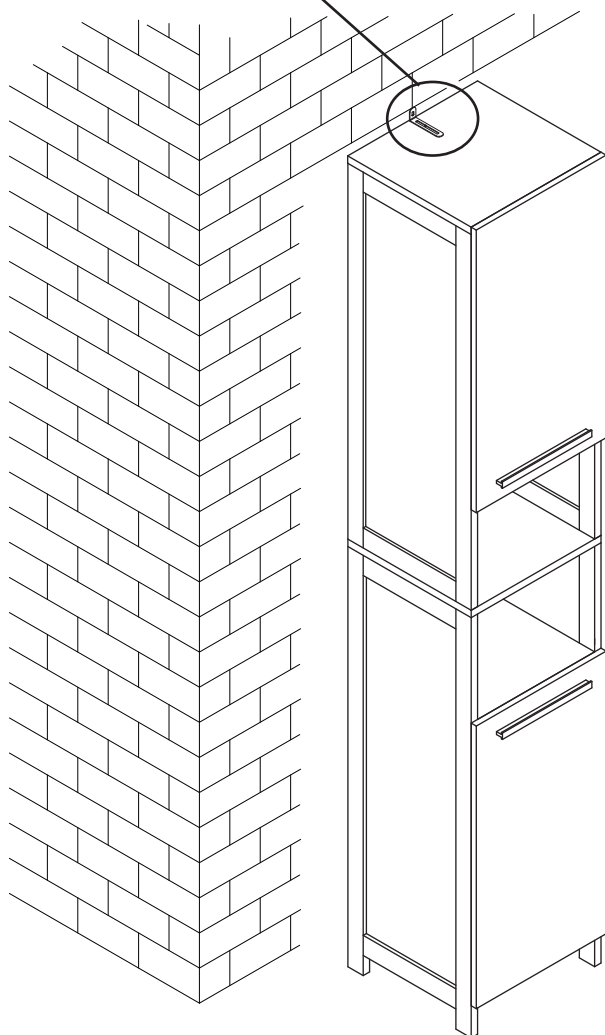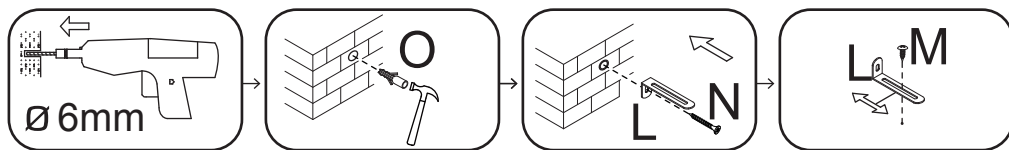

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it