
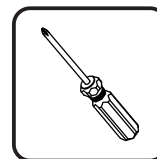
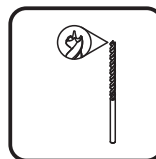
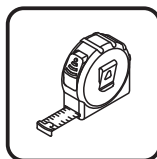
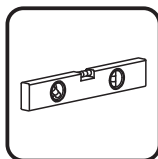


# PawHut

INdba027V03\_GL

**D06-030\_D06-071**

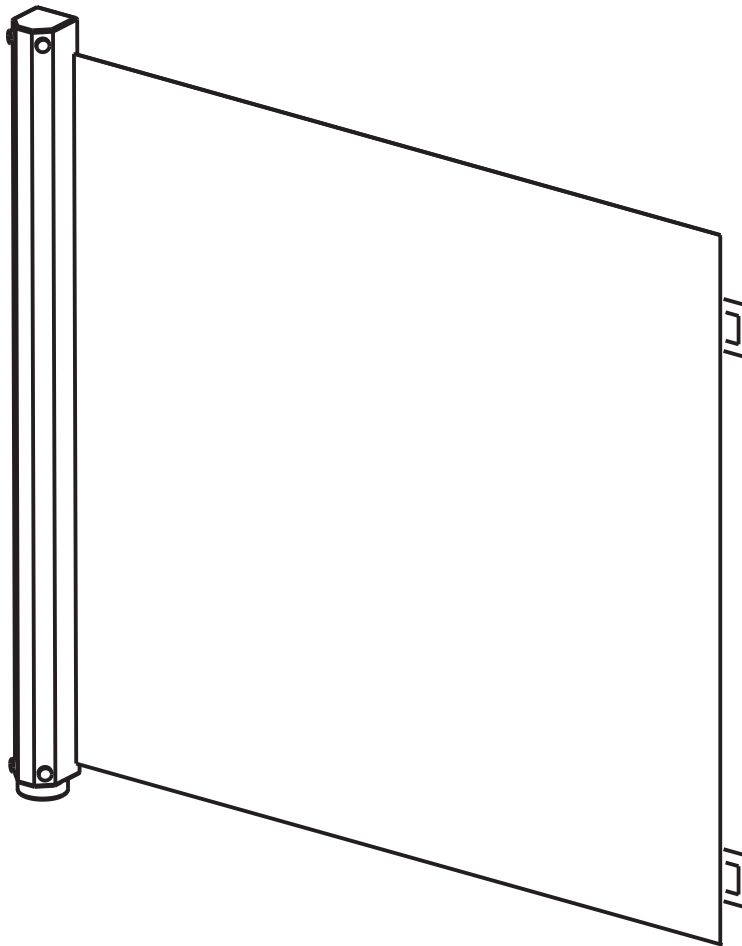


**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**

**Tools Recommended**


## ASSEMBLY & INSTRUCTION MANUAL

**PARTS**

**A** x 1



**B** x 2




**HARDWARE**


**E** x 4  
M4\*12




**F** x 2  
M4\*25  
+2(spare)






**M** x 4  
M4\*25

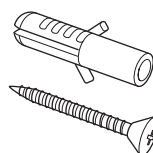

**N** x 2  
M5\*40

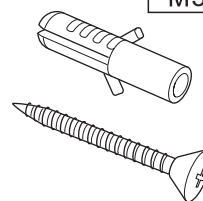

**WALL**

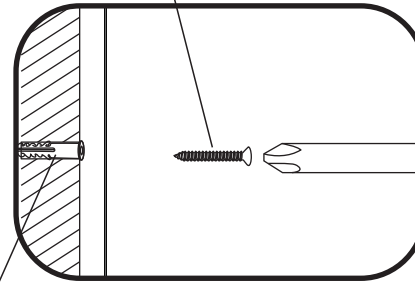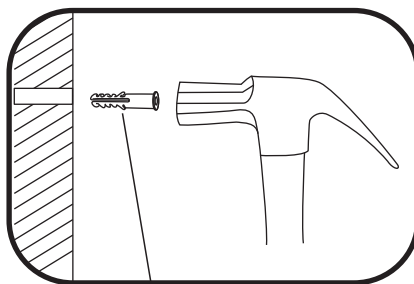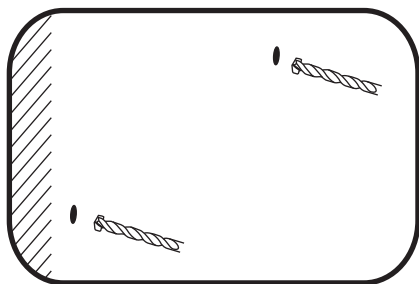


**M N**

**M N**

**M N**

**WOOD**

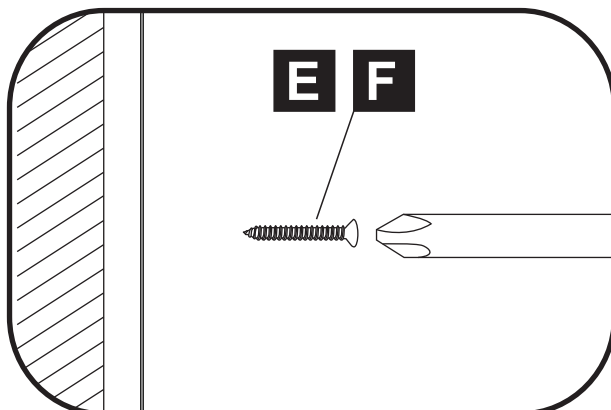

**E F**

