


# PawHut

INdba040V02\_GL

**D06-079**

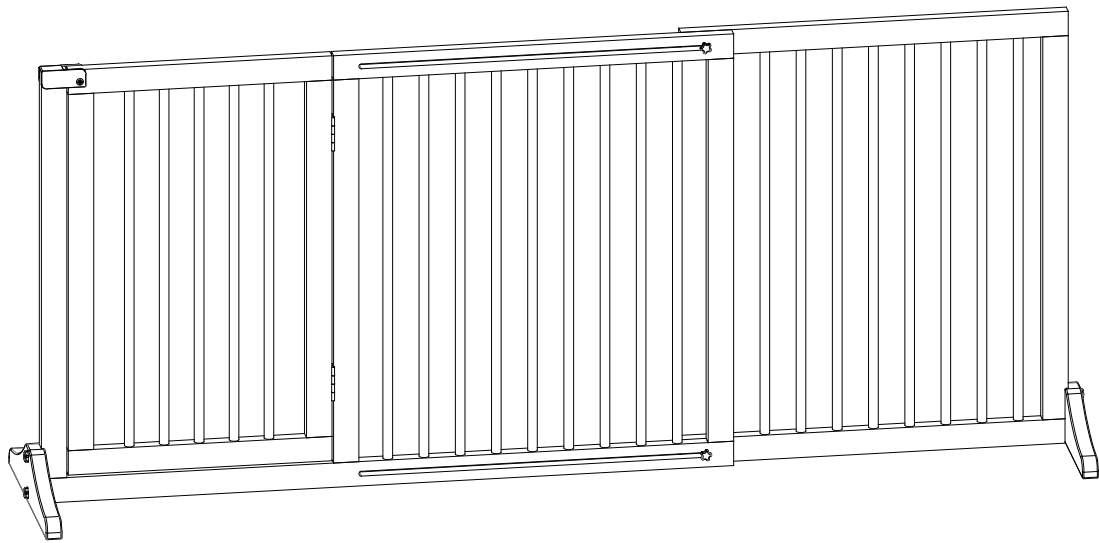


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

## ASSEMBLY & INSTRUCTION MANUAL


**PARTS**

**HARDWARE**


**1** x 1

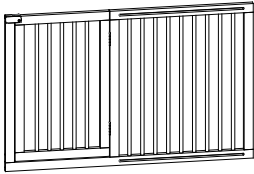


**2** x 1

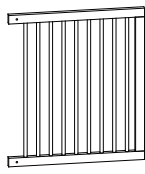

**3** x 2




**A** x 6  
M6\*35  
+1(spare)



**01**

**1** x 01



**2** x 01




**A** x 02



M6.0\*35

**1**

**2**

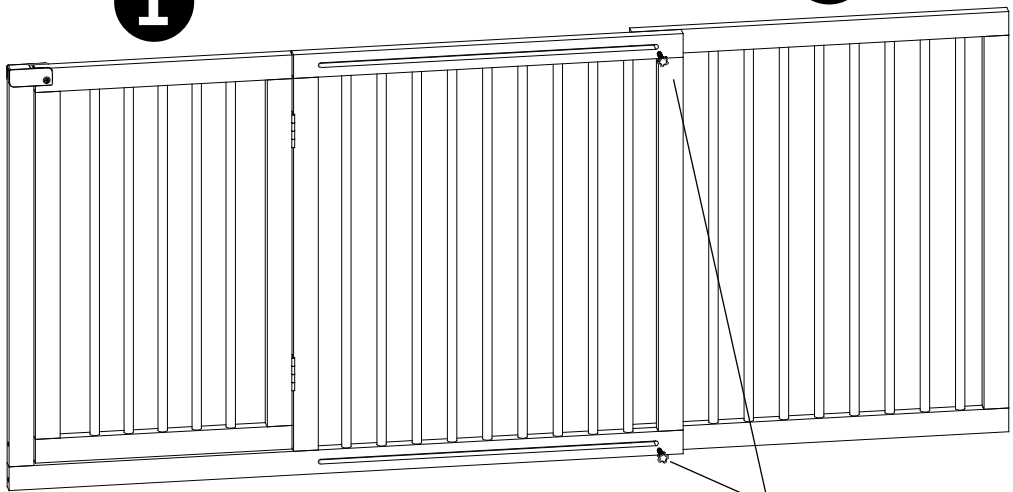

**A x 2**

**02**


**3** x 02



**A** x 04



M6.0\*35

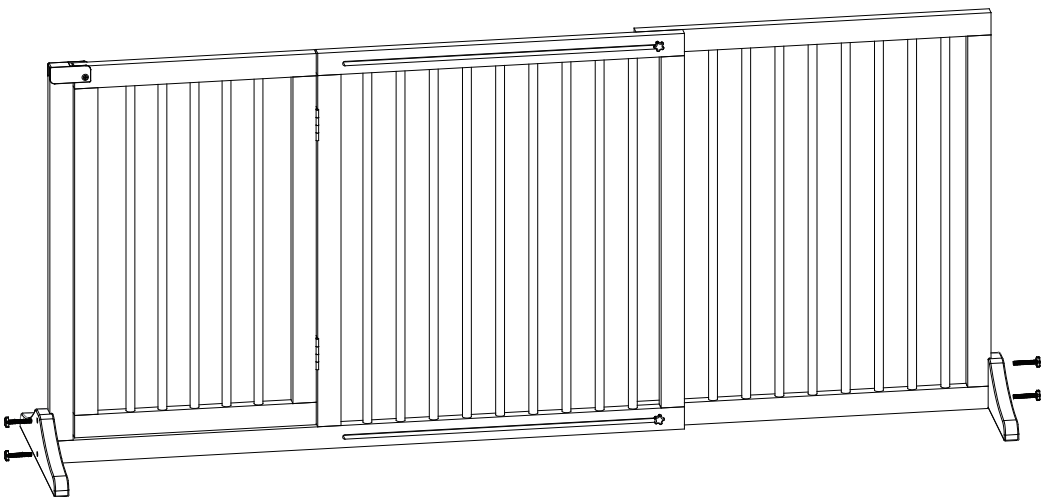

**A x 2**

**A x 2**

**Done**