


PawHut

INdbd010_GL


D04-189

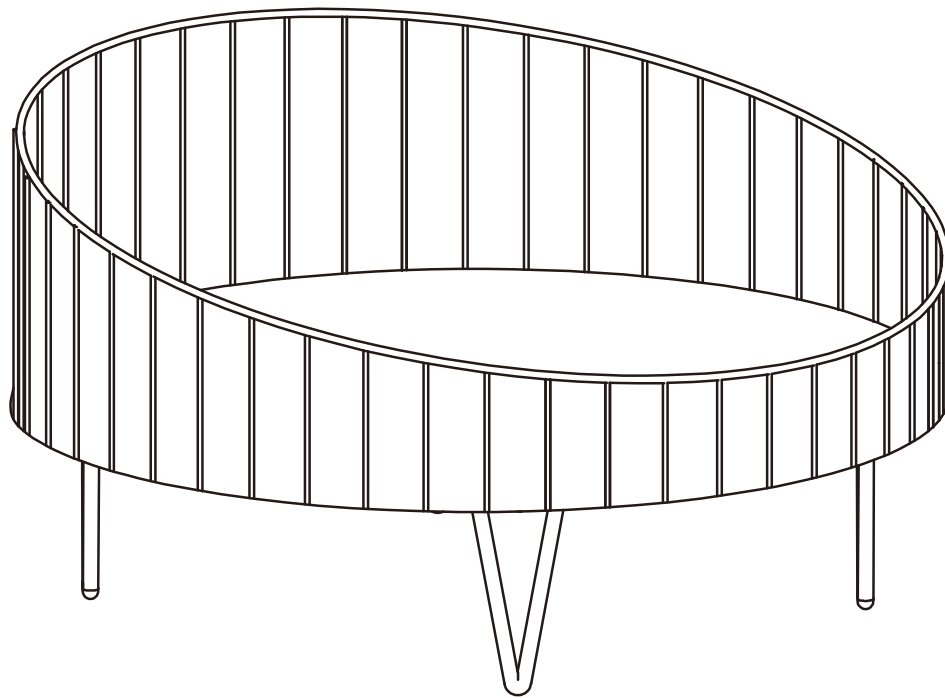


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL


1 x01

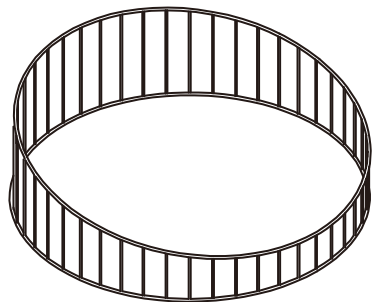


2 x04

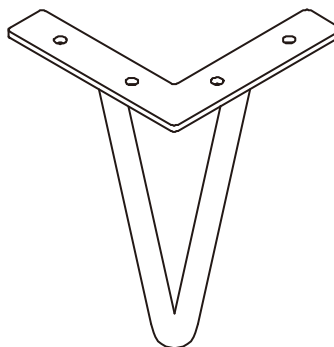

3 x01




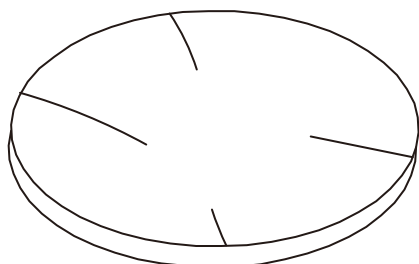


A x16+1(spare)

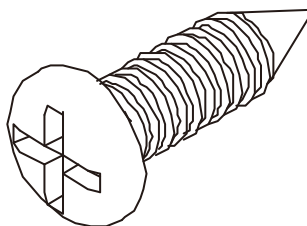

M4*16

 AX16

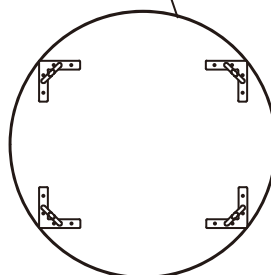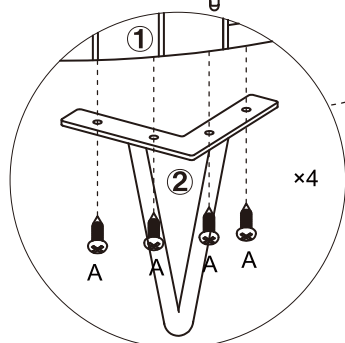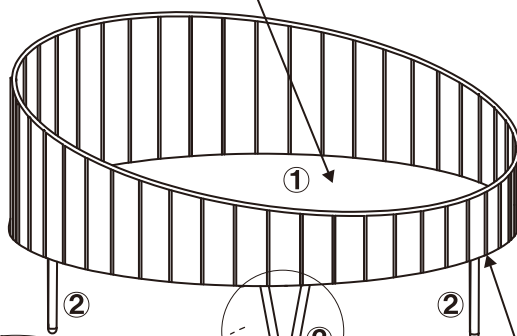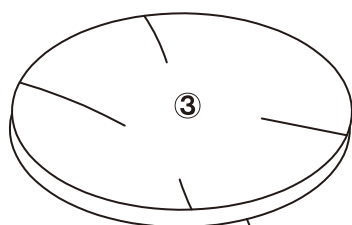

Back