


# PawHut

INdbd018\_GL


**D04-239**

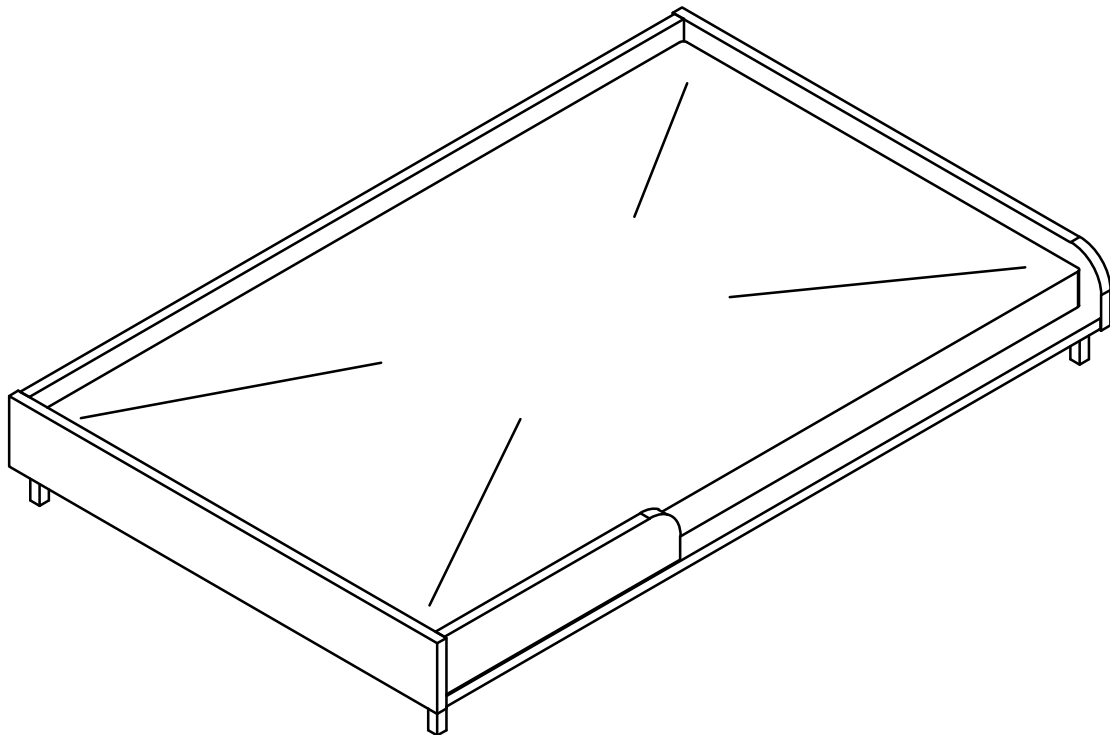


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

## ASSEMBLY & INSTRUCTION MANUAL


① x 1

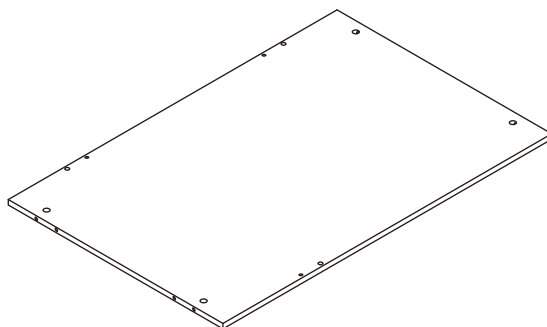


② x 1

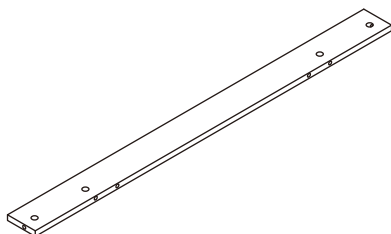


③ x 1

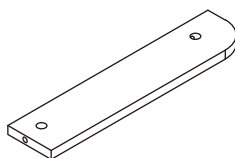


④ x 1

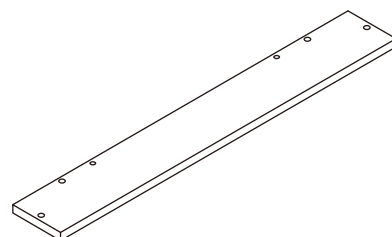


⑤ x 1

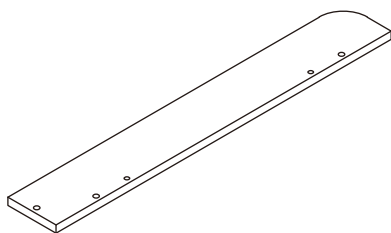


⑥ x 1

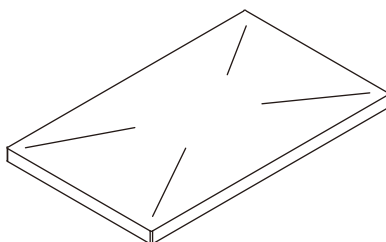


⑦ x 1

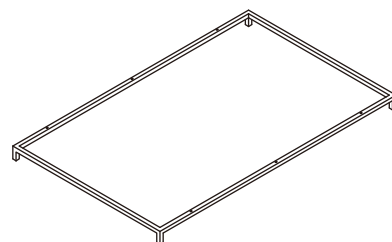


**A** x10  
M13\*11  
+1(spare)

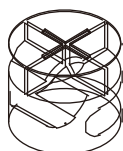


**B** x10  
M8\*32  
+1(spare)

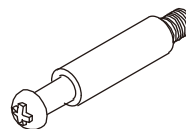

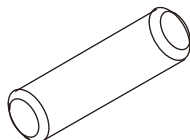


**C** x 7  
M8\*40  
+1(spare)

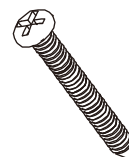


**D** x 6  
M3.5\*25  
+1(spare)




-  BX10
-  CX7

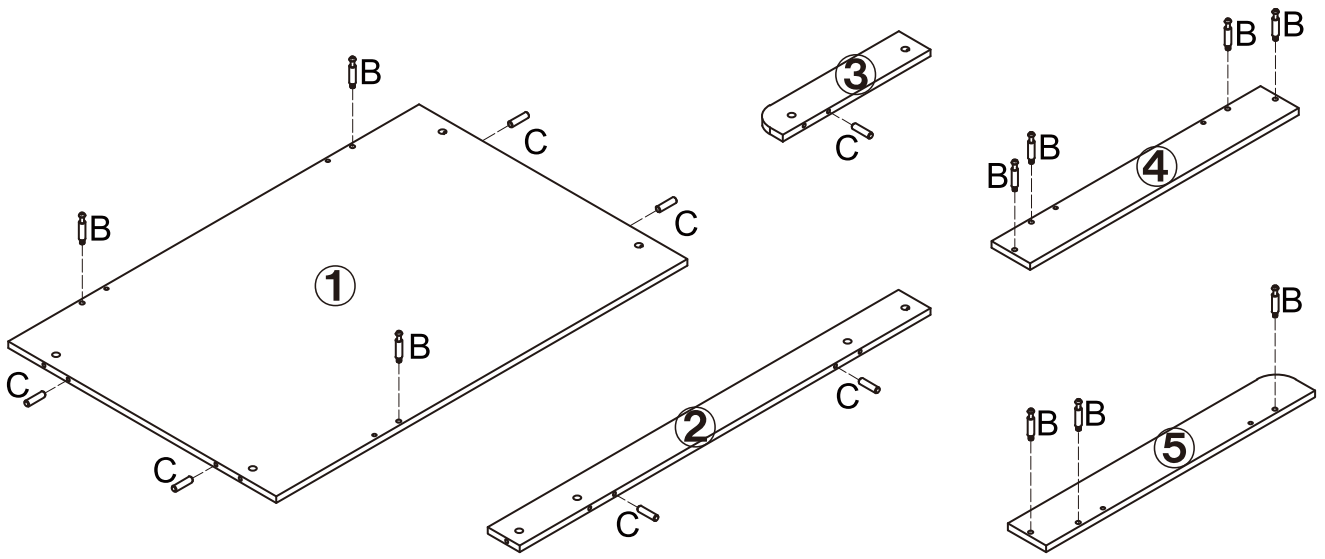

-  AX3

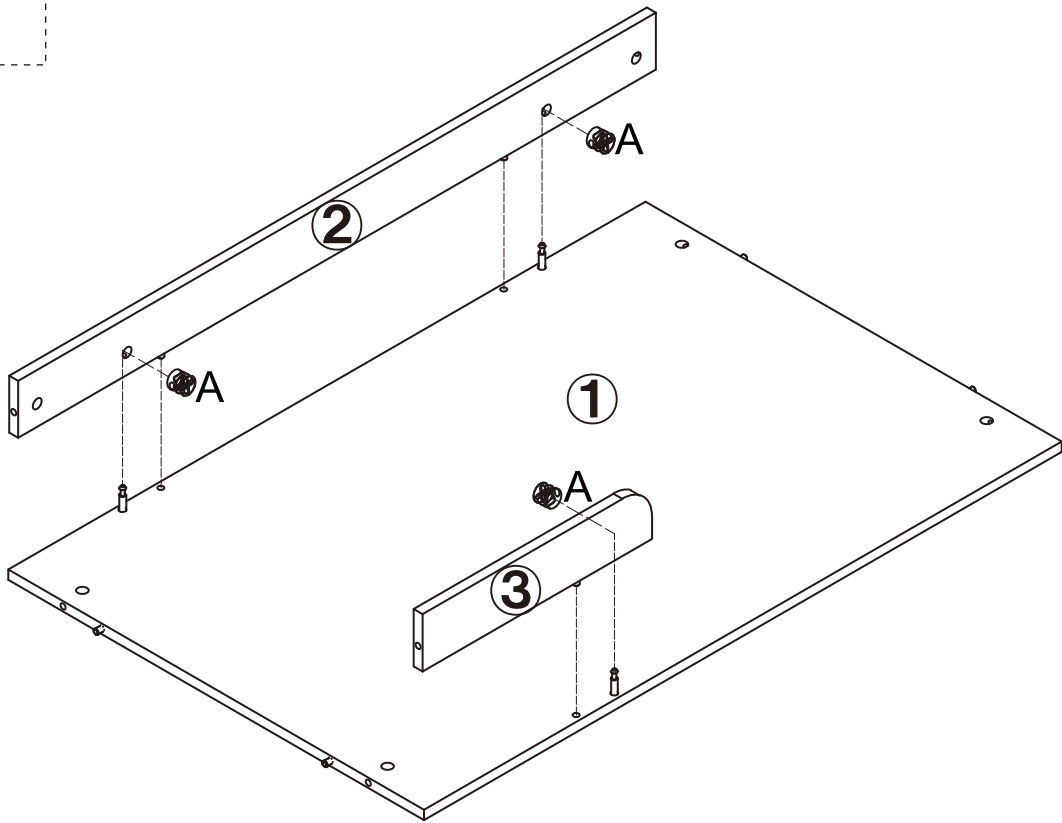

AX7

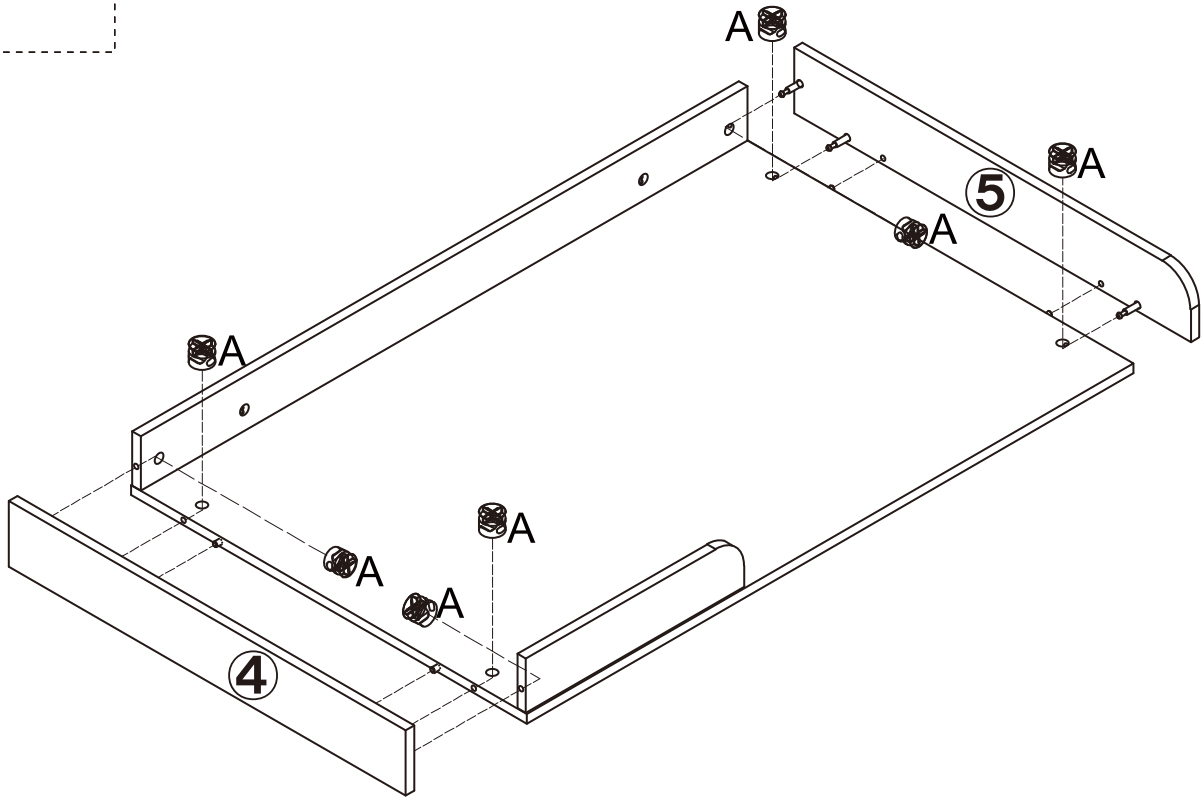

DX6

