


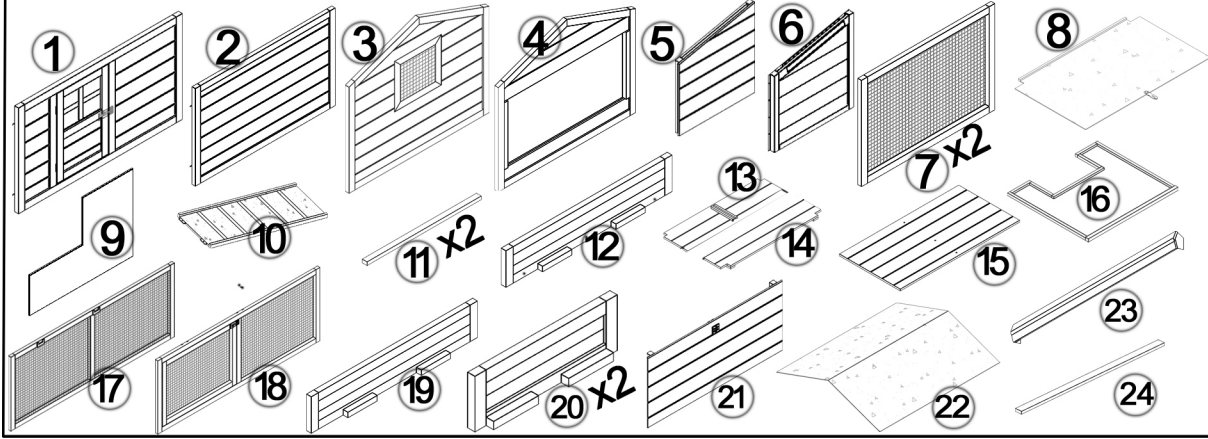
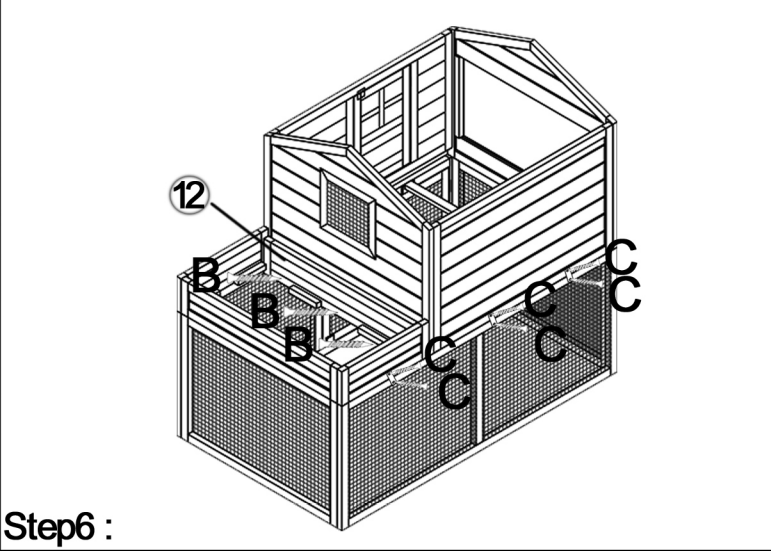
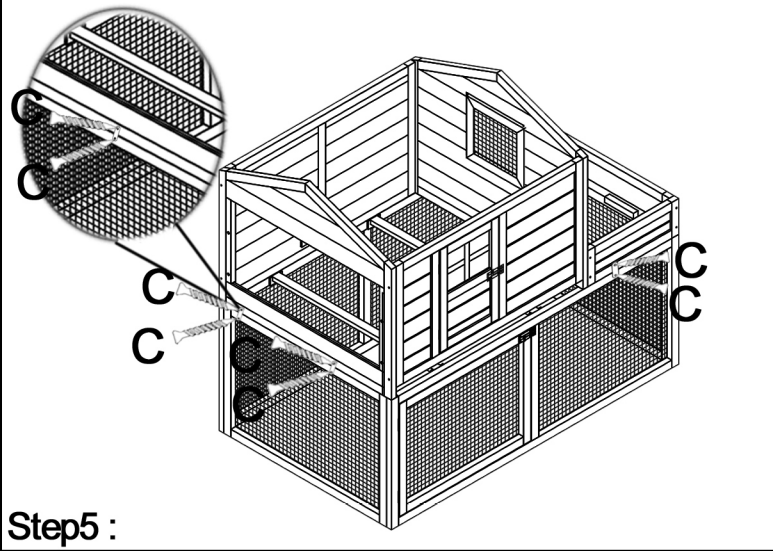
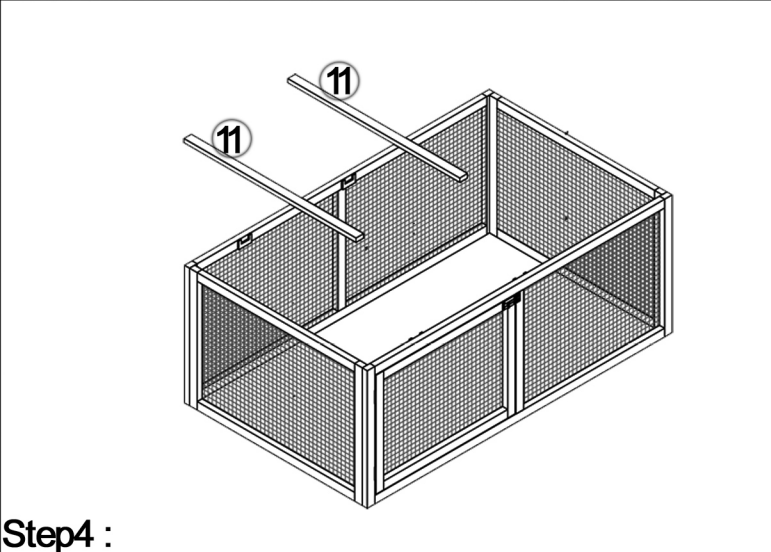
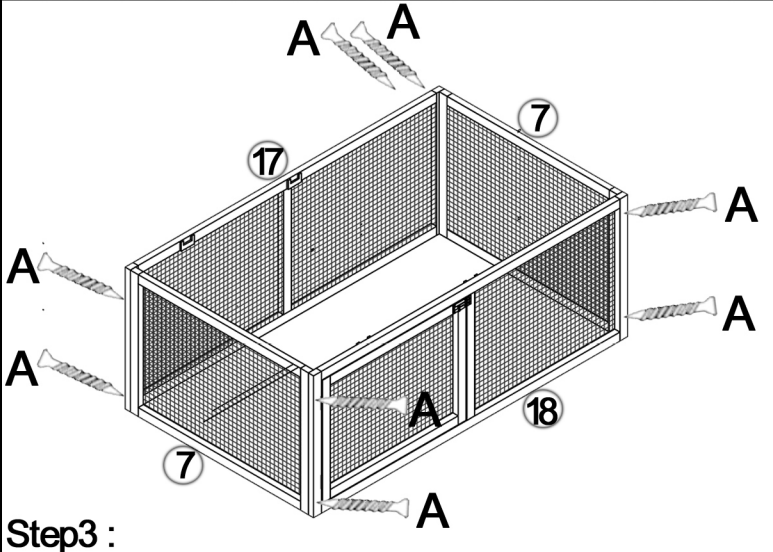


# PawHut® D51-007 Assembly Instructions

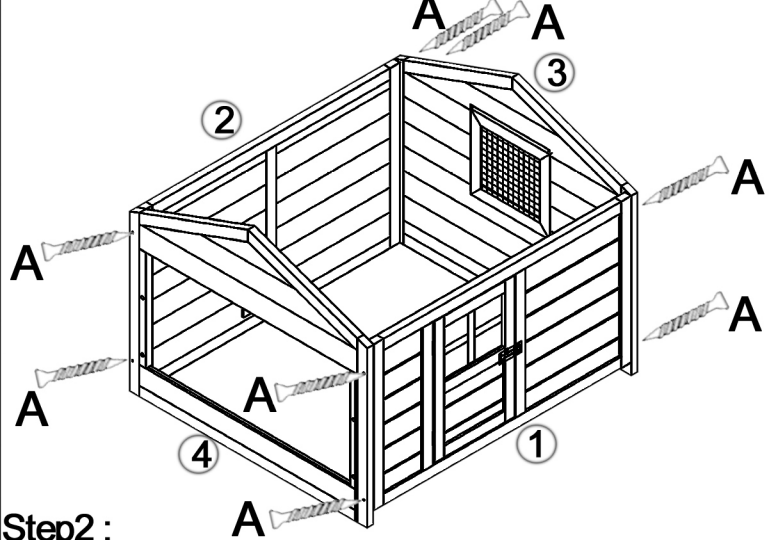


- A** 3.5\*40 28PCS
- B** 3.5\*35 7PCS
- C** 3.0\*16 14PCS  
3.0\*16 6PCS
- D** 3.0\*25 4PCS
- M6\*50** 4PCS

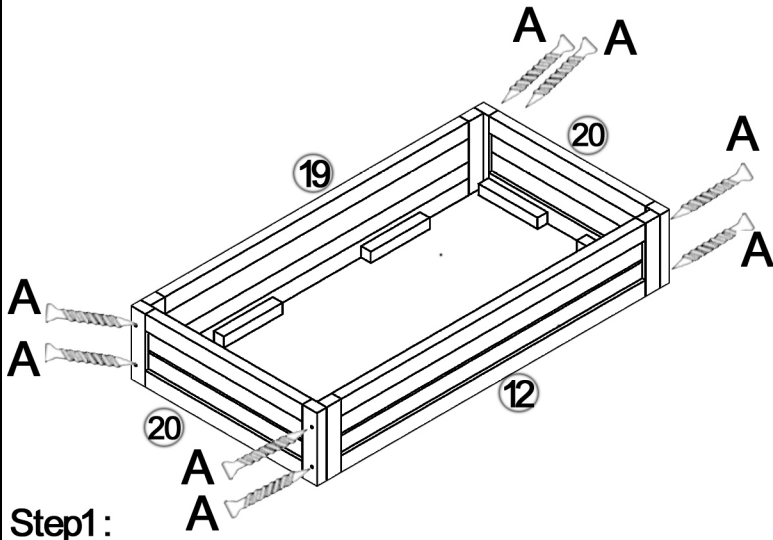


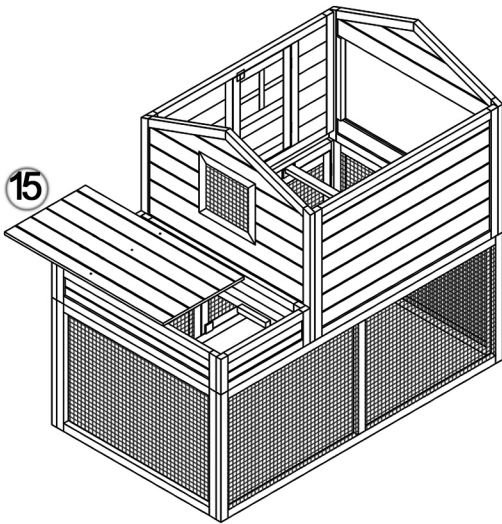


Step7 :

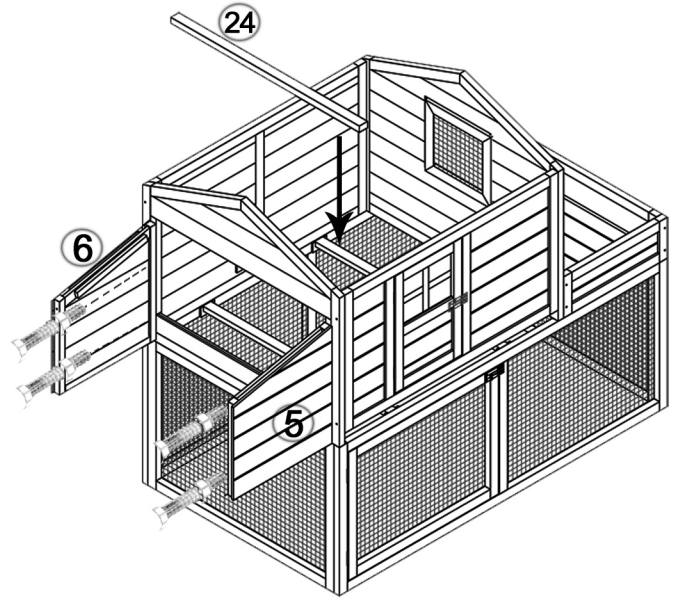


Step8 :

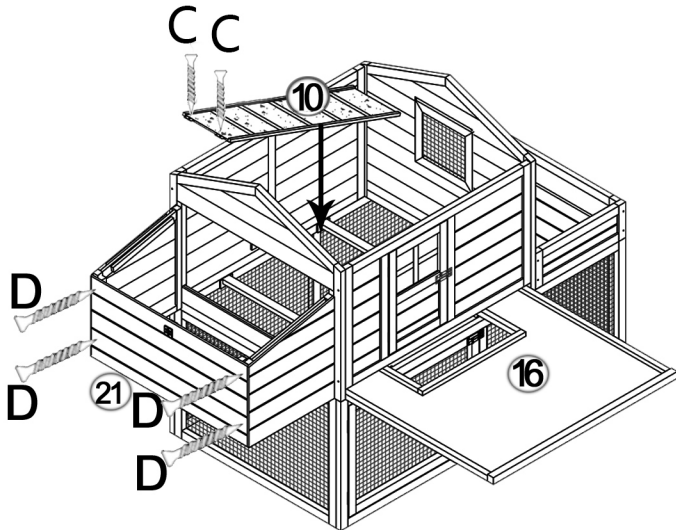

Step9 :

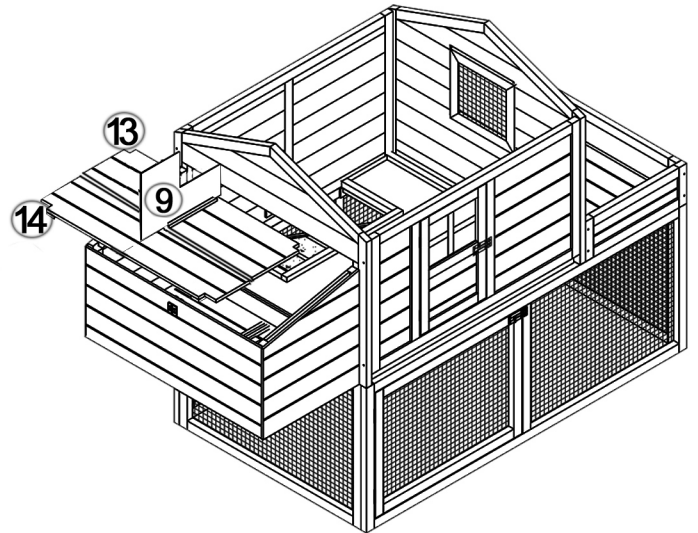

Step10 :

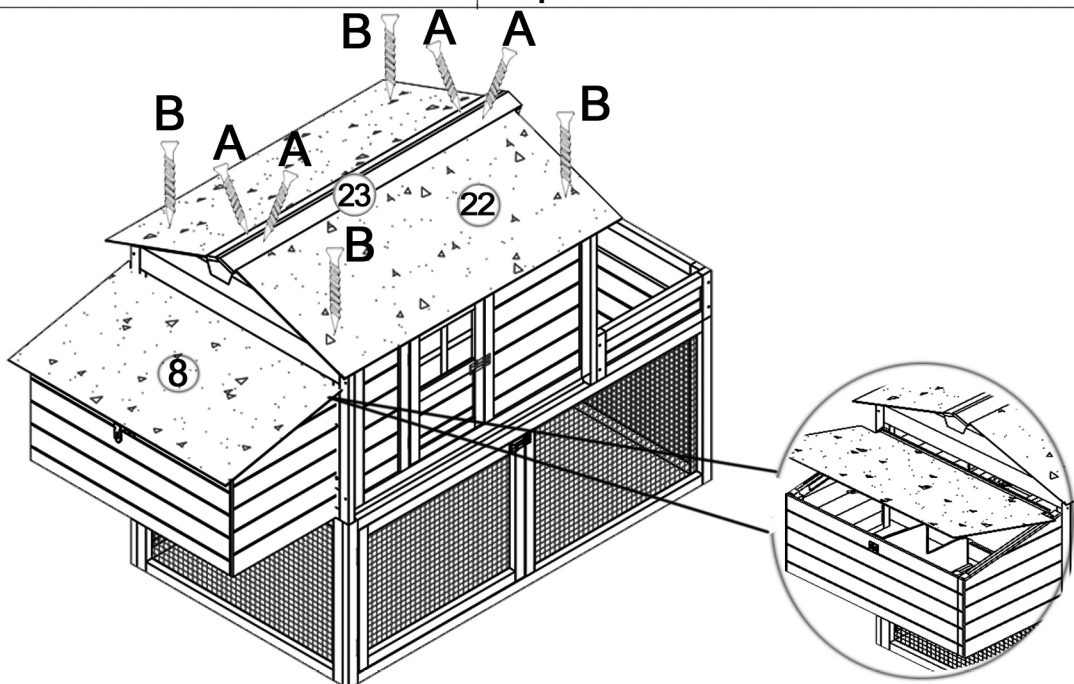

Step11 :