



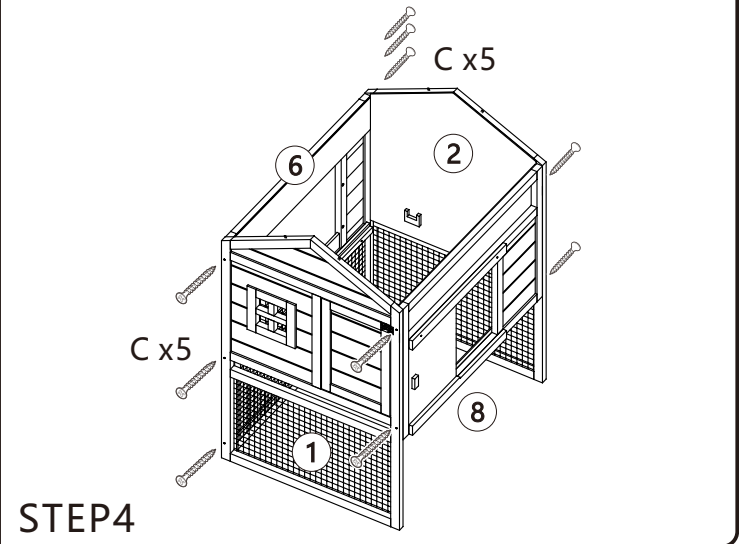
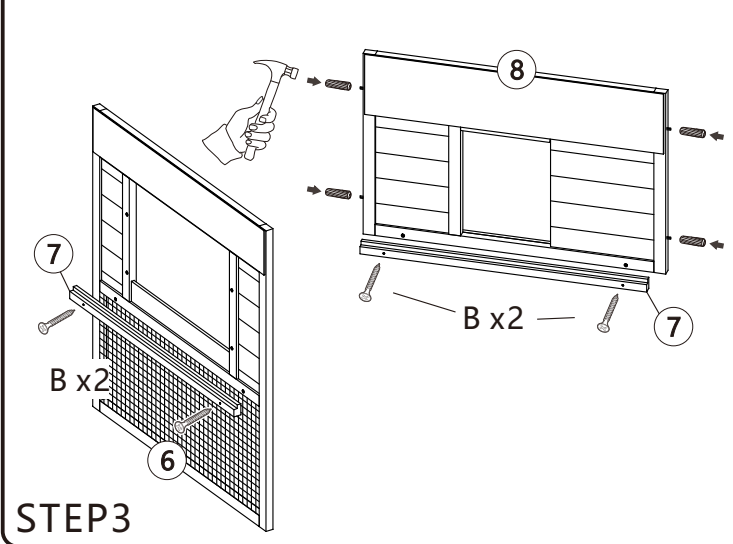
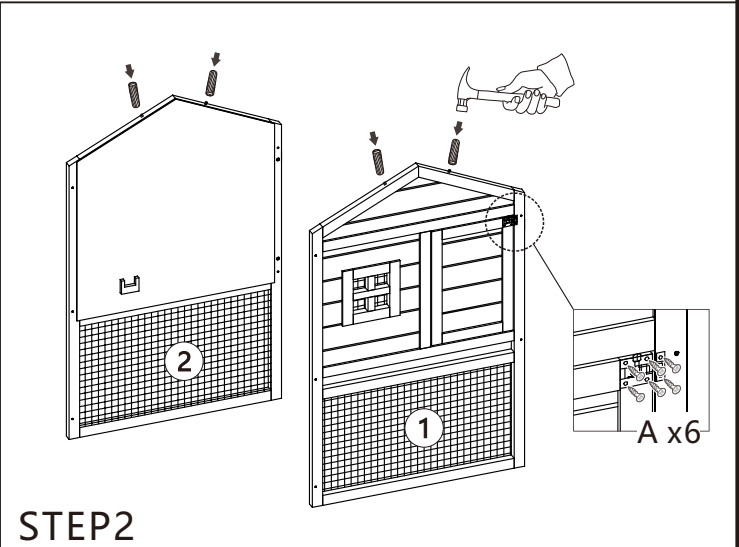
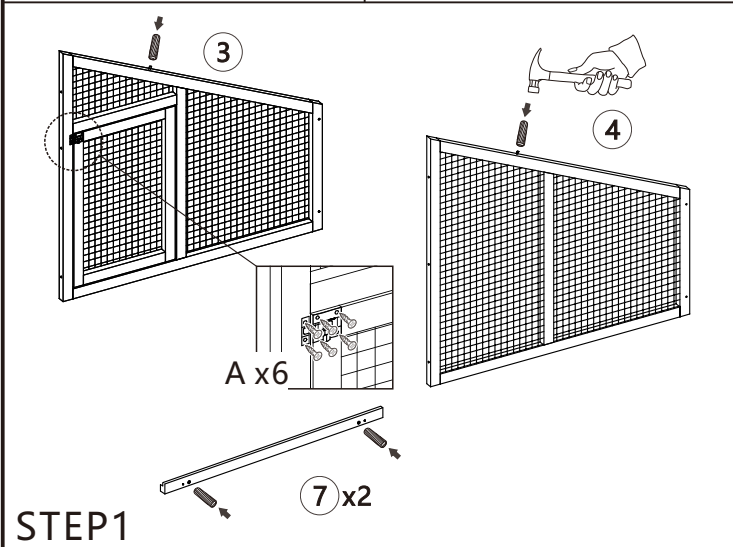
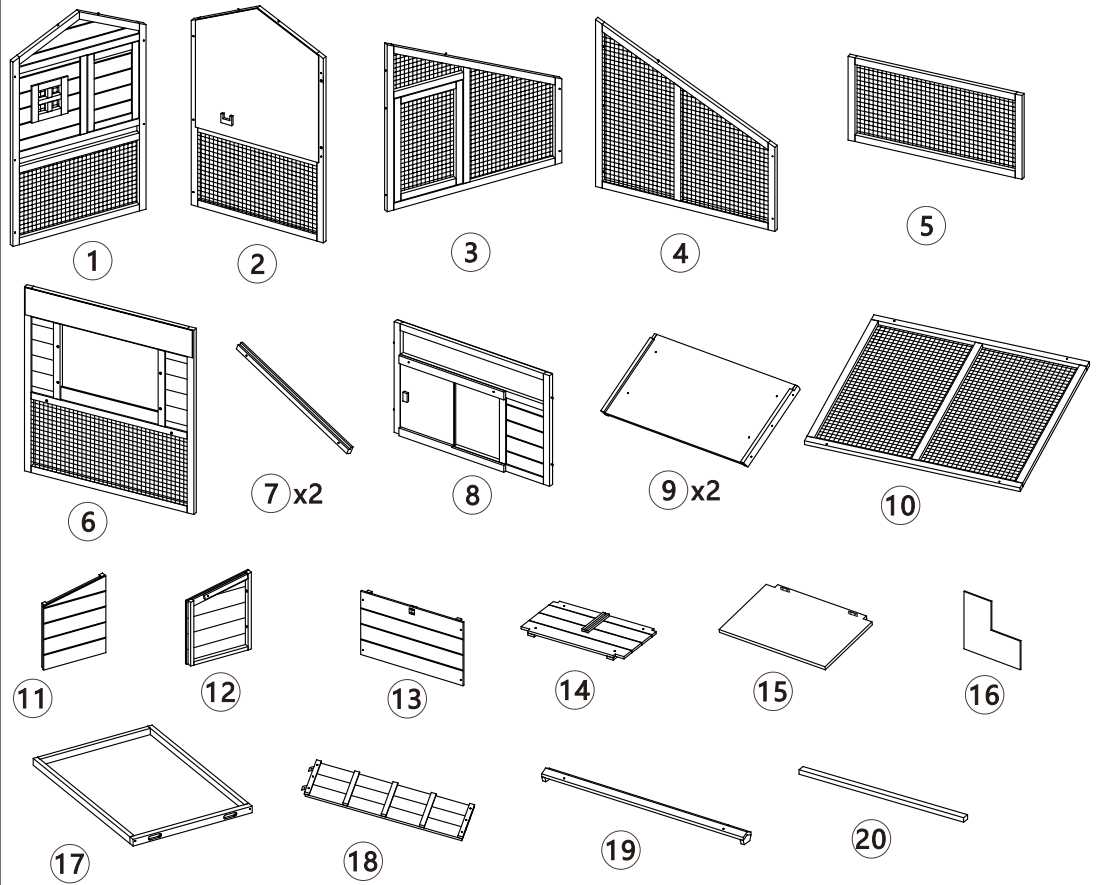
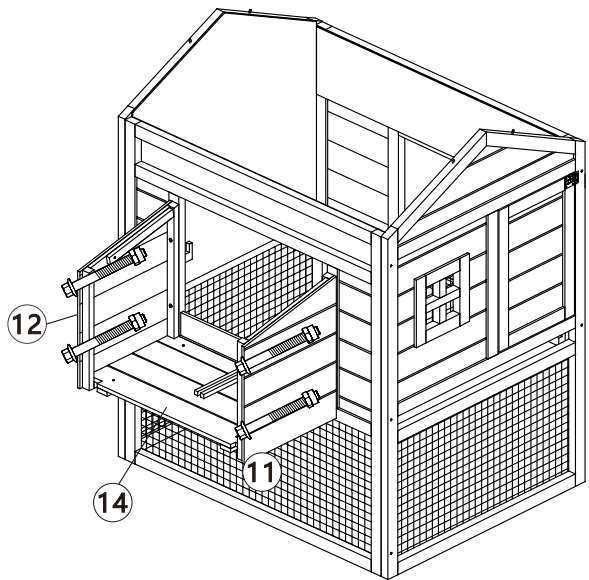



PawHut D51-135 Assembly Instructions

	A 3.0*12	12PCS
	B 3.0*38	4PCS
	C 3.5*40	18PCS
	D 3.0*20	4PCS
	E 3.0*16	6PCS
	F 3.5*50	6PCS
	G 3.5*30	8PCS
	H 3.5*25	4PCS
	M6*45	4PCS
		2PCS
		14PCS







STEP5

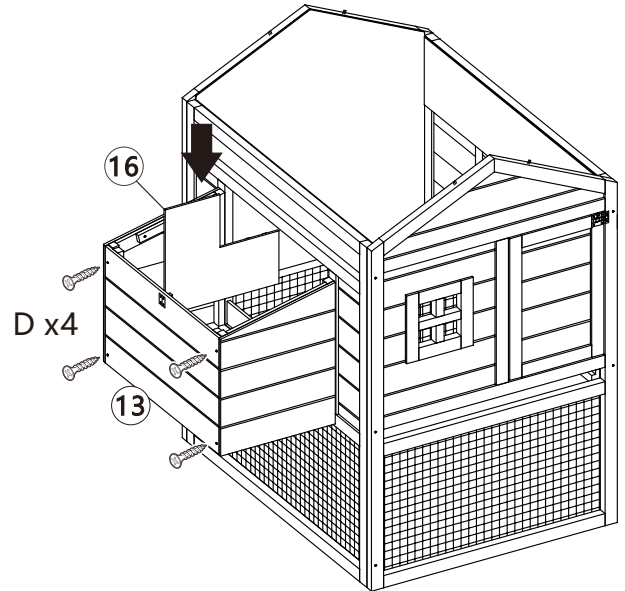


STEP6

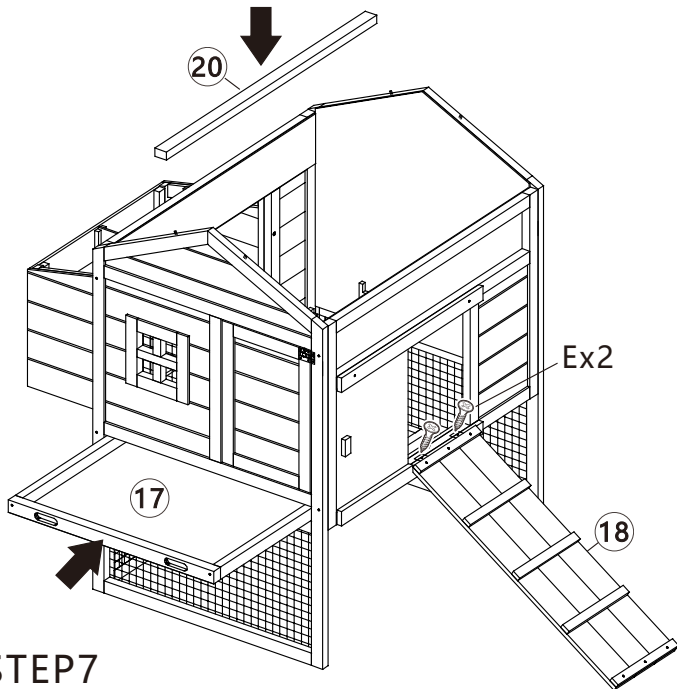


STEP7

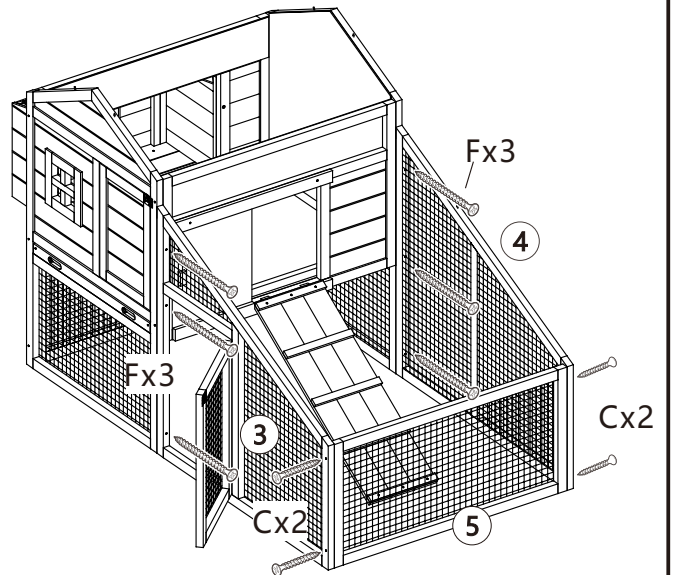

STEP8

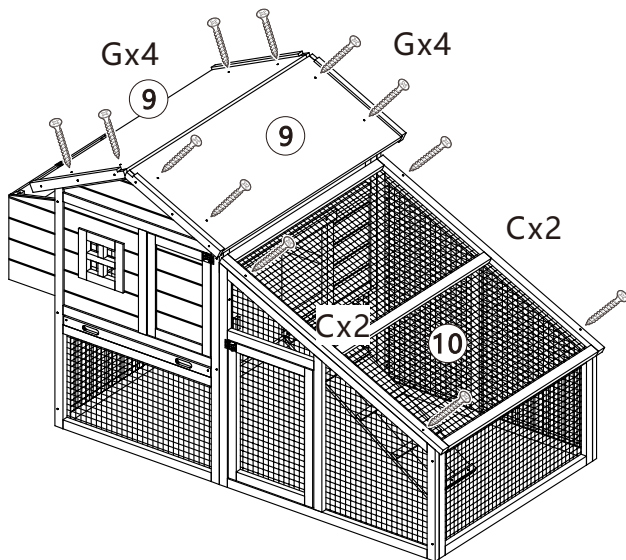

STEP9

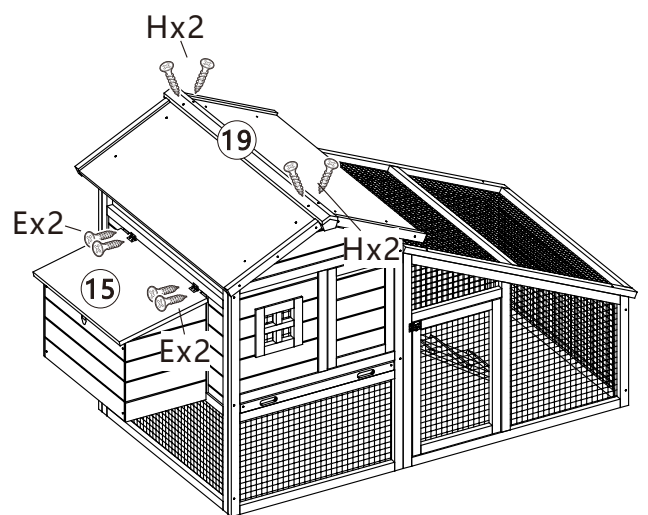

STEP10