

Assembly Instructions



Pawhut LUXURY FERRET CAGE


Item # D51-113

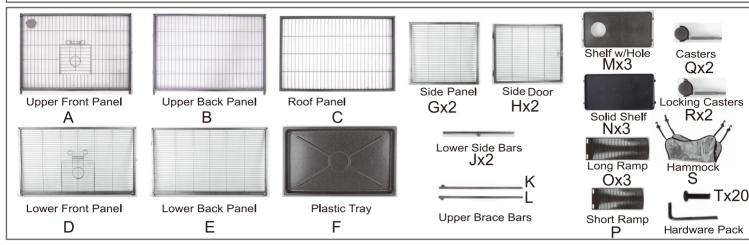

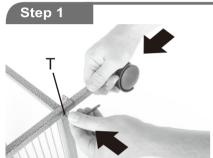

Connect the Lower Back Panel and the Lower Front Panel with the Side Bars. Insert the Casters into the Front and Back Panels before tightening the bolts into the Side Bars. Make sure the grooves for the plastic tray are facing towards the inside of the cage.


Tip: Do not fully tighten bolts until all panels are in place.

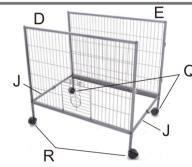

Step 2



Attach the Lower Side Panel to the left side of the cage using 2 bolts at the bottom of the frame only.

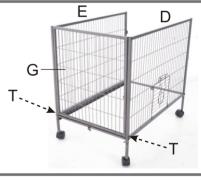

Step 3



Add the Upper Front Panel and Upper Back Panel to the lower portion of the cage by inserting each panel into the slots provided.

Then screw in the top bolts into the top of the Lower Side Panel.





Connect the Upper Side Panel to the upper front and back panels using 4 bolts.

Step 5




Attach the Upper Brace Bars between the front and back assembled panels on the right side.

Tip: The tabs should be facing towards the inside of the cage.



Step 6

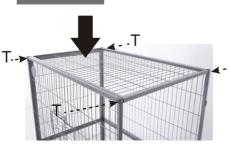


Lower Roof Panel into place and attach with bolts on each corner.

Tighten all bolts used in previous steps.

Step 7



Attach the 2 Side Doors on the right side of the assembled cage by sliding the pegs on the doors into the hinges on the Back Panels.

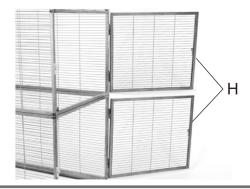

Step 8



Slide the Plastic Tray into slots located on the Lower Side Panels.



Connect the ramps to the bottom of the shelves with the holes.

Step 10









Clip the hammock to the wire on the top panel of the cage in 4 corners. Make sure it is positioned for easy access for your pet.



001-877-644-9366 customerservice@aosom.com



001-855-537-6088 customerservice@aosom.ca



0044-800-240-4004 enquiries@mhstar.co.uk

DE

0049-(0)40-88307530 service@aosom.de



0033-1-84166106 contact@aosom.fr



0034-931294512 atencioncliente@aosom.es



0039-0249471447 clienti@aosom.it