




*PawHut*

D51-159V01


C00000

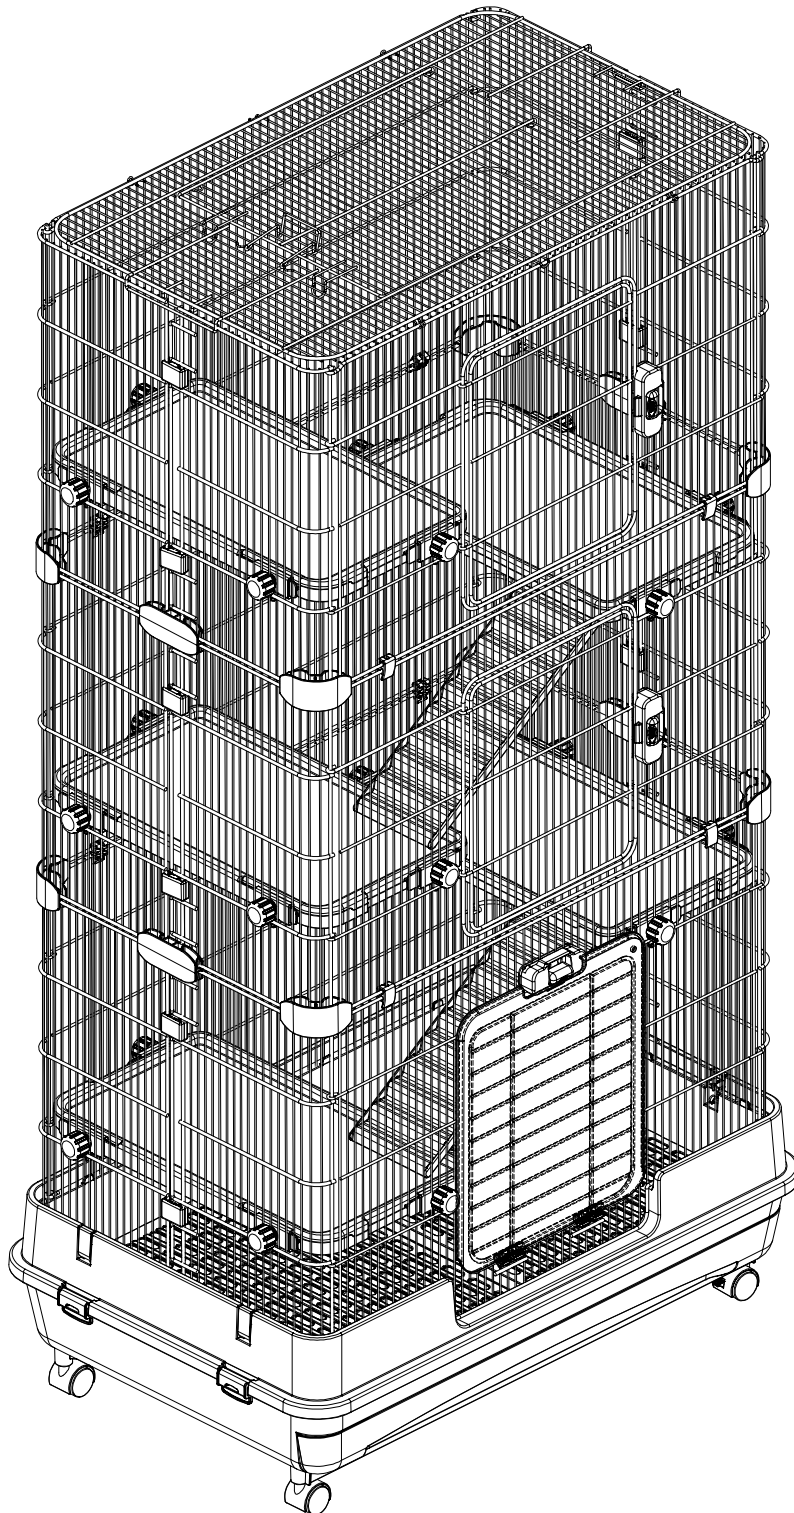


ASSEMBLY INSTRUCTIONS

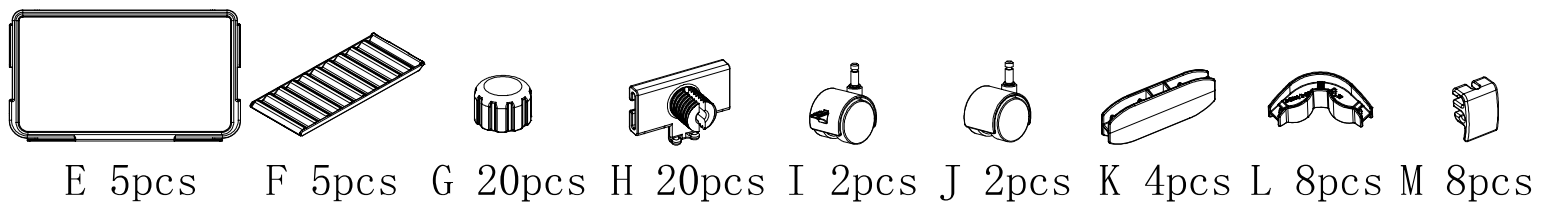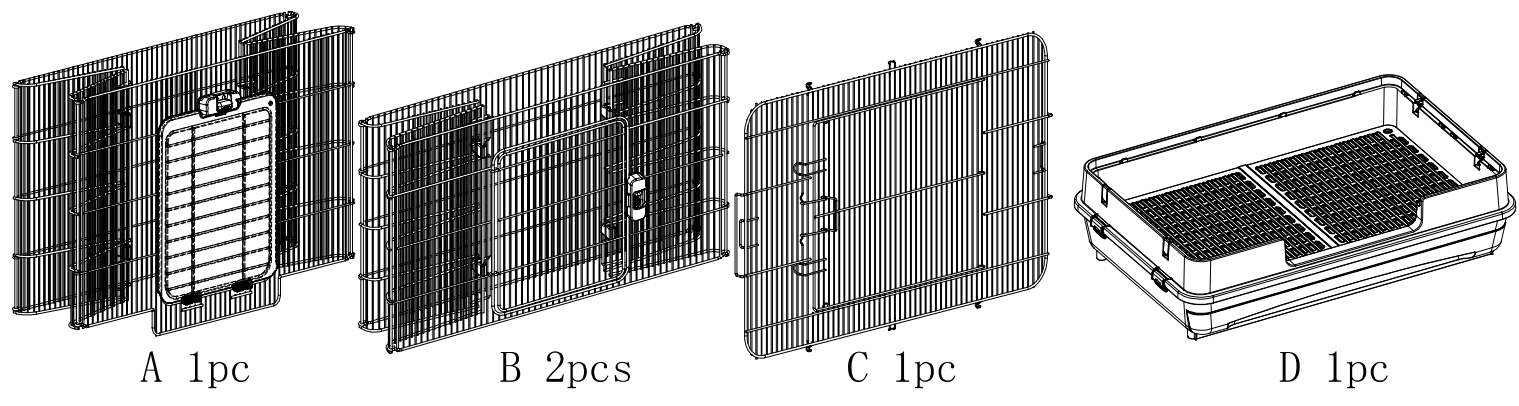


step 1

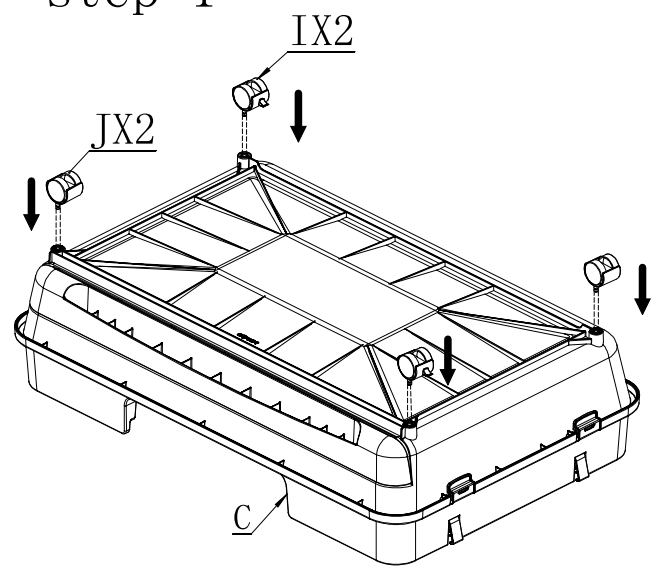


step 2

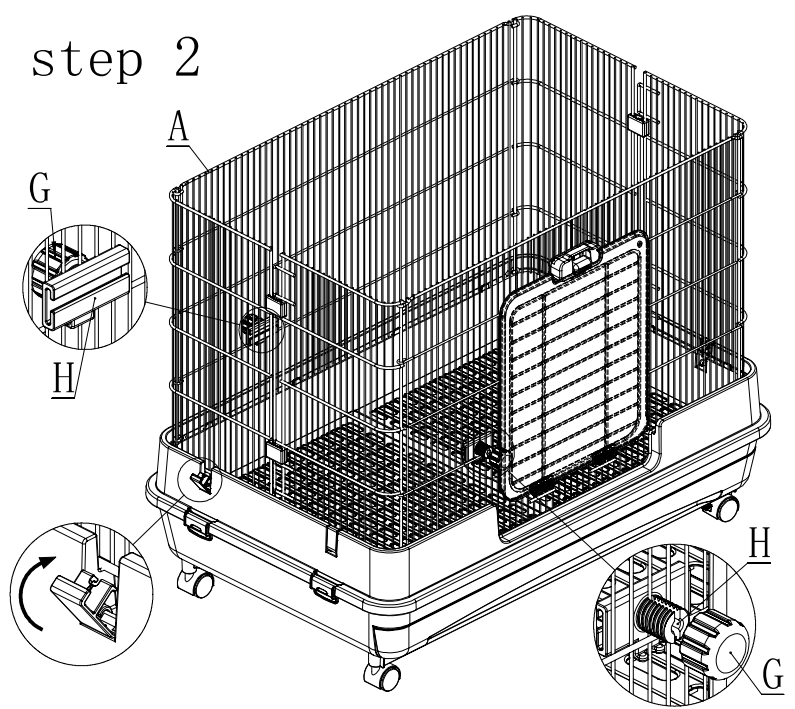


step 3

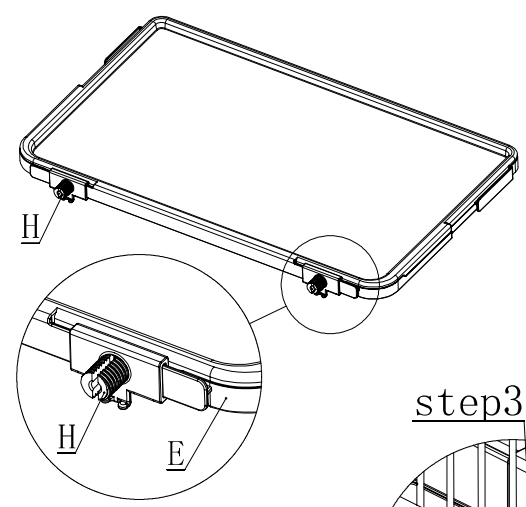


step 4

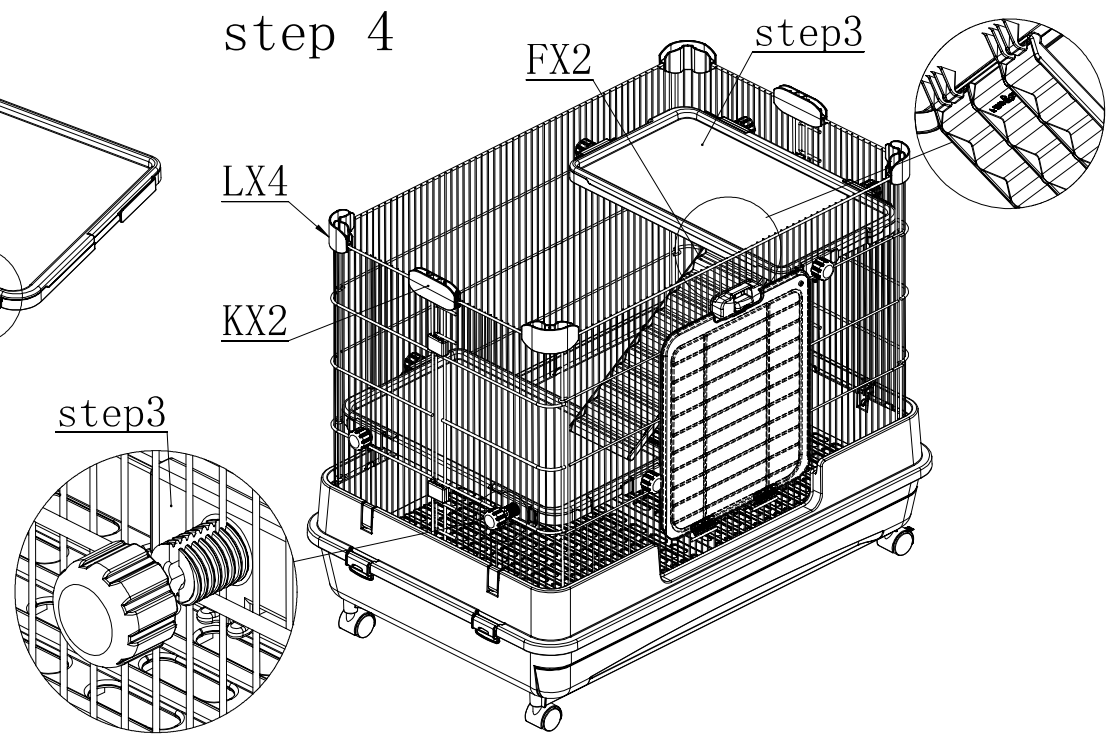


step 5

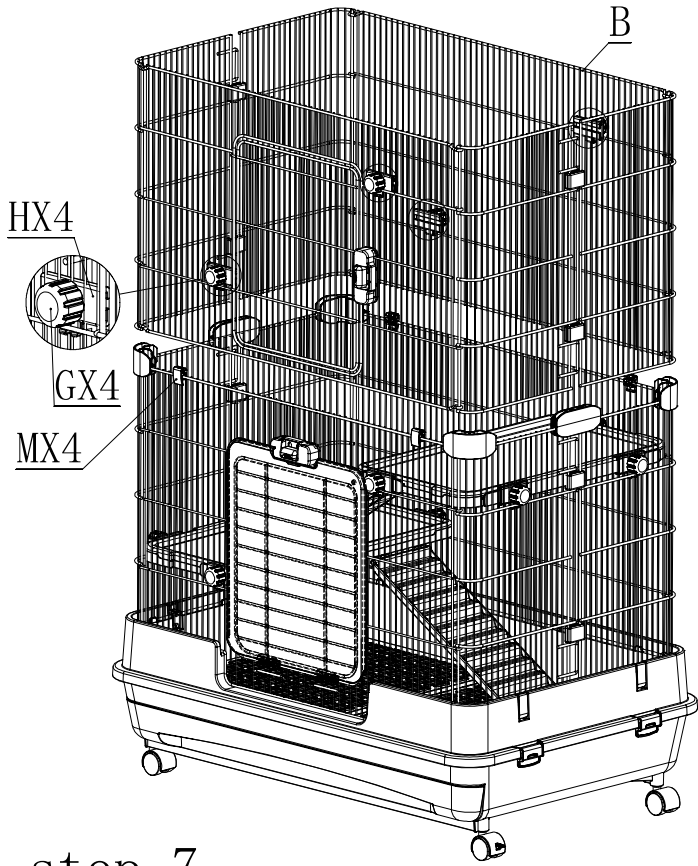

step 6

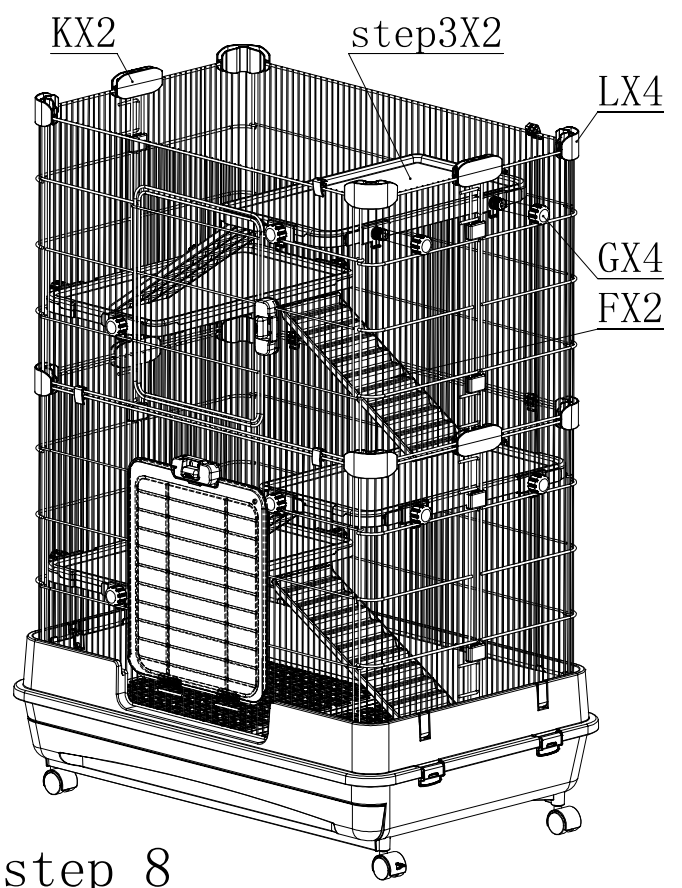

step 7

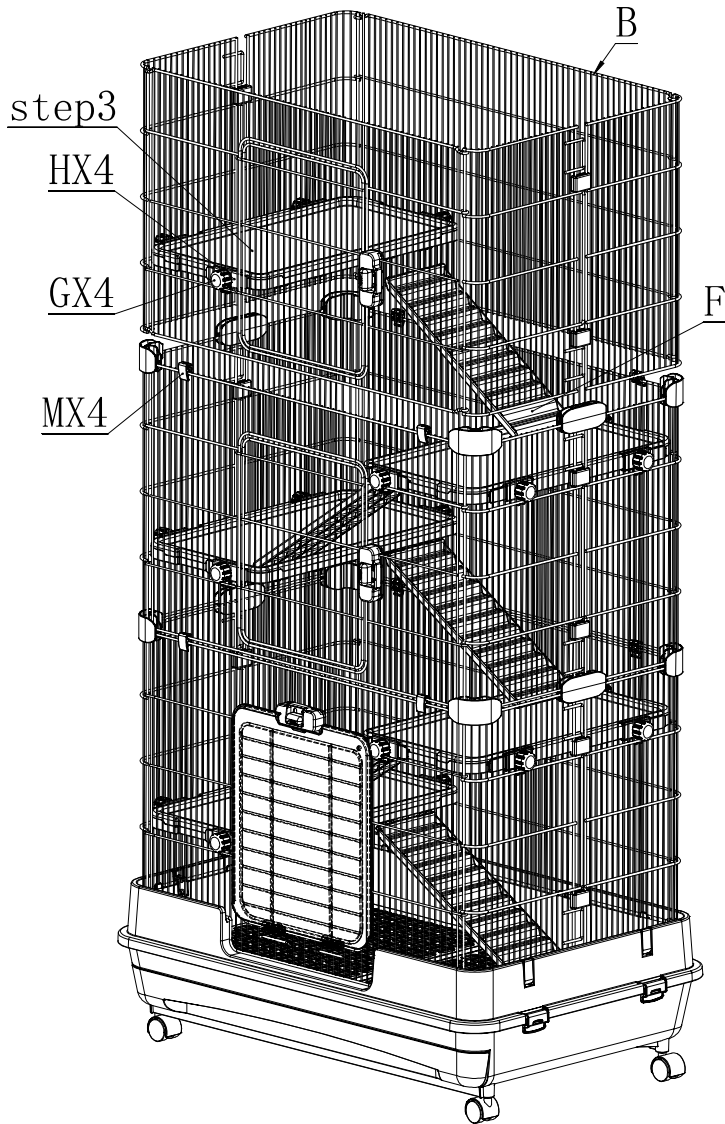

step 8

