




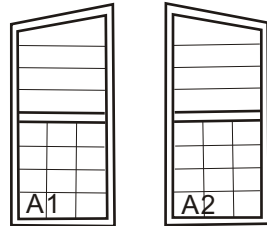


Assembly instruction

HOCOME
Item No: D51-011

- S1**  40mm 2pcs
S2  25 mm 16pcs
S3  12mm 6pcs
S4  10mm 40pcs
S5  4pcs

Screw detail




A= cage side wall




B= cage back wall


1 S2*4pcs
A1/A2*1pc;H*1pc

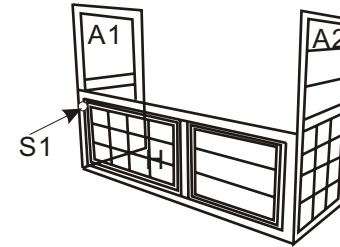

2 E*1pc

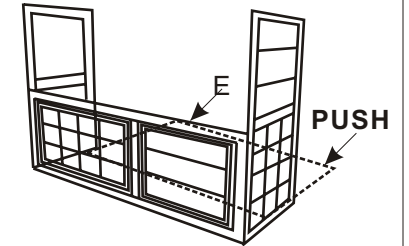

C=cage front frame

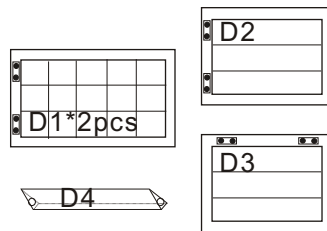


D= small door




E= black floor


3 S2*4pcs;
B/G*1pc

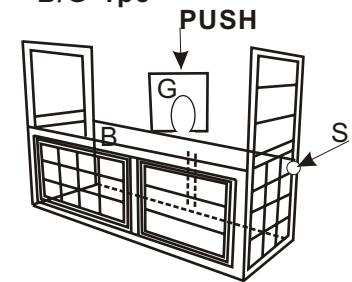

4 S2*8pcs
E/B/G*1pc

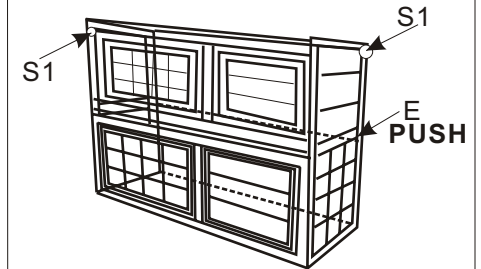


5 S1*2pcs; S3*6pcs
F/D4*1pc

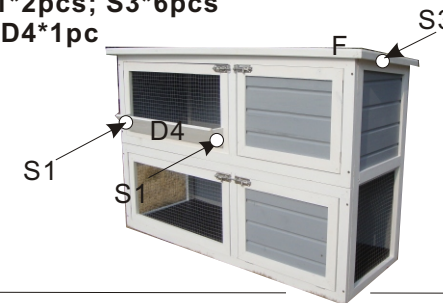

F= rainproofroof


G= board

S4*20pcs;S5*2pcs
C1/D1/D2*1pc

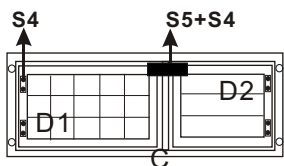

H= finished cage front frame

S4*20pcs;S5*2pc
C/D1/D3*1pc

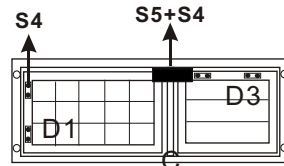

I= finished cage front frame

SOFTLY REMIND

Make sure screws are accurately inserted. Avoid the points of nails sticking into the living space of your pet; they could cause injury.

SOFTLY REMIND

Fir&plywoode sections may twist when unassembled, if you happen to meet this problem do two steps as follow:
 1.find out which surface is curved.
 2.put the curved face down-ward the floor for a short time under the sunshine (if no sunshine,thime should meed little more).
 3.then you can find the fir&plywoode revert to level.

thank you