


PawHut

INdeb025_GL




D51-238

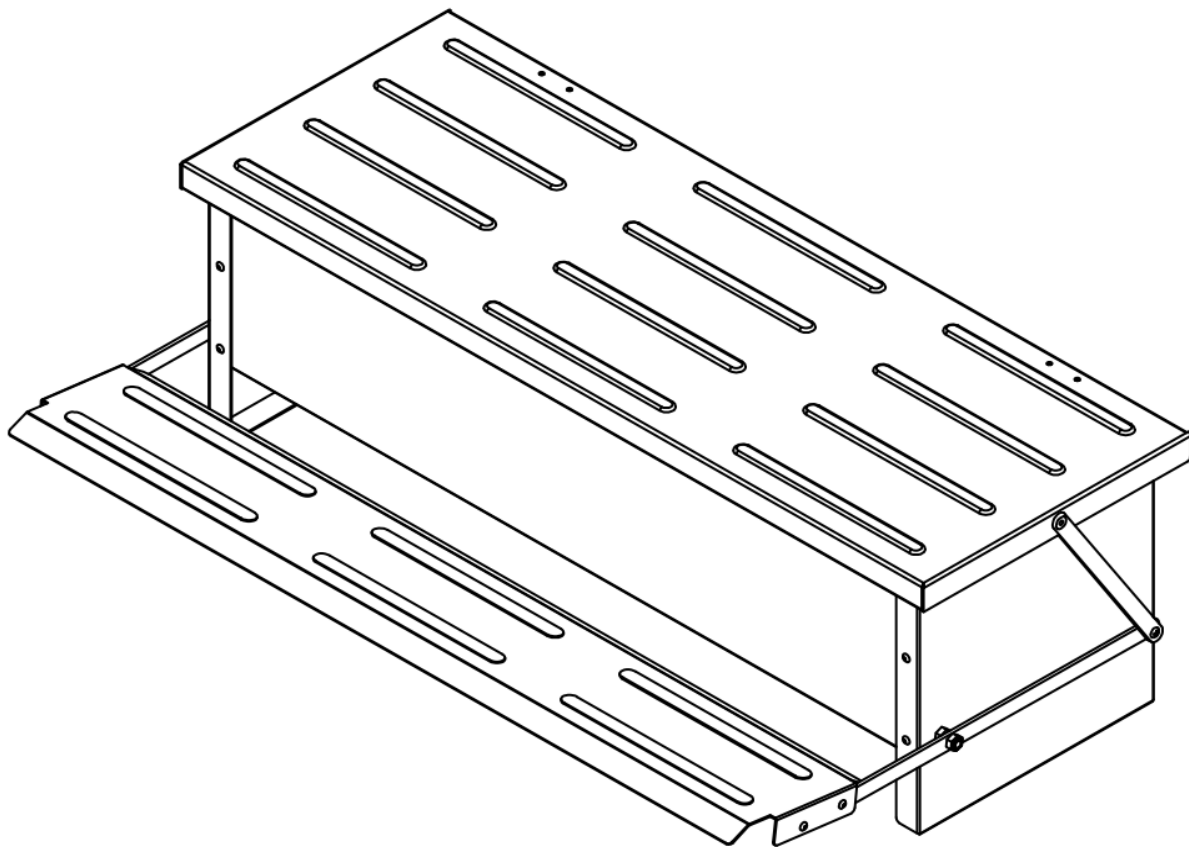


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

<p>Ax1</p>	<p>Bx1</p>	<p>C1x1</p>	<p>C2x1</p>	<p>Dx2</p>
<p>1x20</p> <p>M4x8mm</p>	<p>2x2</p> <p>M6x16mm</p>	<p>3x2</p> <p>M6</p>	<p>4x2</p> <p>M6</p>	<p>5x2</p>

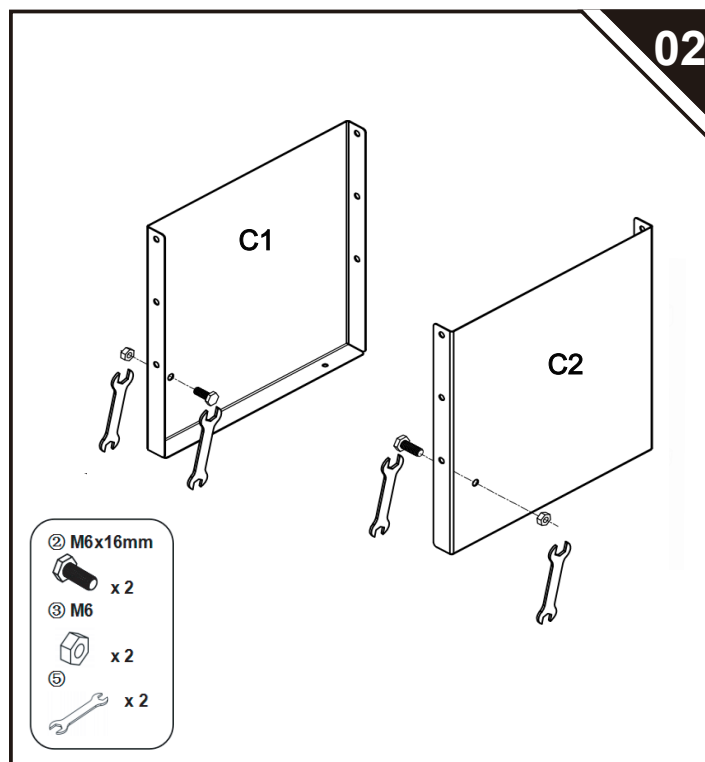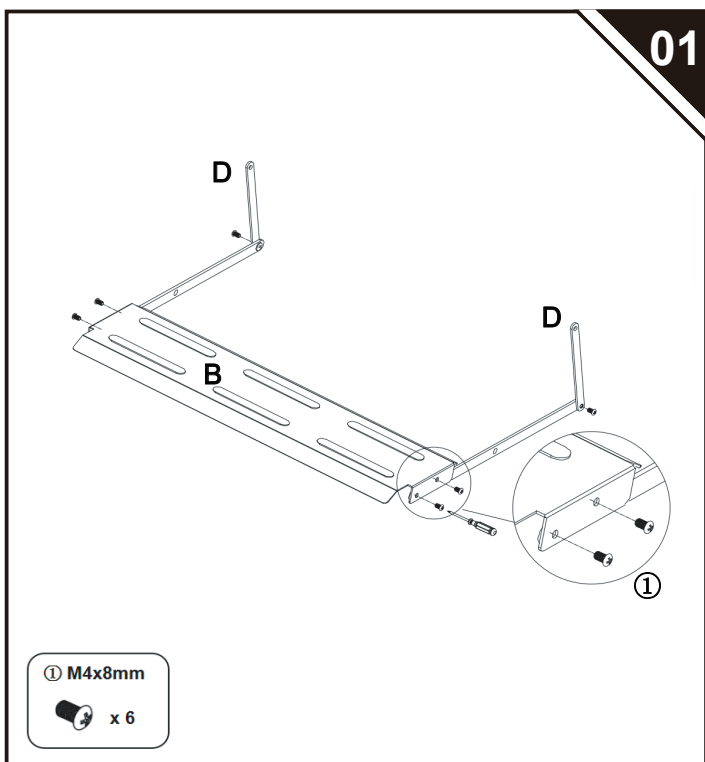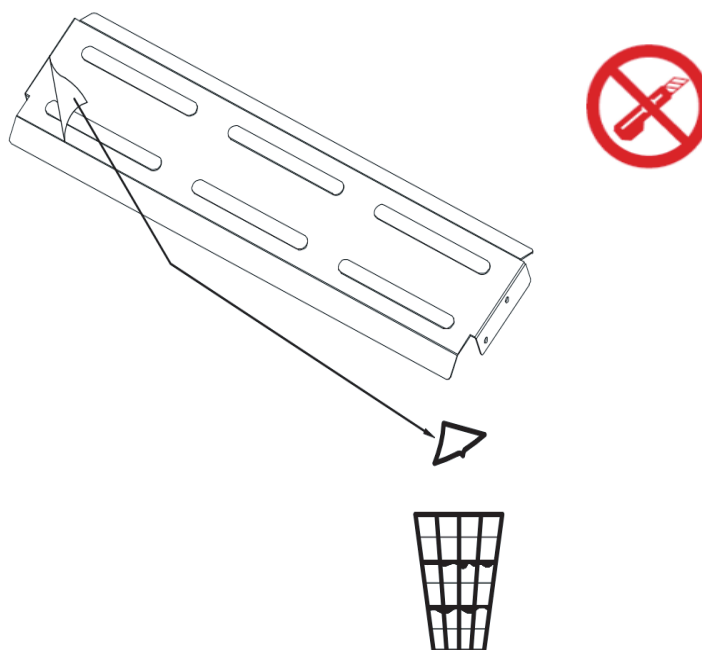


03

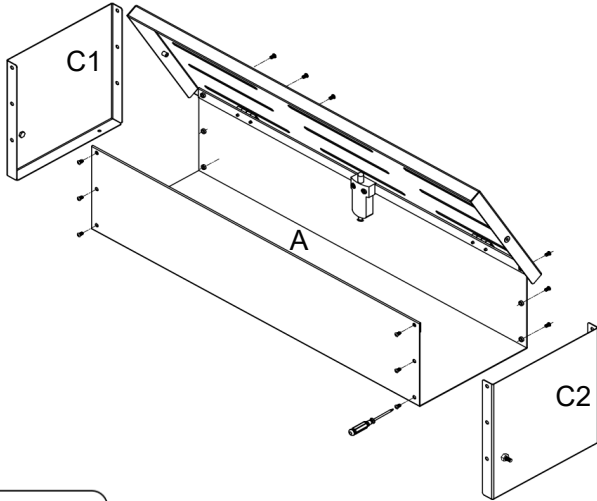

① M4x8mm

x 12

04

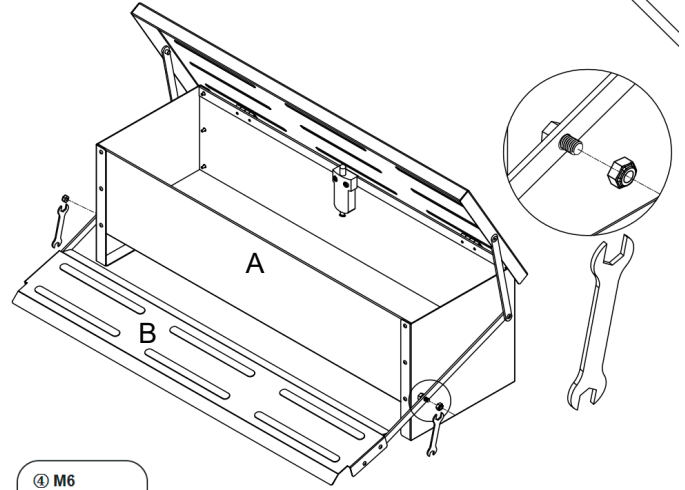


④ M6

x 2

⑤

x 1


05

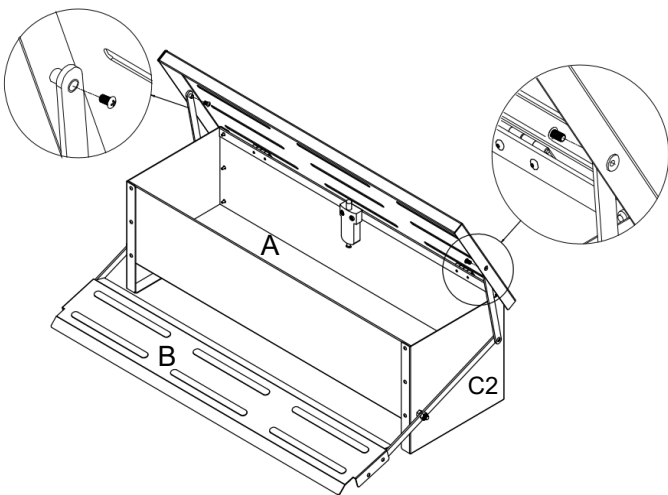

① M4x8mm

x 2

06

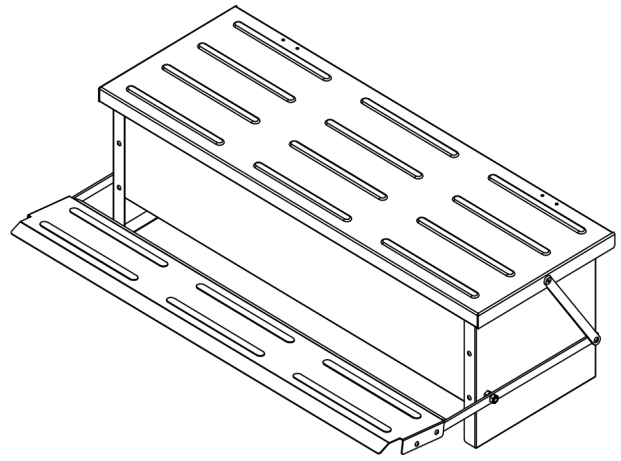

done