


PawHut

INdeb026_GL





D51-237

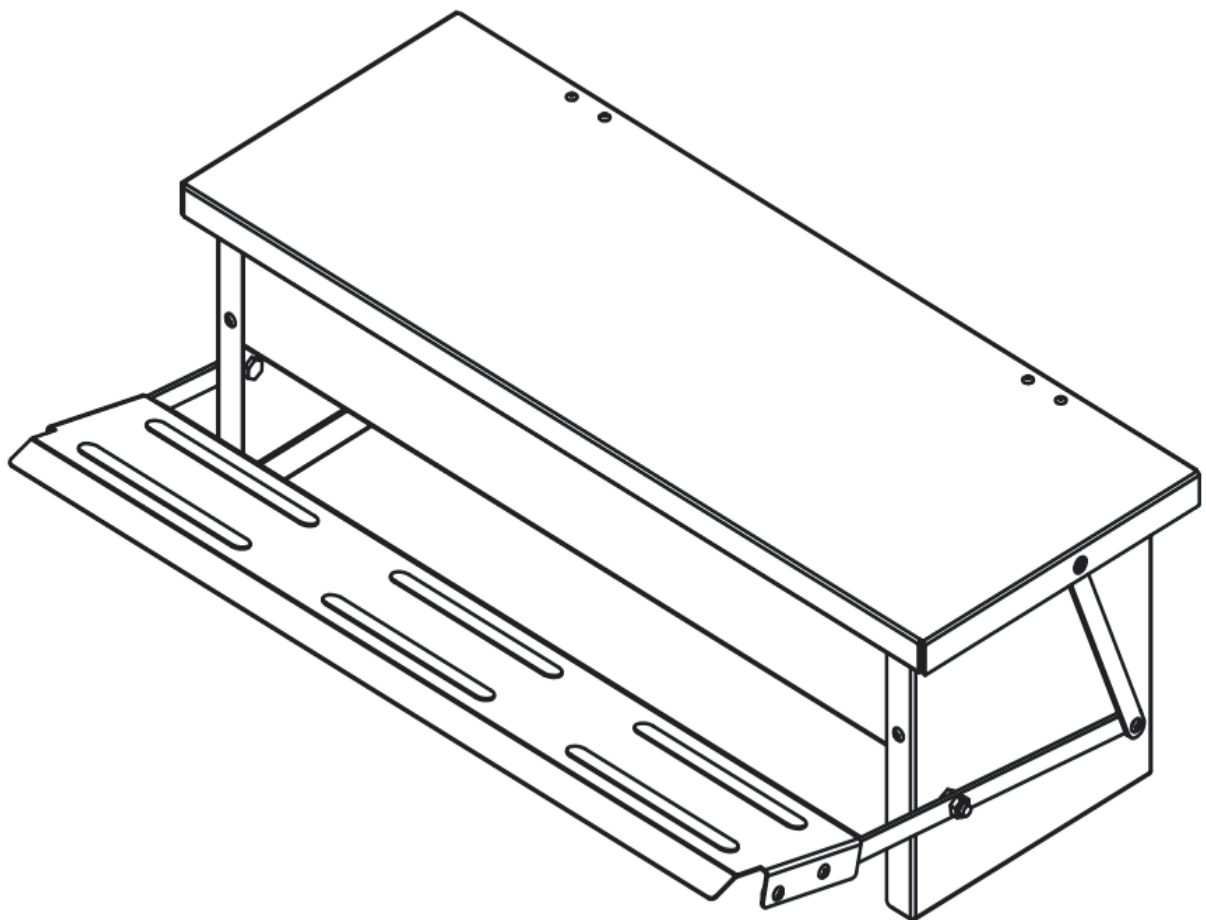


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION


A x1 	B x1 	C x1 	D1 x1 	D2 x1 	E x2
1 x16 	2 x2 	3 x2 	4 x2 	5 x2 	
M4x8mm	M6x16mm	M6	M6		

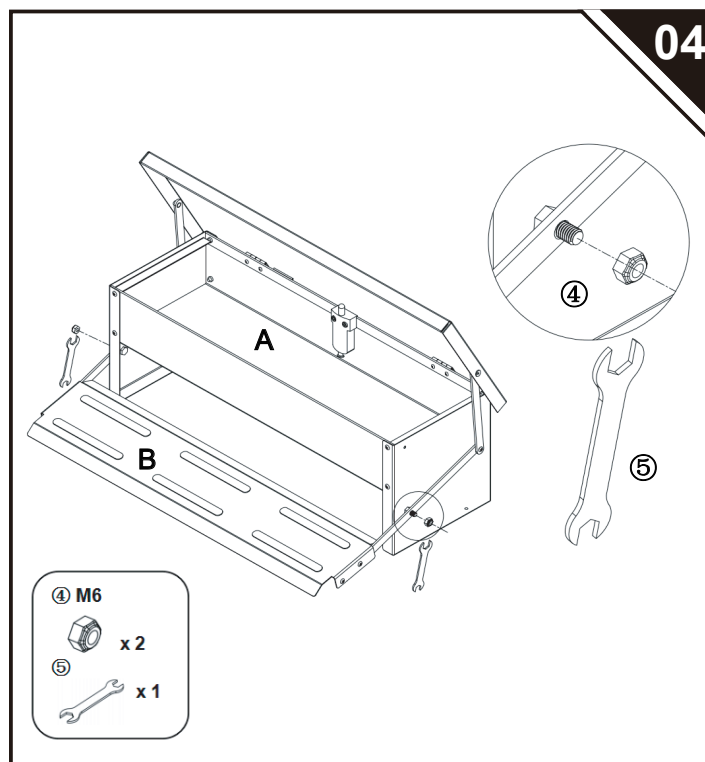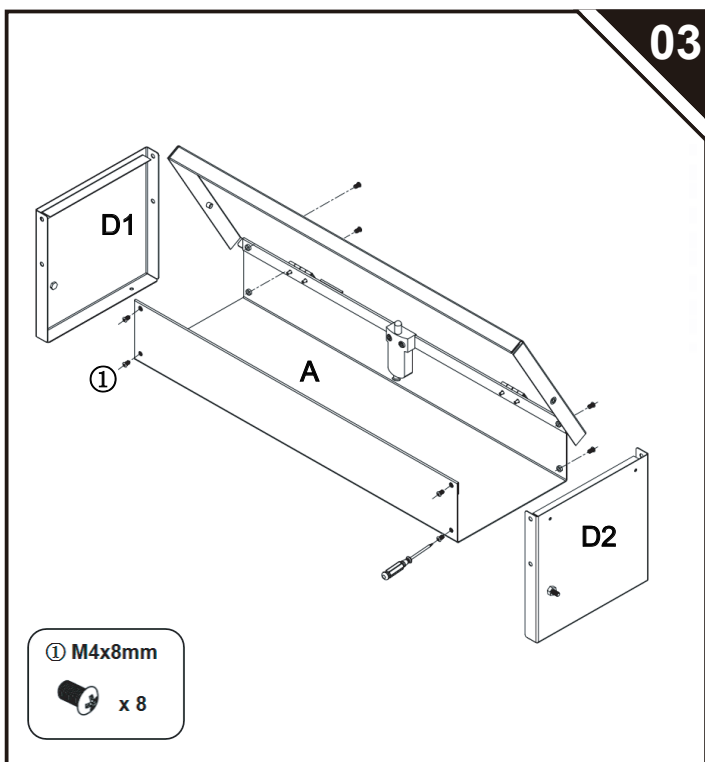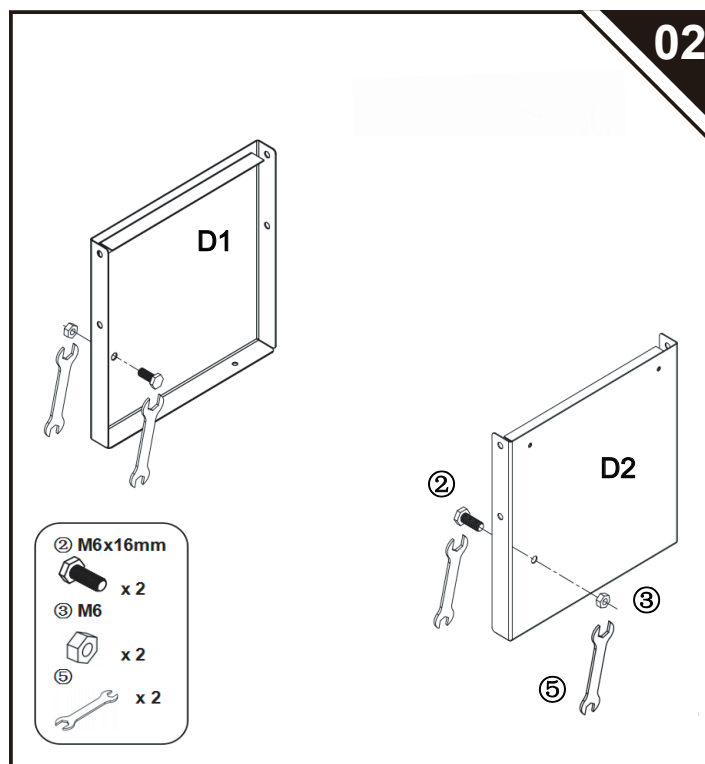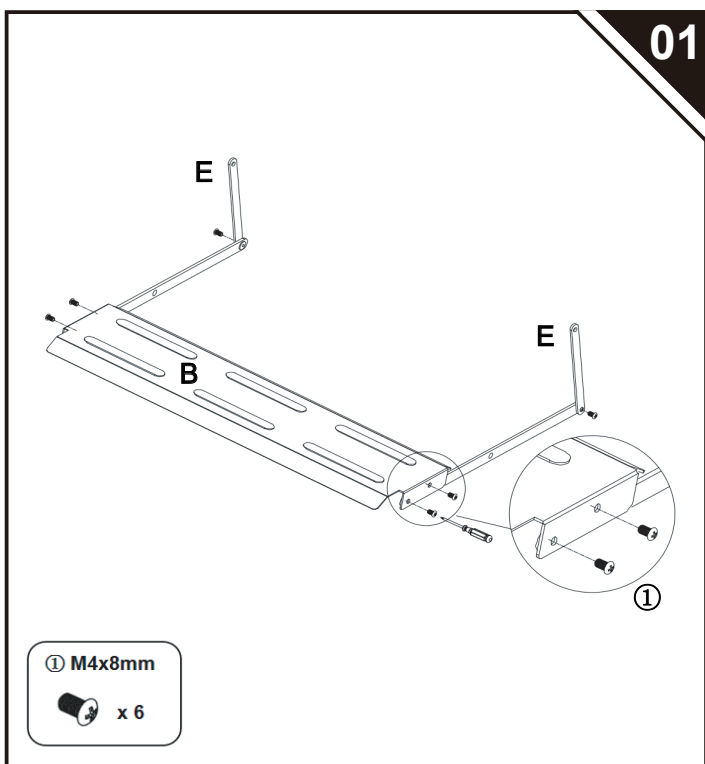


05

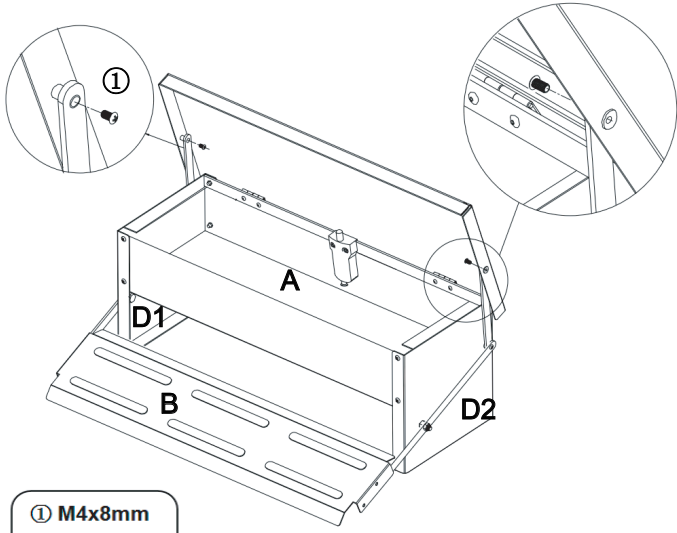

06

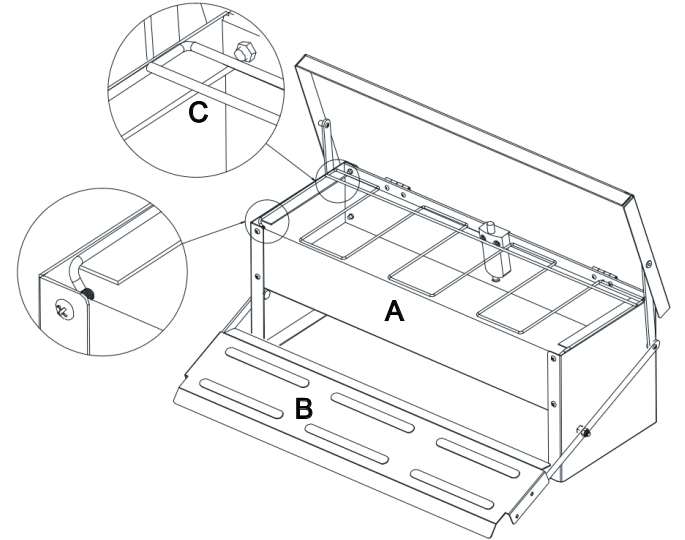

07

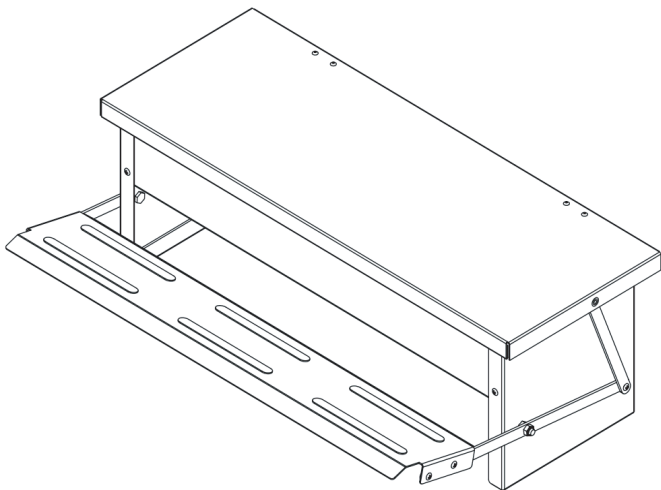

done