


PawHut


INdhb079_GL


D30-449

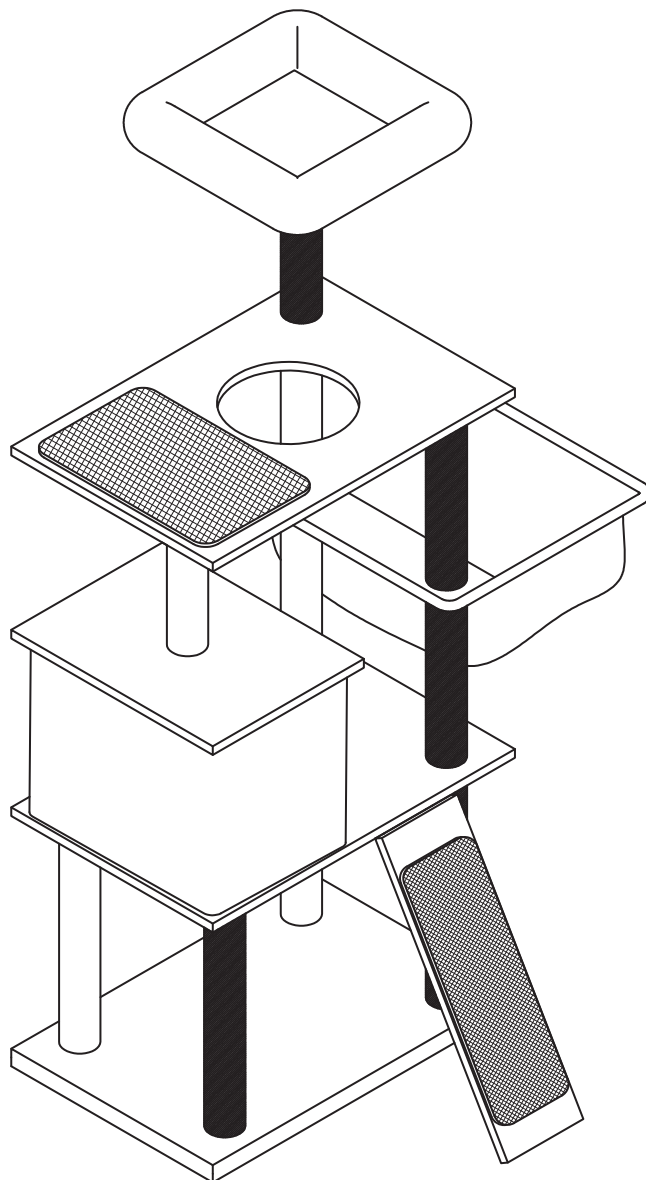


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY & INSTRUCTION MANUAL

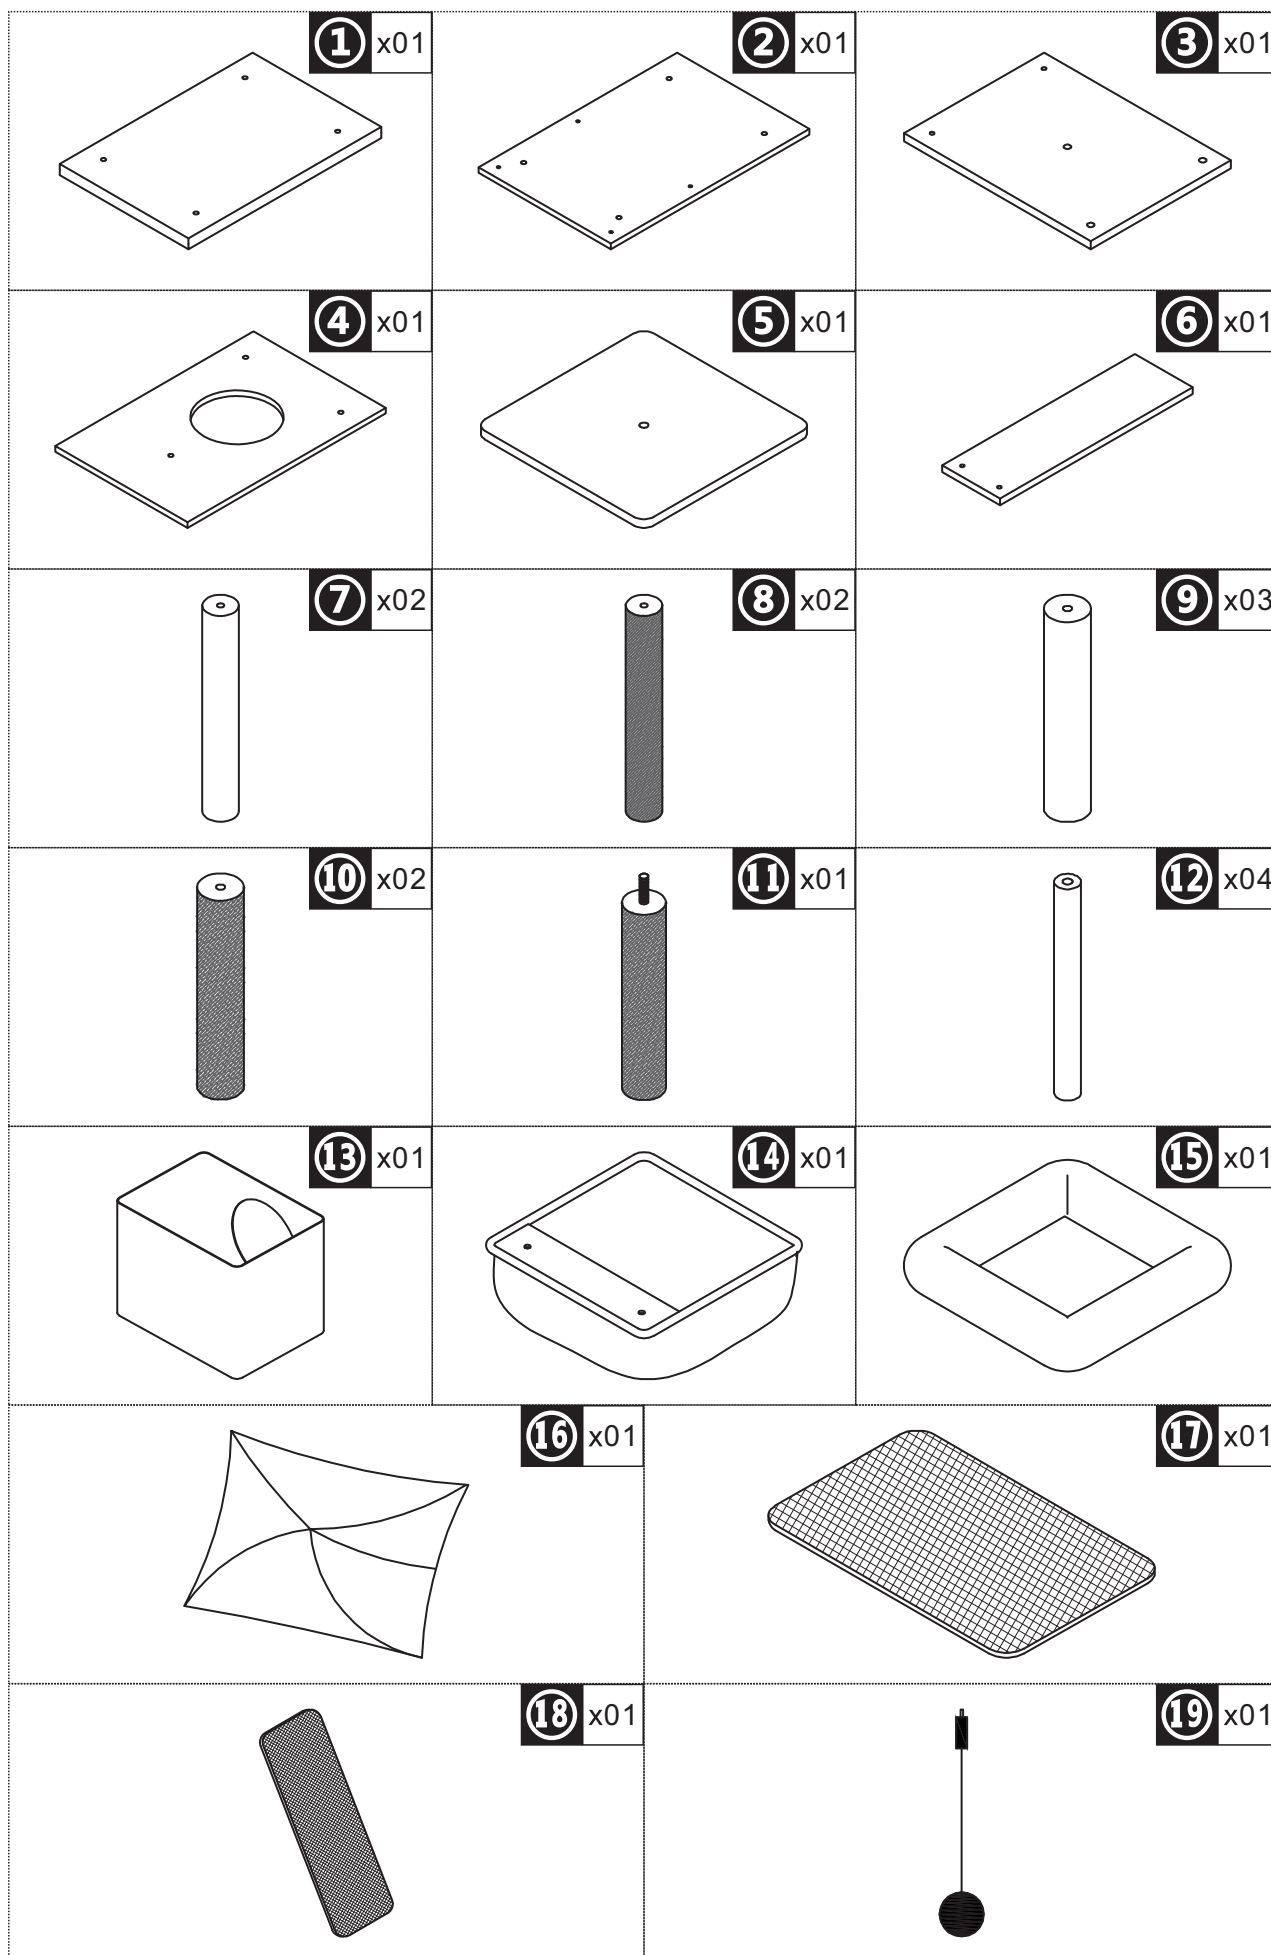


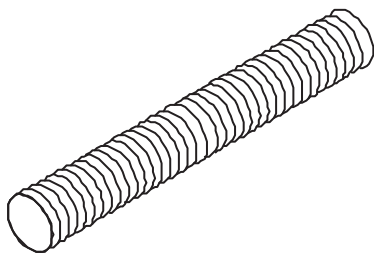


A x05
M10*85
+1(spare)

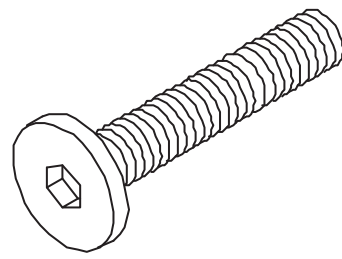


B x09
M10*40
+1(spare)

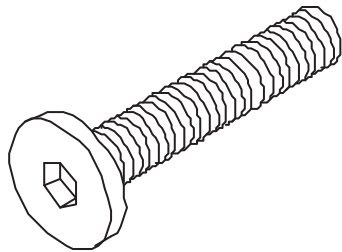


C x08
M6*35
+1(spare)

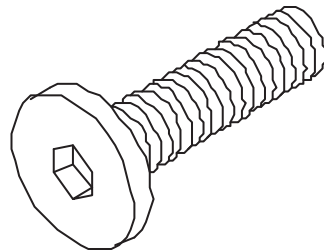

D x04
M6*12
+1(spare)

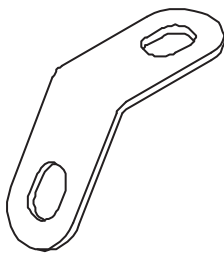


E x02
61*18MM

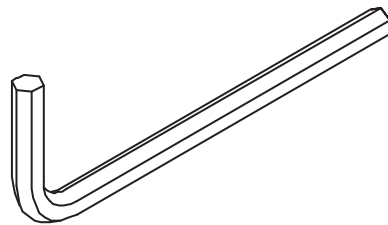


F x01
M5

B x06
M10*40

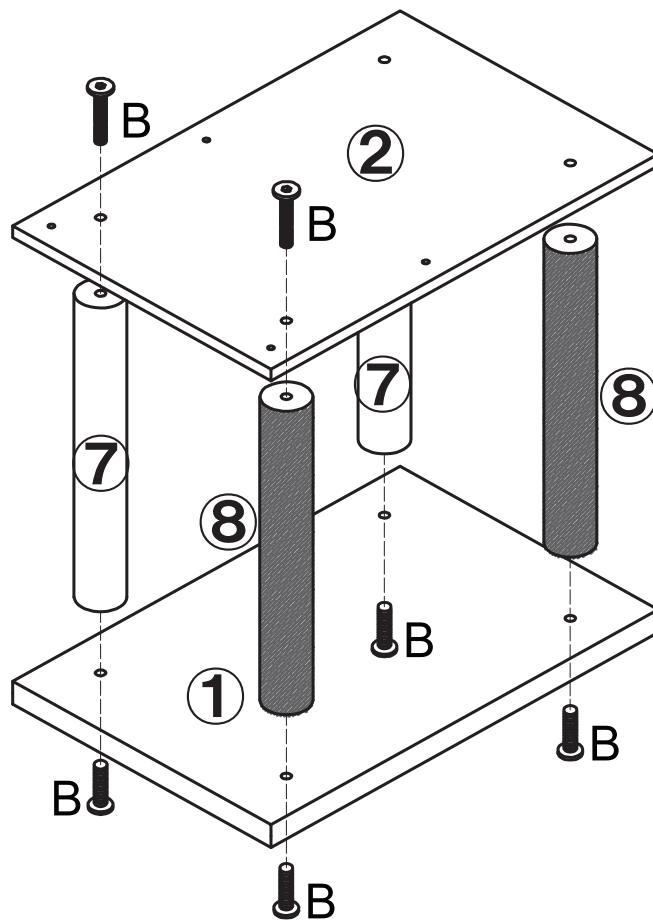


A x02
M10*85

C x08
M6*35

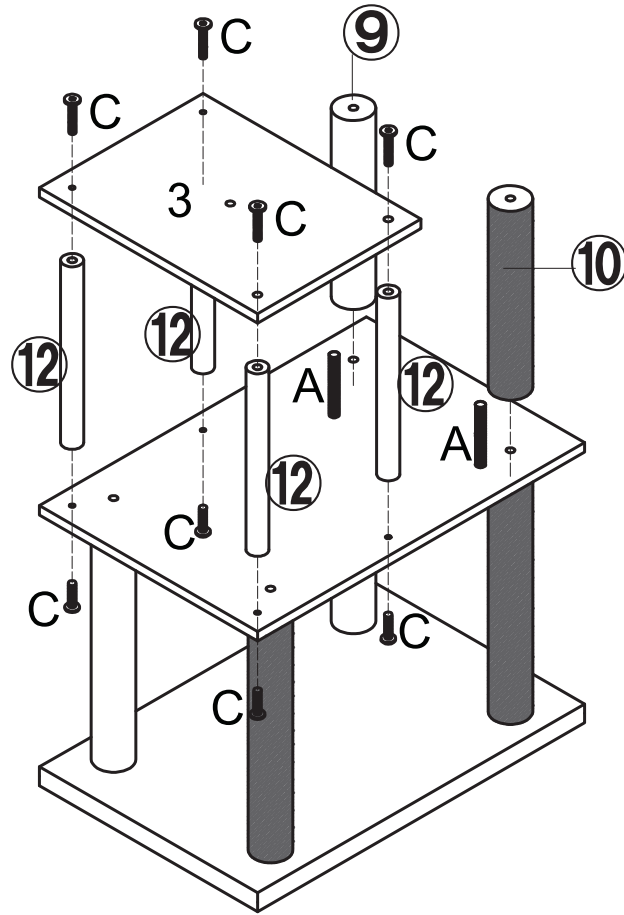


A x02
M10*85

B x01
M10*40

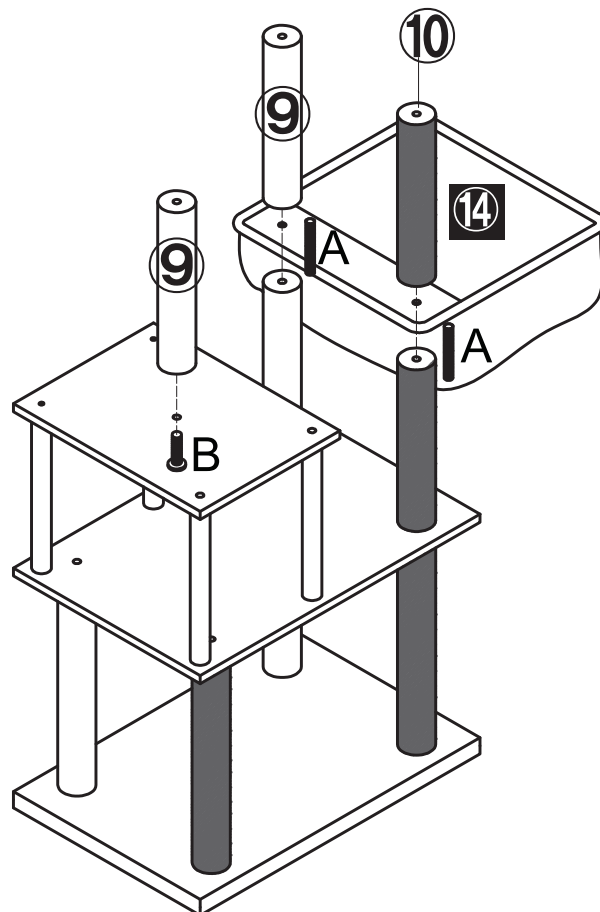

A x01
M10*85

B x02
M10*40

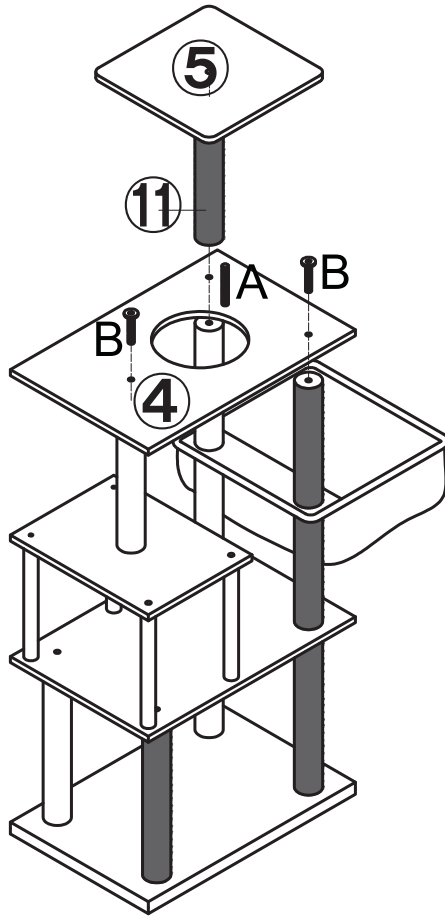

D x04
M6*12

E x02
61*18MM

