



INfka011_US_CA

344-030



EN: WARNING:











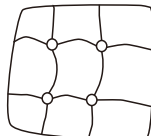
1. ADULT ASSEMBLY REQUIRED.
2. KEEP SMALL PARTS OUT OF CHILDREN'S REACH, CHOKING HAZARD SMALL PARTS.

FR: ATTENTION:


1. MONTAGE D'UN ADULTE REQUIS.
2. TENIR A L'ECART DES ENFANTS LES PIÈCES DÉTACHÉES, ELLES PRÉSENTENT UN RISQUE D'ÉTOUFFEMENT.

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

ASSEMBLY INSTRUCTION


 <p>① x 1 Pony Head×1</p>	 <p>② x 1 Cross Bar×1</p>	 <p>③ x 1 Plank×1</p>	
 <p>④ x 4 Wooden Sticks×4</p>	 <p>⑤ x 3 Wooden Sticks×3</p>	 <p>⑥ x 2 Wooden Ball×2</p>	 <p>⑦ x 2 Adjusting Rope×2</p>
 <p>⑧ x 2 Carabiner×2</p>	 <p>⑨ x 2 Screws×2</p>	 <p>⑩ x 1 Wrench×1</p>	 <p>⑪ x 1</p>

01

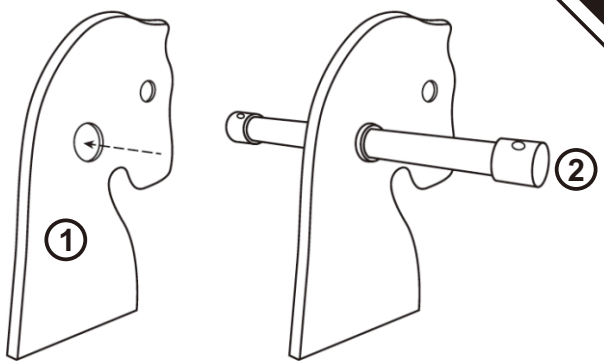


Insert the wooden horse handrail horizontally into the wooden horse's head (neck), then fix the two ends in the middle.

02

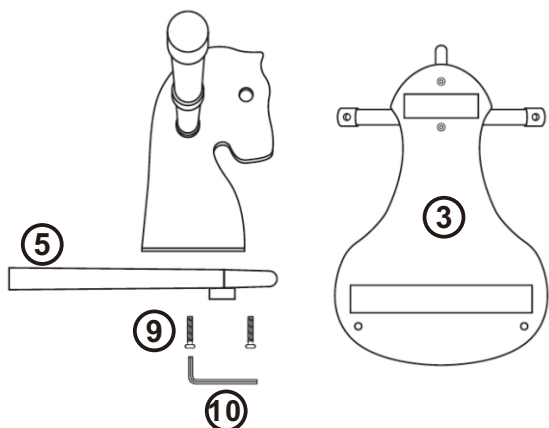

Fix the head and base of the installed wooden horse with screws.


03

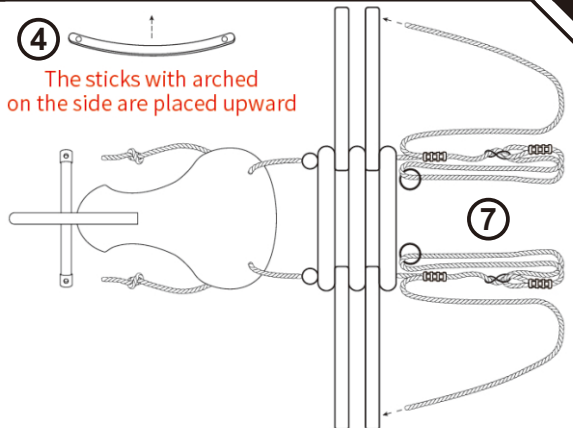

④ The sticks with arched on the side are placed upward

Use two swing ropes to separate one side, complete the connection of back wooden stick, side wooden stick, and wooden ball in sequence according to the figure, and then tie the horse base to tie it. (Keep the rope length consistent)

04

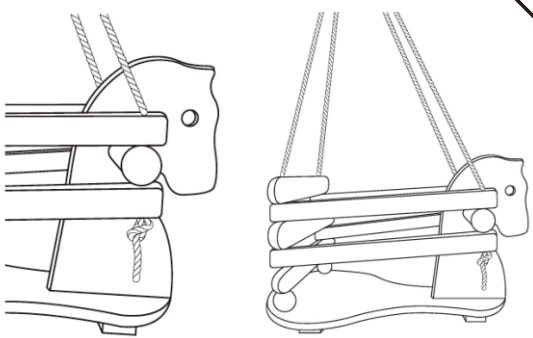

Tie the other sides of the two swing ropes to the head of the wooden horse and fix them successively. (Hang the swing after installation and adjust the length of the rope to keep the swing base horizontally)

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it