



INfka028\_DE

**344-042**











**UK  
CA**

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

**ASSEMBLY INSTRUCTION**

## PART LIST

Swing seat		1pc	Spanner		1pc
Suspension ropes		2pcs	Nut		4pcs
Straight tube		2pcs	Spacer		4pcs
Elbow tube		2pcs	Carabiner		2pcs


## ASSEMBLING THE SWING

### Before assembly:


1. Check that all the components are not defective.
2. The recommended height of the swing beam is about 8 feet.
3. The clearance distance should be 13 feet around the swing.
4. Beware of falling, which may cause serious injury to the swing users.



1. Insert the 4 tubes into the swing seat.

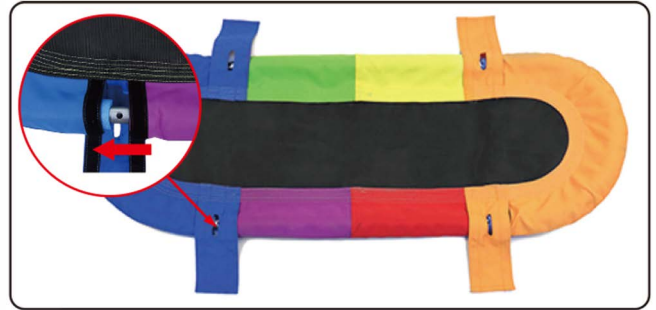

2. Align the tube holes and joint the tubes together at the left side.

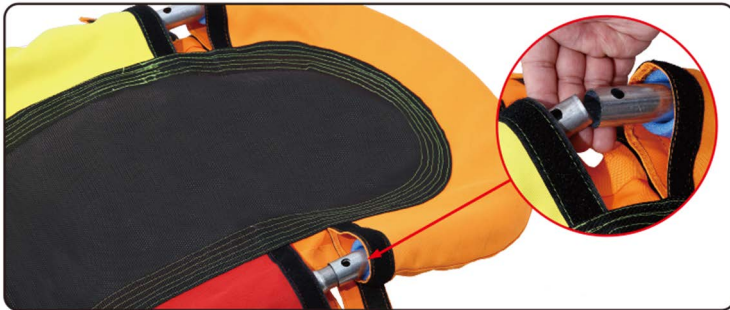

3. Align the tube holes of the right side, then push down the tubes gently.



4. Insert the eye bolts to the holes of the united tubes.



5. Put the spacers and nuts onto the bolts, tighten them with a wrench.



6. Stick the hook-and-loop fastener.











7. The assembly is complete.



8. Adjust the rope knots to move the handrails to adapt to users of different heights.

## TEILE LISTE

Schaukelsitz		1pc	Schraubenschlüssel		1pc
Aufhangeseil		2pcs	Mutter		4pcs
Gerades Rohr		2pcs	Unterlagplatte		4pcs
Verbogenes Rohr		2pcs	Karabinerhaken		2pcs

## MONTAGE DER SCHAUKEL

### Vorbereitung:

1. Überprüfen Sie, ob alle Teile intakt sind.
2. Die empfohlene Höhe des Schwenkbalkens beträgt ea. 8 Fu .
3. Der lichte Abstand sollte 13 Fu um die Schaukel herum betragen.
4. Achten Sie auf Absturzgefahr, die zu schweren Verletzungen der Schaukelbenutzer führen können.



1. Setzen Sie die 4 Rohre in den Schaukelsitz ein.



2. Richten Sie die Rohrlocher aus und verbinden Sie die Rohre zusammen auf der linken Seite.



3. Richten Sie die Rohrlocher der rechten Seite aus und achten Sie darauf, dass jeweils ein schmales und ein breites Rohrende zusammengesteckt werden.



4. Setzen Sie die Schrauben in die Locher des montierten Rohres ein.



5. Stecken Sie die Schraubhaken von oben in den Rohrrahmen und ziehen Sie die Unterlagplatte und die Mutter fest an.



6. Kleben Sie das Klettband auf.



7. Die Montage ist abgeschlossen.



8. Stellen Sie die Seilknoten zum Verschiebe der Handlaufe ein, um sie an Benutzer mit unterschiedlichen Körpergrößen anzupassen

