




INbub001_UK



Motorized cassette Awning

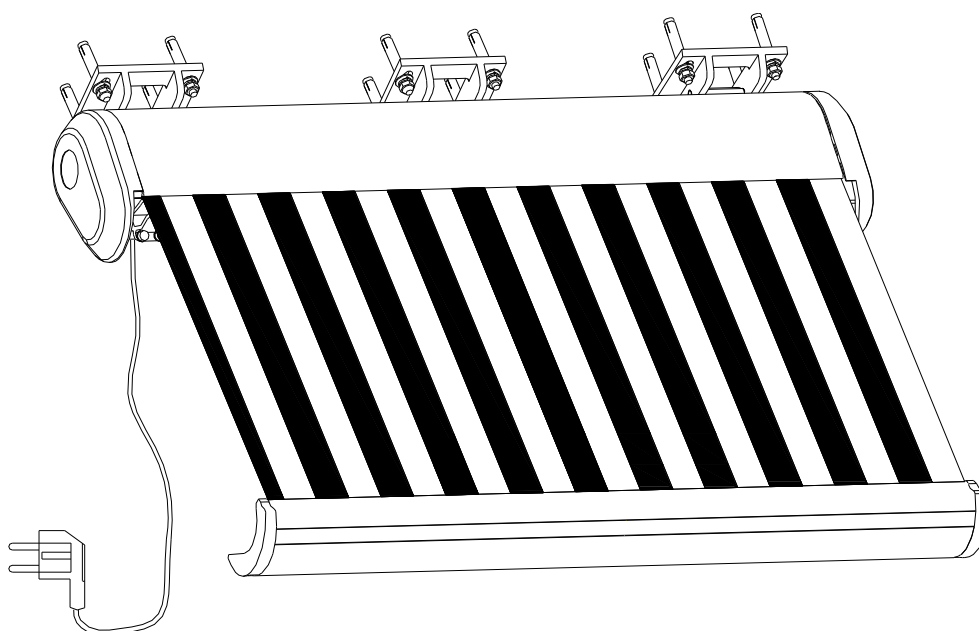

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

ASSEMBLY INSTRUCTION

Contents

Packing list	3
Description	4
Safety instructions	4
Preparation	5
Mounting	6
Operation	9
Adjusting pitch angle.....	9
Engine setting(off/on setting)	10
Handing of the remote control	11
Battery/use	11
Extend and retract awning.....	11
Notes of the awning fabric	12
Maintenance	13
Cleaning	13
Storage	13
Dismounting	14
Problem solving	14

**Attention!**

Read the operator's instruction before the mounting and use of the product. Keep the instruction in a safe place for future reference.

Dear Customer,

Congratulations for buying an awning out from the E6100 series. For your own and the safety of other people please pay attention to the following leads and follow safety instructions.

Before you start mounting and using the awning, please get familiar with this product. Make sure all parts listed up in below packing lists are delivered and intact. If you find that there are parts missing or damaged, please do not install the awning but contact your dealer.

The main technical parameter:

1. Size: 6x3m (Max) 2x1.5m(min)
(Notes: 6m×3m means the width is 6 meters, projection is 3 meters.)
2. Power supply: 210~250VAC, 50/60Hz
3. Frequency: 230~300W (differs from the awning model)

Units	Safeguard exponential
awning	IP55
receiver and emitter	IP30 (if installed indoors)

4. Emitter frequency: 433.92MHz Emitter's batteries: 12V Li, CR23A


5. Controlling area: 30 meters (without barriers)

Packing list

No matter which type of the awning series E6100 you bought, the following parts should be in the package:

PARTS LIST		ILLUSTRATION	Quantity
Awning unite			1
Bracket with hexagon head bolt and locknut			See below
Anchor with locknut, washer and locking ring			See below
Remote control system			1
Motor adjustor			1
Instruction manual			1
Awning Width	≤3.5m	3.6m-5.0m	5.5m-6.0m
Brackets	2pcs	3pcs	4pcs
Anchor	8pcs	12pcs	16pcs

Description

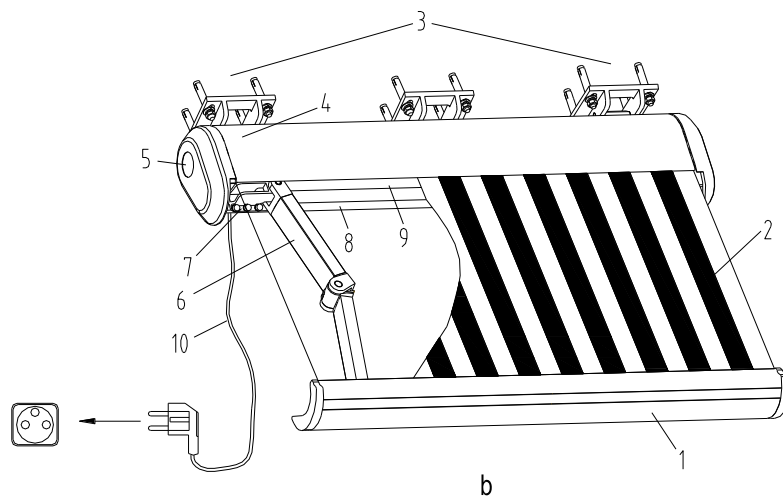

1	Front bar	5	Side Cover	9	Roller
2	Fabric shade	6	Folding arm	10	Motor cable
3	Bracket	7	Arm shoulder		
4	Upper Cover	8	Lower Cover		

Important safety instructions!

WARNING – IT IS IMPORTANT FOR SAFETY OF PERSONS TO FOLLOW THESE INSTRUCTIONS. SAVE THESE INSTRUCTIONS

Symbol explanation



This warning triangle calls attention to hazards that that can lead to death or to severe injuries or which are important for the functioning of the awning.



This sign identifies important notes.

Safety instructions



To install this awning technical knowledge is necessary. Do not mount this awning yourself if

- ◆ you are unsure if the awning can be mounted on the place you chose for installation.
- ◆ you do not understand the instruction manual or parts of it.
- ◆ you do not have necessary tools available.
- ◆ you do not have necessary technical knowledge.



A minimum of three healthy adults are required to move and install the awning as the product is big and heavy. Do not try to install the awning alone. If the awning falls, it could cause serious injuries and damages! Contact an authorized assembler for help.



Do not install the awning when you find damage parts are that parts are missing.



Do not allow children to play in the working area during assembly and adjustments.



This product is only suitable for installation in the cement wall or ceiling.



Nobody is allowed to change the products' design and structure without the permission of manufacture or authorized deputy.



Please make sure that your hands are clean at the time of the assembly; otherwise you may soil the awning fabric and frame.



The operation in frosty conditions may damage the awning.



The operation in snowy conditions may damage the awning.



In case of rain Retract the awning if pitch angle is less than 14°.



Nobody is allowed to climb onto the awning; hanging anything on the awning is forbidden.



Sheeting was used to protect the paint. This must be removed afterwards.



When extended, various forces, including wind and rain, will affect an awning. These sometimes substantial forces must be absorbed by the awning and transferred to the assembled structure via its mounting brackets. Under extreme loads, excessive attractive force can be exerted on the anchor bolts. Therefore, **before starting assembly, check the load-bearing capacity of the mounting base and if necessary take corresponding measures to ensure stable installation of the brackets.** If the mounting base is unstable, you may wish to consult a specialist in your vicinity.



The awnings are intended as a protection against the sun only. It is not to be used during periods of strong wind, rain, hail, or snow. In case of such conditions, retract the awning immediately.

Preparation

Carefully remove the awning from the box and remove the Styrofoam protectors from the awning. Remove the plastic bags and plastic guards from the awning and carefully place the awning aside to avoid having it damaged by scratches or otherwise damaged or soiled during assembly. Check the number of parts in the packaging whether the packing list requirements, the quality of parts availability issues, if questions, please contact the supplier.



Be aware the sudden extension may occur during unpacking.

Tools needed for assembly:

- | | |
|---|-----------------------|
| ✓ Drill | ✓ Stepladder |
| ✓ Masonry drill bit, 14 mm | ✓ Tape measure |
| ✓ Level indicator | ✓ Chalk or marker pen |
| ✓ Hexagonal spanner CR-V5mm and CR-V6mm | ✓ Wooden hammer |

Mounting



Mounting on concrete wall or ceiling

The awnings must be installed at least at the height of 2.5 m on a reinforced concrete wall or ceiling. Please ask professionals for help if you are not sure.



Make sure the wall/ceiling is plane, so that bracket seats solidly.



WARNING! Three healthy adults are needed to move and install the awning.



For safe and smooth installation think about how you will be securing the awning to the wall ahead of time.

Step 1: Chose the installation area

Ensure that you also take this drop height into account in your decision on where to install the awning. The drop angle can still be changed after assembly. The ideal drop angle, however, has already been set at the factory and may only be changed minimally.

The approximate total drop area of the awning varies depending on the type. We recommend that the awning front bar has a height of at least 2.5 m when it is fully extended.


In the event you would like to mount it above a balcony door, you should leave a space of at least 20 cm above the door frame if there is enough space available above the door frame.

The approximate total drop of the awning differs from the top height.

Height of the Top	2.5m~4m	4.5~6m
A (Total Drop)	30cm	50cm

Drawing 1:

Ensure that you also take this drop height into account in your decision on where to install the awning. The awning front bar should have a height between 2.5 and 4 m.

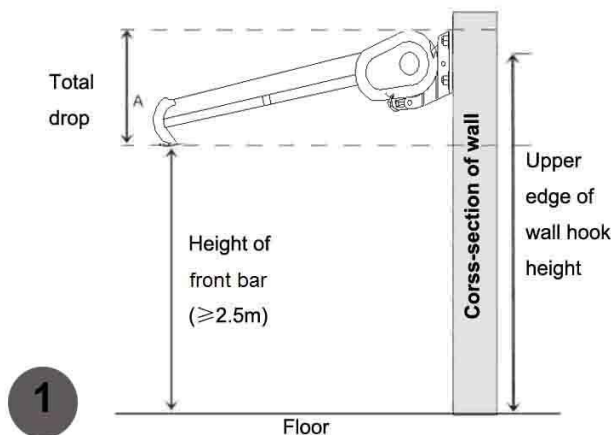

Step 2: Mark drilling holes

After choosing mounting position you can mark where you need to drill holes for the brackets. Draw a horizontal line at the height of the required place. Use a long taper measure, a level and chalk.

We already marked where and with what width brackets need to be mounted. Measure the width between the brackets and copy it to the line on your wall/ceiling.


Mark the corresponding places on the wall by running a marker pen through the holes at the bottom of the brackets.

Drawing 2:

Mark where you need to drill holes for brackets with a chalk line to ensure awning is straight.

Brackets in the wall of the installation location, please sunroofs measurement arm of the seat position size.(2.2)


Note: The quantity of the wall brackets is based on the awning width.

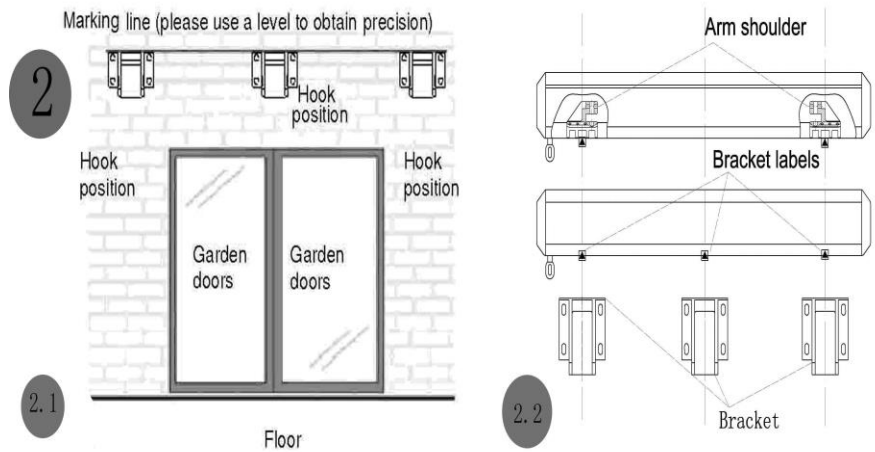

Awning Width	≤3.5m	3.6m-5.0m	5.5m-6.0m
Brackets	2pcs	3pcs	4pcs

Step 3: Drill holes

Use 14-mm masonry drill to drill the holes for the brackets at the appropriate marks on the wall. The holes should be 9 cm deep in the wall and must be drilled through solid masonry or concrete. Do not bore through mortar because this does not offer the strong enough support that is required by the installation of awning.

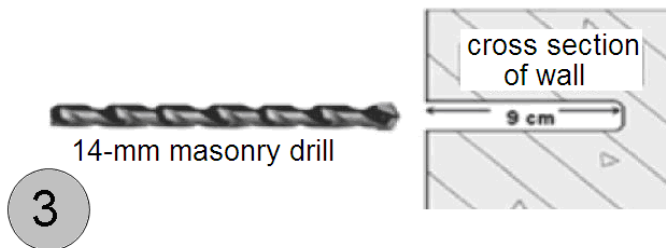

Drawing 3:

Use 14-mm masonry drill to drill 9 cm deep holes.

Step 4: Insert anchors into wall

After drilling the holes you can insert the anchors into the wall. Remove lock nut, washer and locking ring before you insert the anchor. Store these parts so that you can reach them easily in the next step.




It may be necessary to drive the anchor bolts in with a wooden hammer because they do not go in easily. Do not use a metal hammer for this purpose because this could damage the threads on the top of the bolts.



If the bolts need to be driven into the wall with a hammer, we recommend initially placing the nut on the screw loosely (only placing it loosely on the bolt) because this avoids damage to the bolt threads.

Drawing 4:

Insert the anchor into the drilled hole as shown in picture on the right

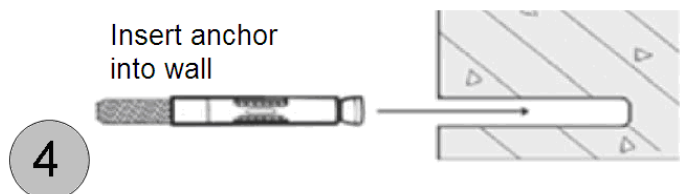


Step 5: Fixing the brackets

Place the bracket on the screw protruding from the wall. Then add locking ring and washer and fix the bracket with lock nuts. Tighten them well.

Drawing 5:

Bracket has been prepared to be fixed on a wall. Choose the whole you need to fix them according to drawing.

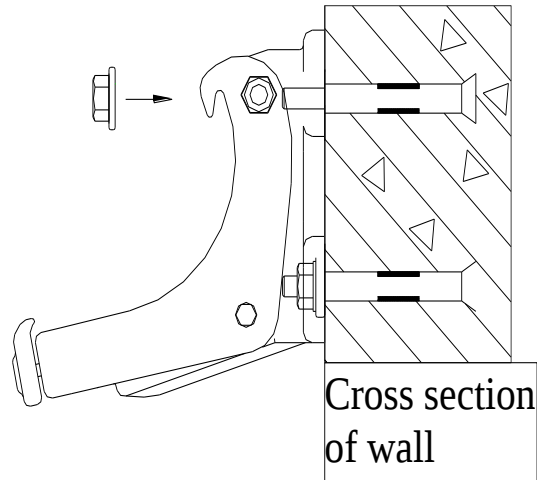

Firmly tighten the bolts with a 17mm wrench: it is best to use a wrench with a closed end rather than an open end because this will avoid damage to the nut if it should slip.



As soon as they are fully inserted, the brackets must sit firmly in the wall. If they are still moving in any form, you must further tighten it. **Ensure that the wall brackets are screwed firmly to the wall, so that they can in no case tear out when the awning is installed.**




Do not try to secure the wall brackets to loose wall stones or any surfaces that are not absolutely firm.

Step 6: Install awning

After all the brackets have been mounted properly you can fix the awning. At least three ladders are required to install the awning in order to obtain the required height. Ensure that the ladders are firmly resting on the ground so that you cannot fall. Only use ladders that are suitable for such assembly work.

Insert the awning into brackets as shown in drawing below. Then immediately insert the safety screw and fix it with lock nut. Attachment brackets for wall installation:

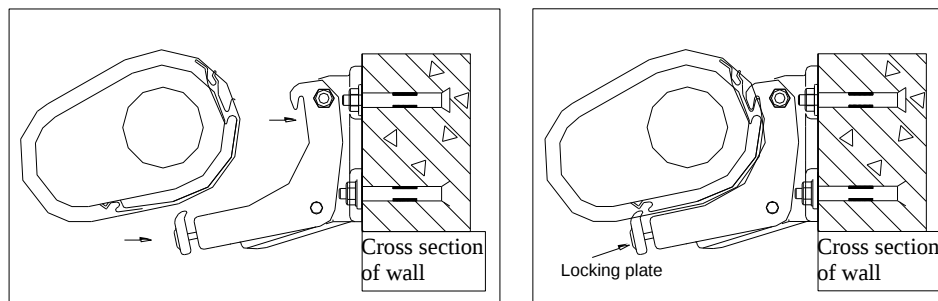

Drawing 6:

Insert awning to bracket as shown in 6.1. Fix the awning with delivered locking plate and safety screw (6.2) and tighten it properly.



If the locking plate does not slide easily into the Wall Brackets, then loosen the Wall Bracket Nuts slightly and try again; this time rock the Awning unit a little backwards and forwards until

the locking plate slides into position. Immediately put in the safety bolts at the front of the Wall Brackets and tighten up the bolts using a CR-V5mm hexagonal spanner. Ensure the Wall Bracket safety bolts are well secured.



After the awning has been mounted properly and has been adequately secured please take away the protective band that you can find on the arm of the awning. Otherwise it cannot be opened. Store the protective band; you can use it in future when storing the awning.

Attention: Misplacing and misapplying the awning can cause seriously danger. Only mount the awning yourself when you understand the mounting instructions completely and when you are sure that the wall you want to mount the awning on is suitable. For your own and the safety of other people please contact an authorized assembler for help.

Operation

Adjusting the pitch angle

The awning is already delivered with an optimally adjusted pitch angle. However, in order to be able to use normal, in the adjusting of product attention to the following:

- ◆ If you install the location of the following is a wall or window, users can adjust the pitching angle within a range of 6 - 15 degrees as desired.
- ◆ If you install the location of the following is a door or aisle and the width of the door or aisle is more than the width of the awning, users can adjust the pitching angle within a range of 6 - 35 degrees as desired; otherwise, the adjustable pitching angle is within 6 - 15 degrees.




Once you have achieved the highest possible range of pitch, the loop cannot be turned any farther. Do not force it! Failure to follow these instructions can damage the flex pitch shoulder and void the warranty.


Extend the awning no more than 1/4 of its full projection before adjusting. With the help of another one who slightly lifts the front bar, adjust the pitching angle as follows:

Drawing 7:

The pitching angle can be adjusted on all arms in the adjusting area (7.1).

Take off the plastic caps, Use within the CR-V6mm hexagonal wrenches into the bracket on the regulation hole to the desired angle. (7.2).

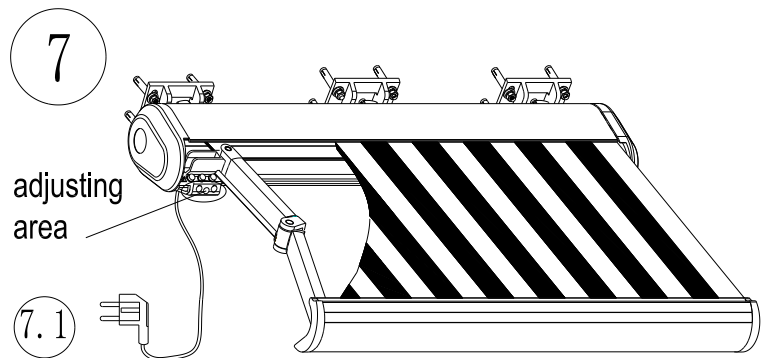

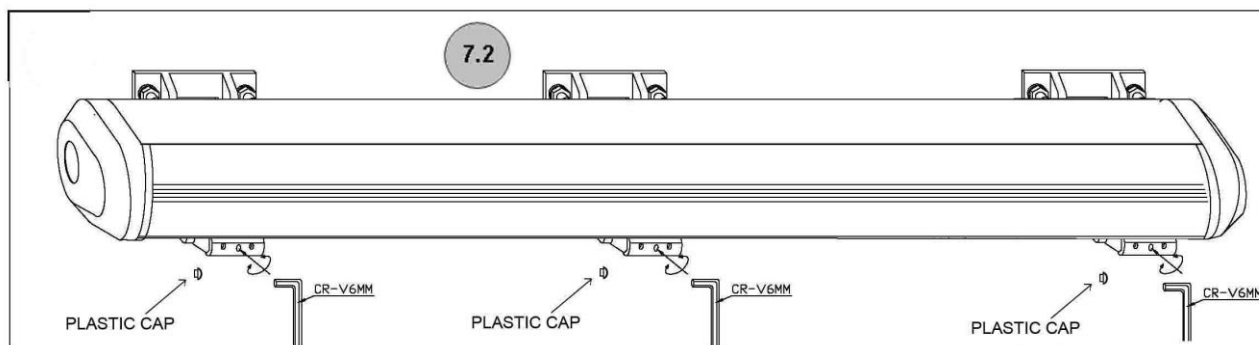

Follow the same procedure until all arms have been adjusted to the desired level.



The front bar must always be level. To ensure that both sides are completely level, a level indicator is recommended.



Place the plastic caps on the screws to protect them against weather based corrosion. Always remove the remote and keep it in a safe and dry place

Engine setting (off/on setting)

The stop limits of the motor are pre-set in the factory, so the awning can be used without adjustment before use; however, the user can adjust the stop limits with the help of expertise or qualified person.

In case of the following conditions, the motor needs limited adjustment:

- 1 The awning can't close completely.
- 2 The cover is loose.
- 3 The motor does not stop automatically, while the awning is completely closed.

Drawing 9:


1. Put the hexagon head of motor limit stop adjusting pole P1 into upper limit adjusting button P3, turn counter-clockwise to make the fabric closer to the roller enclosure, and turn clockwise to make the fabric farer to the roller enclosure.
2. Put the hexagon head of Motor limit stop adjusting pole P1 into the lower limit adjusting button P2, turn counter-clockwise to make the fabric extended more and turn clockwise to make the fabric extended less . As shown in Fig. 9.

P1: motor limit stop adjusting pole

P2: lower limit adjusting button

P3: upper limit adjusting button

P4: indication of adjustment and direction of movement

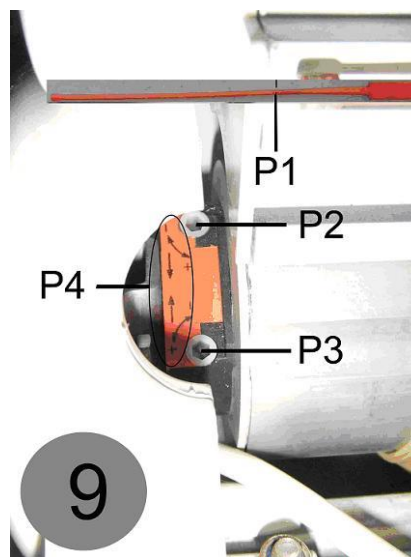



If the motor does not work after several times of adjustment, please wait 30 minutes to restart.



The motor must not be overloaded or used too frequently, so as to prolong its service performance.

Handling of the remote control

Note: There are legal limitations for the transmission range of radio waves. The maximum range is also limited by physical obstacles.

- Before installing, check whether the remote device and the awning are working correctly, Before you install the hooks.
To allow reaching almost every vertical area below.

Make sure that the mount is in a place to install the corresponding prescribed protection (IP 20) of the remote.

- Do not mount on metal or magnetic objects to avoid interference.

Battery/Use

NOTE: When you insert the battery make sure that the contacts are not bent.

- Open the battery compartment with the spanner in the battery compartment lid in the direction of the battery compartment and press the battery compartment cover, then the battery compartment slides.
- Put the battery in accordance with polarity and labeling in the battery
- Close the battery compartment, by clicking the two extensions of the battery compartment lid in the two cutouts on the battery compartment.
- Then press the skewer of the battery compartment lid into the hole at the battery compartment. The battery compartment cover snaps in with a click.
- If the remote control could not function, then check whether the batteries are inserted correctly and put them again if necessary.


Extend and retract the awning

The awning can be extended and retracted by a remote control included in delivery.

Drawing 8.1:


Press the extension button  "EXT" for the awning extension. The role moves up and the awning will be extended.

- Press the retract button  "RET" to close the awning. The role moves down and the awning will be retracted.
- Press the stop button  "STOP" to stop the extension/retraction of the awning.

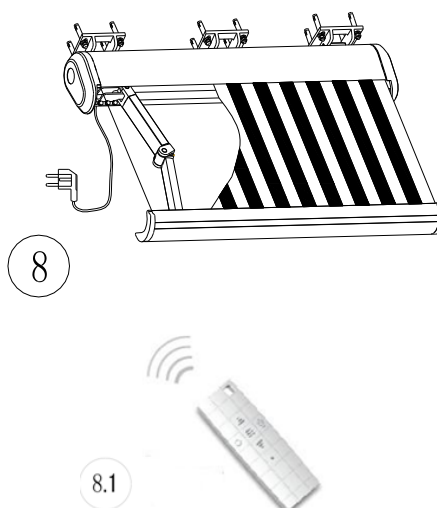

Drawing 8.2:

Insert the handle in the loop that is fixed at the awning. Open the awning by turning the crank handle clockwise. By turning it counter-clockwise you can retract the awning.

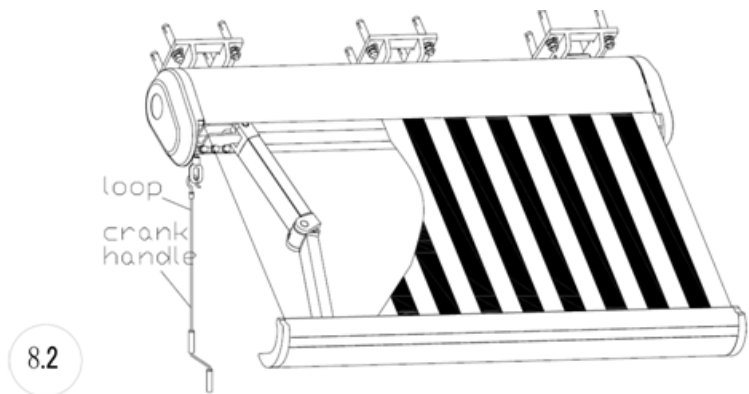

To avoid damage to the fabric, therefore, the awning fabric must always be properly rolled up.



The awnings are intended as a protection against the sun only. It is not to be used during periods of strong wind, rain, hail, or snow. In case of such conditions, retract the awning immediately.



Never allow children to play with the awning.



Be sure the fabric is tensioned. If the fabric is not tensioned during extension, please turn counter-clockwise until the fabric is tensioned.



Do not put any objects or parts of your body e. g. hands, in the awning while extending and retracting. Hazard of crush!



When the front bar touches the roller as shown in following figure during retraction, don't try to make them closer, otherwise the product might be damaged



Take out the remote control after adjusting the awning as you wish and put it on a place that is not reachable for children to avoid that they play with the awning.

General notes of the awning fabric

Awning fabrics are high performance products. Nevertheless, even given today's state of the art and the requirements imposed by environmental protection, there are limits to perfection. Certain appearances in the fabric that are sometimes objected to are still possible despite sophisticated production and processing technology.

Basically, these effects occur to different degrees in almost all awning fabrics. They do not decrease the quality of the fabrics in any way, however.

To avoid irritation, we would like to expressly draw your attention to the following characteristics in terms of consumer education:

- ◆ Creases are created during fabrication and when folding the awning fabric. In the course of this process, especially in lighter colors, surface effects can be created in the crease (pigment displacements), which appear darker with backlight (like stripe of dirt). They do not decrease the value or the performance of the awning.
- ◆ Chalk effects are light stripes that are created when processing refined goods and cannot

be totally avoided even with the greatest of care. Thus, they also do not constitute a reason for complaint.

- ◆ Rain impermeability: Acrylic and polyester sun protection awning materials are impregnated with water-repellents and at a minimum tilt of 14 degrees will withstand a light, short rain. In stronger or longer rain, awnings must be retracted to avoid damage. Awnings that are rolled up wet should be extended again as soon as possible for drying.
- ◆ Ripples in the seam, stitch and panel areas are caused by multiple layers of the fabric and various winding strengths in the roller tube. Fabric tension thus caused can cause ripples (e.g. waffle or herringbone patterns).
- ◆ The fabric's yarn need not be the same color as the part of the fabric that contains the seam.

(Excerpt from:
Important consumer information: product characteristics of awning fabrics
of the Federal Association of Technical Textile Fabrication e. V. BKTex).

Maintenance

Regular maintenance will not only help to keep a long durability but is also important for your own and the safety of other people.

- ◆ Examine regularly if wall brackets are tight.
- ◆ Examine the gear box once in half a year. If you find any damages stop using the awning until gear box has been repaired or renewed.
- ◆ Examine the bolts and nuts once in half a year, fasten them if loose or lax.
- ◆ Stop using the awning immediately if it has been damaged or it is not tightening properly.

Please contact an authorized service centre for repair.

Normally it is not necessary to lubricate moving parts of the awning. However, if it will be necessary on day do not use lubricants that are based on petroleum.

Use a straw attached to the spray nozzle. Lubricate generously the area between the end of the roller tube and the end bracket (pivot pin). Take care not to overspray on the fabric material.

Cleaning

Over time, dust and dirt will collect on the frame and will require periodic cleaning to maintain its appearance.

A mild spray cleaner or water/detergent mixture may be applied to the frame and then wiped clean. In most situations it should not be necessary to lubricate the moving component parts of your awning.

Clean the fabric once in half a year and replace once in two years.

Always use a natural soap for cleaning. Water should be cold to lukewarm. Let the fabric dry completely. Do not use heating appliances e. g. hairdryer for drying, only let it dry by natural air.

Storage

When you do not want to use the awning for a longer period of time it is recommended to take the awning out of the brackets and store it.

Attention! At least three healthy adults are needed for this step.

- ◆ Make sure that the fabric is dry completely before storing. Storing a wet fabric can cause spots and damage.
- ◆ Retract the awning completely.
- ◆ Bind the arms of the awning with a rope so that awning cannot unfold unintended. This might cause damage and injury. You can use the protection band that you could found on the arms after purchasing this product.
- ◆ Remove the awning by **above step 6** of mounting instructions in reversed order.
- ◆ Store the awning at a dry and safe place that is not reachable for children.

Dismounting

If you do not want to use the awning any longer or if you want to dispose it, you have to dismount it.

Attention! At least three healthy adults are need for this step.

- ◆ Retract the awning completely before you begin with dismounting. Bind the arms of the awning together to avoid unintended unfolding. This might cause damage and injury. You can use the protection band that was fixed on the awning when purchasing it.
- ◆ Follow the mounting instructions in reversed order to dismount the awning.

Attention! Safety hints and instructions have to be followed for dismounting as well.

Problem solving

☒ Errors ☐ Cause ☐ solution

- ☒ Awning does not respond to the remote.
 - ☐ No power available.
 - ☐ Check the plug to correct Connection. If the connection is correct, contact a professional.
 - ☐ The FI switch is set to "off" (out).
 - ☐ Consult a professional.
 - ☐ The tension is too low.
 - ☐ Please contact a specialist to check whether the tension meets the requirements.
 - ☐ The battery of remote is exhausted.
 - ☐ Replace the battery in accordance with Chapter "Battery /Use."

- ☒ Awning does not respond to the remote, although the signal from the awning is heard.
 - ☐ The awning is off or the line from 7 to the motor connector pin is not connected.
 - ☐ Check both turn pens and Screws.
 - ☐ The motor is off due to overheating protection.
 - ☐ After about 20 minutes, the motor automatically comes back into operation.
- ☒ Awning hangs are loose, although they have been extended.
 - ☐ Wrong maximum and minimum distance.

US



001-877-644-9366
customerservice@aosom.com

CA



001-855-537-6088
customerservice@aosom.ca

UK



0044-800-240-4004
enquiries@mhstar.co.uk

DE



0049-(0)40-88307530
service@aosom.de

FR



0033-1-84166106
contact@aosom.fr

ES



0034-931294512
atencioncliente@aosom.es

IT



0039-0249471447
clienti@aosom.it