

UK C000000

341-035



ASSEMBLY INSTRUCTION

ASSEMBLY DIAGRAM

RACING CAR



1. THIS PRODUCT SHOULD ONLY BE USED BY CHILDREN OF 3-6 YEARS OLD, MAXIMUM CARRYING WEIGHT IS 35 KGS, NEVER RIDE WITH MORE THAN ONE PERSON⊠ NOT SUITABLE FOR ADULT USING.

2. NEVER USE NEAR STEPS, SLOPED DRIVEWAYS⊠ HILLS ROADWAYS, ALLEYS, SWIMMING POOL AREAS, ROAD, ON GRASS OR WET SURFACES OR OTHER BODIES OF WATER.

3. ADULT SUPERVISION IS REQUIRED.

4. PLASTIC BAGS AND SMALL LOOSE PARTS MAY BE DANGEROUS, KEEP AWAY FROM THE REACH OF CHILDREN. TO AVOID SUFFOCATION HAZARD OR

CHILDREN. TO AVOID SUFFOCATION HAZARD OR SWALLOW.

5. BEFORE DRIVING TOY CAR EACH TIME, ADULT SHOULD INSPECT SCREWS OF EVERY PARTS, PLEASE TIGHTEN THE SCREW CAP IF ANY LOOSENESS. SECURE ALL FASTENESS BEFORE EVERY RIDE.

OF THE UNIT BEFORE RIDING.

7. ALWAYS WEAR SHOES, KNEEPAD AND WRISTER.
ALWAYS WEAR AN LOCAL STANDARD APPROVED
HELMET WHILE RIDING, WITH THE CHINSTRAP SECURELY FASTENED.

8.DO NOT USE SCREW-DRIVER TO PRIZE THE CONNECTION PARTS OF PLASTICS AND STEEL TUBES AND DO NOT HIT THE PRODUCT, AVOIDING INJURY CAUSED BY BROKEN PLASTICS TO CHILDREN.

PLASTICS TO CHILDREN.

9. DO NOT PUSH THE PRODUCT OR TOW/PULL ANY
OBJECTS WITH THE PRODUCT.


10. DO NOT USE FOR STUNTS OR JUMPING.

11. DO NOT RIDE THE PRODUCT AT DUSK, AT NIGHT OR AT
TIMES OF LIMITED VISIBILITY.

12. THIS PACKAGE CONTAINS SMALL PARTS FOR ADULT
ASSEMBLY ONLY

13. ALWAYS COMPLY WITH LOCAL LAWS AND REGULATIONS.



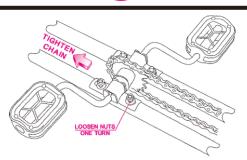


IF THE CHAIN COMES LOOSE

*REMOVE THE BACK PLASTIC COVER UNDER THE FRAME BY UNDOING THE PHILIPS HEAD SCREWS.

- *LOOSEN THE PEDAL BRACKET NUTS ONE TURN.
- *SLIDE THE PEDAL BRACKET FORWARD TO TIGHTEN THE CHAIN. *RE-TIGHTEN THE PEDAL BRACKET NUTS.
- *REPLACE THE PLASTIC COVER AND INSERT THE PHILIPS HEAD SCREWS.


Α	0	M8x1	E	x2	I	Ø8x1	
В		M5x8	F	5x50mmx4	J	Ø8x2	
С	4	M5x8	G	5x45mmx4	K	4x16mmx3	
D	0	Ø5x14	Н	5x20mmx2			
C	tool						



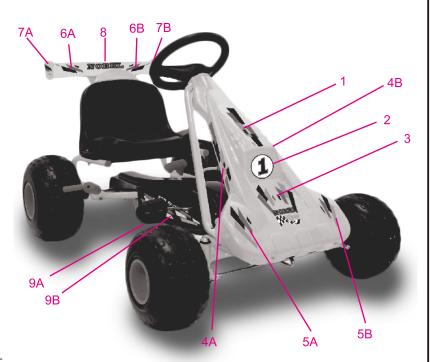



5x50mm F Ø5 D . Э— М5 В 5x50mm F Ø5 D

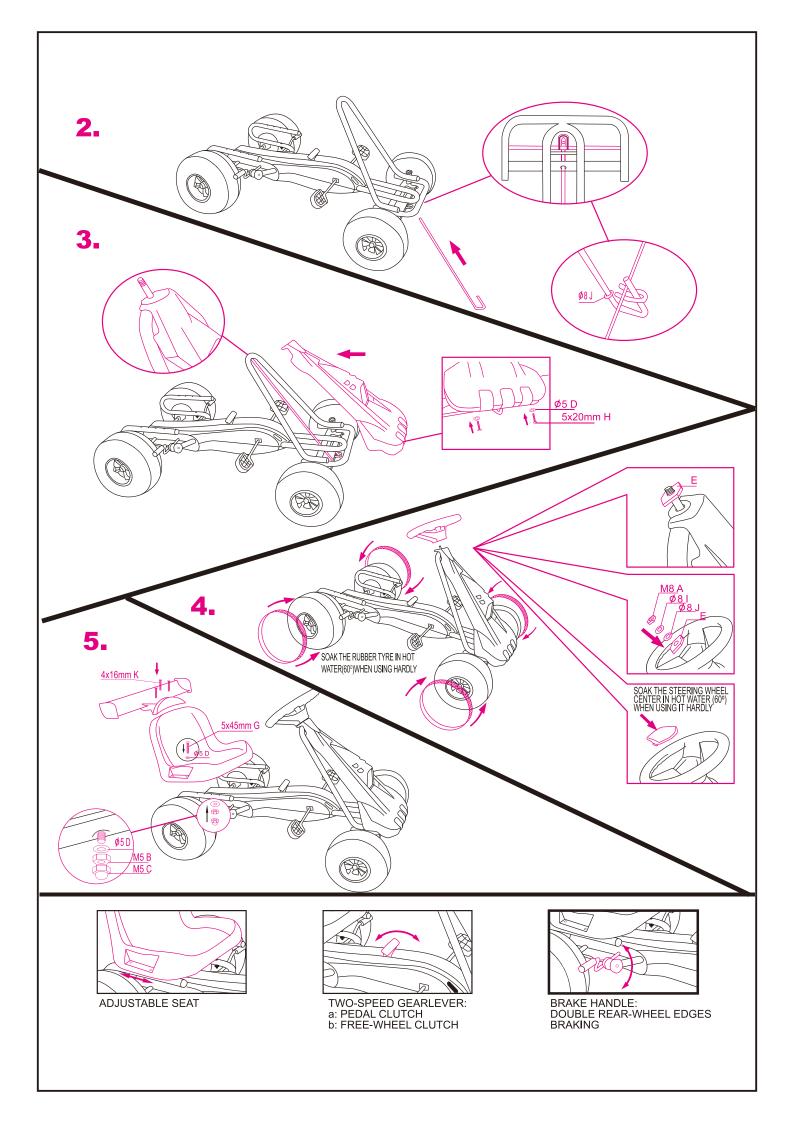





001-877-644-9366

customerservice@aosom.com

0033-1-84166106 contact@aosom.fr



001-855-537-6088 customerservice@aosom.ca



0044-800-240-4004 enquiries@mhstar.co.uk



0049-(0)40-88307530 service@aosom.de



0034-931294512 atencioncliente@aosom.es



0039-0249471447 clienti@aosom.it