

LIFT CHAIR

700-020



We're excited for you to regain your independence with Homcom! To ensure the best experience, please read this guide carefully before using your new lift chair.

Be sure to keep this manual close by, preferably in your chair pocket so that you can always refer to it as needed.



Safety Rules.....	3&4
Lift Chair Parts.....	5
Assembly Instructions.....	6
Lift and Recline Function.....	7
Certificates.....	8
Troubleshooting.....	8

SAFETY RULES

- Never set the lift chair in wet/damp areas or where dust can accumulate as these could cause an electrical fault or a mechanical dysfunction.
 - Never use the lift chair inside your home if the room temperature is over 90°F.
 - Never place the lift chair near a heat source (oven, chimney, furnace etc...) or in direct sunlight.

Do Not use the armchair if:

- The lift chair is wet.
- Your hands are wet.
- Only clean the chair with a dry cloth.

Situations where you should not use the lift chair:

Switch the lift chair's system off if it gets wet or seems not to be working properly, if any part of the lift chair is damaged or malfunctioning, if any part of the lift chair appears to be damaged or wiring is exposed

Usage:

- Indoors, avoid high temperatures and wet or damp areas.

Precaution:

- Never sit on the remote or place heavy objects on top of it.
- Do not drop the remote on the floor.
- Do not tug on the electric cable.
- Do not use the remote with wet fingers.
- Do not press or touch the buttons with sharp objects.
- Never unplug the remote without first turning the power off.
- The lift chair should rest for 30 minutes after it has been used for 30 minutes.

When the system of the lift chair is not in use:

- Make sure it is switched off.
- Unplug the lift chair's system from the wall outlet when you are not going to use it for long periods of time.
- Keep the lift chair in a clean and dry place.

Do not disassemble the lift chair:

- Do not remove the back of the lift chair .
- Do not try to disassemble or repair the lift chair yourself.

Correct way to handle the electrical plug:

- Check that you have the right voltage.
- Never use force on the cable or plug.
- Never pull the cable with wet hands.
- When removing the plug, hold the plug itself, do not pull on the cable.
- Do not use the lift chair system if either the cable or the plug are damaged.


Lift chair Parts:

- 1) Back
- 2) Armrests
- 3) Seat
- 4) Footrest
- 5) Control unit
—Lift/Recline Remote




Assembly Instructions:

1

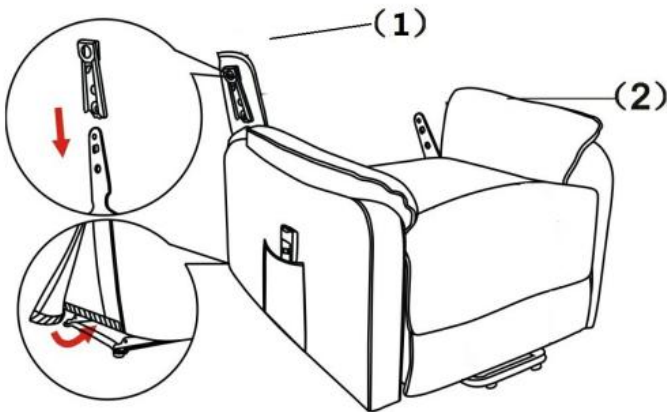


1) **Position the back** so that it fits into the seat, you will hear a “click” when it is in place.

2

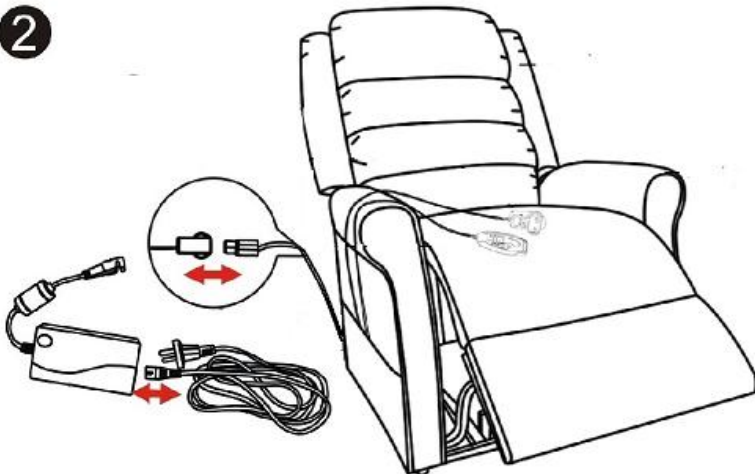


2) **Connect the Lift and Recline supply cable pins.** Fit the pins properly in the manner shown in the image. Do not force them, they only have one correct position.

3

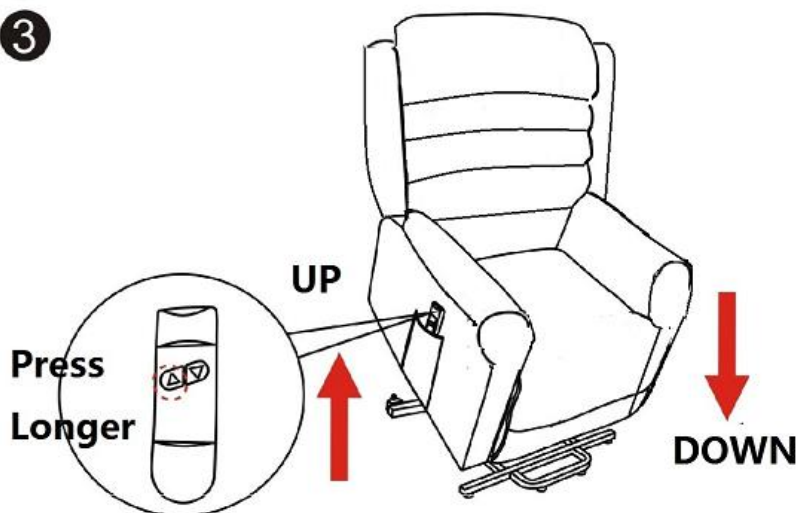

3) The pins must be connected correctly. If the lift chair starts working when you finally turn it on and it doesn't stop, it is because the pins have been connected incorrectly. If that should happen, turn the power off and reconnect the pins.

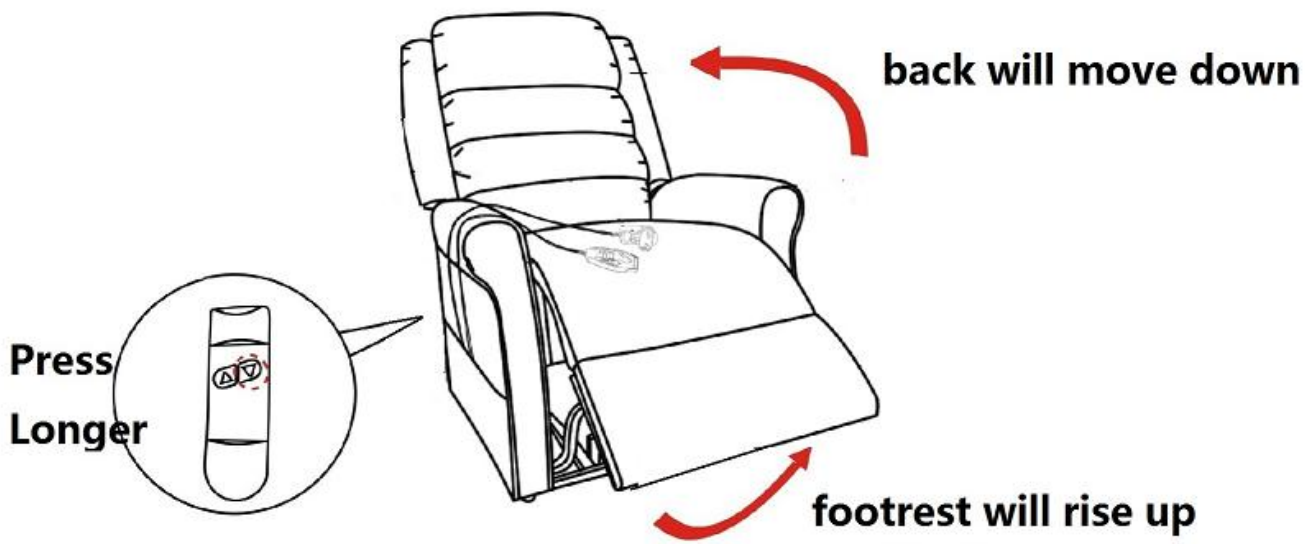

NOTICE: PLEASE DON'T STAND UP WHILE THE CHAIR IS STILL RAISING UP IN ORDER TO AVOIDING ACCIDENT

Lift and Recline Function

- Press the top two "Up" arrows to turn the armchair into the resting position (the back will move down and the footrest will rise up.)
- Press the bottom two "Down" arrows to make the armchair return to its normal position. If you keep pressing the button, the Lift chair will rise up and forward until it elevates you a standing position.

CERTIFICATES:

RoHS

CE

SGS

EMC

LVD

Troubleshooting:

If the lift chair is not working, check the following chart. Make sure you turn the power off and unplug from the wall outlet. If you have any questions, please contact us. Do not disassemble or repair any part of the lift chair yourself.

PROBLEM

POSSIBLE CAUSE

There is a noise during the massage

The noise is caused by the massage motors , and is normal.

The lift chair does not function when the button on the control unit is activated

Check that the plug is pushed into the wall outlet properly. Check whether the power supply button is on.