




INan014_UK

A90-282V70

TREADMILL USER'S MANUAL

* Maximum user weight is 100 kg.

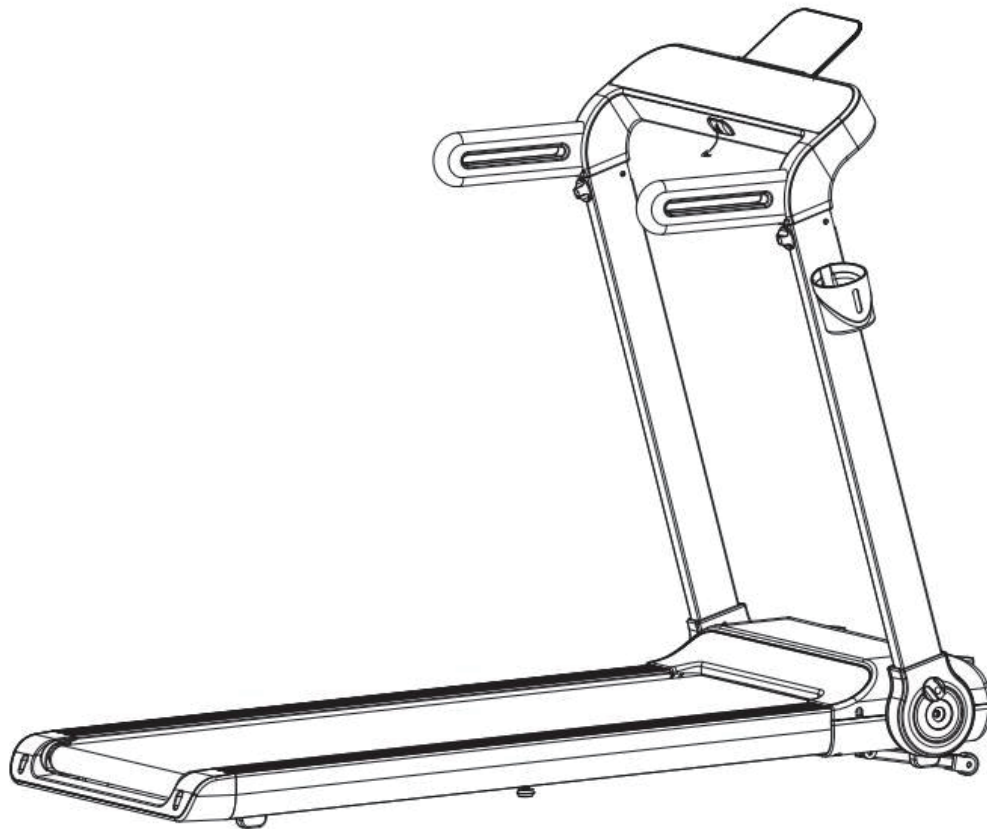

CAUTION

Read all precautions and instructions in this manual before using this equipment.

**UK
CA**


ASSEMBLY & INSTRUCTION MANUAL

CONTENTS

I. IMPORTANT PRECAUTIONS	3
II. MAIN TECHNICAL FEATURES	6
III. ASSEMBLY	7
IV. WORKOUT GUIDELINES	10
V. TREADMILL OPERATION	11
VI. MAINTENANCE	12
VII. RECYCLING INFORM.....	15
VIII. COMMON ERRORS	15



I.IMPORTANT PRECAUTIONS

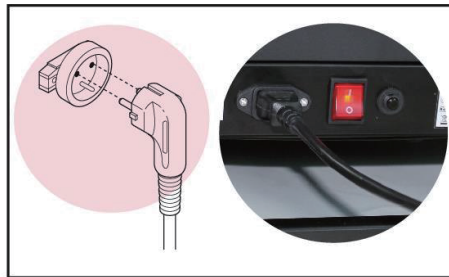

WARNING:

The security key has a magnet which must be put in the display. At the end of the lace there is a clamp which should be attached to the clothes. The treadmill will start working only if the key is placed in the display. THIS IS ESSENTIAL.

A correct lubrication of the treadmill with silicon oil or teflon is REALLY IMPORTANT. This lubrication must be performed regularly depending on each person, even before its first use.

You must preserve the original packaging with its protections, PURCHASE RECEIPT, manual and components during the guarantee period.

To decrease the risk of suffering severe injuries, please read and understand all the important instructions and warnings regarding the use of a treadmill before using it. Our company does not take any responsibility for personal injuries or property damages resulting from the use of this product.

1-Before starting any workout programme consult your doctor. It's specially important for people older than 35 years old, people with health problem and pregnant women.

2-The owner must ensure that all users are correctly informed about the warnings.

3-Use the equipment as explained in the instructions manual.

4-Keep the equipment in an enclosed area, away from dust or humidity. Don't store it in a garage, indoor backyard or near the water. Humidity, dust and water could lead to a malfunction of the equipment, annulling its guarantee.

5-Place the unit on a flat surface. If the surface is uneven, the proper functioning could be affected. Some models include levellers or levelling threads behind the legs, helping the levelling. Please read the manual to verify if your unit is provided with one of them..

6-The unit must be placed in a ventilated area. Don't use it in places with sprays or with oxygen dispenser. The air you breath may be affected and cause an accident.

7-Keep children younger than 12 years old and pets away from the equipment. Keep the security distance.

8-Check in the manual the maximum weight your equipment can support. An excessive weight could lead to a malfunction in the operating system, which won't be covered by the guarantee.

9-Wear suitable clothes and shoes. Do not use loose clothe that may get hooked.

10-If your equipment is working through a power supply: make sure that the power cord and plug are in good conditions. Carry out the connection only when the circuit has ground connection, otherwise it could cause damages on the equipment or in the property which the guarantee won't cover. Power cords must be away from hot surfaces.

11-If it is a battery-powered unit: check and make sure that they are charged enough so the display will fully function.

12-If your equipment is provided with a security key, please understand the produce before using it. The security key has a magnet which must be put in the display. At the end of the lace there is a clamp which should be attached to the clothes. The treadmill will start working only if the key is placed in the display. THIS IS ESSENTIAL.

13-If your unit works thanks to a power supply: don't put it into operation while you are on the belt. The motor would be unnecessarily loaded. The right way is placing yourself with open legs, on either side of the belt and sit up once it is ongoing.

14-If your unit works with an electric supply: check the speed it can reach, for your security. The best is to adjust gradually the speed in order to avoid sudden changes.

15-If your unit works through an electric supply: never leave the machine unattended while it's working. Take the security key off, turn the "on" button into "off" and unplug the power cord.

16-If your equipment is provided with a pulse sensor, you may know it isn't a medical instrument. It's designed as a help for the workout and determines the tendencies of heart rates. There are some factors which could affect the accuracy of the heart rate interpretations, for example the movements of the user.

17-The machines don't take too much space as they can be folded. Once folded, make sure that all is well assembled to the locking system, either if it has a lock or an hydraulic engine. Don't try to move it or raise unless you are insured. Should any damage happen being the machine uninsured, it won't be covered by the guarantee.

18-Check and tighten all screws on a regular basis, because due to vibrations screws and nuts tend to loosen. Damages caused by a lack of maintenance won't be covered by the guarantee.

19-A correct lubrication of the treadmill with silicon oil or Teflon is REALLY IMPORTANT. This lubrication must be performed regularly depending on each person, even before its first use. The lubrication must be carried out this way: disconnect the equipment of the electricity supply (in case you have one), pull up the tapestry from the side with one hand and spread the oil on the board. Please repeat this procedure from the other lateral side. Connect the equipment to the power supply (in case you have one) and turn the “on” button (red button) into the correct position (I), insert the security key and let the treadmill work for several minutes without any weight on it. Repeat this action on a regular basis.

20-Two people will be needed in order to take the unit from the package. Otherwise, the damages caused in this moment won't be covered by the guarantee.

21-Don't let any object fall into the grooves.

22-If the unit works through a power cord: unplug always the power cord before cleaning it, after the workout and before performing any maintenance duty.

23-This unit is designed for a domestic purpose and in an interior place, not for business environment or outside.

24-Do a workout with stretches before and after the sessions, you will avoid injuries.

25-Drink water before, during and after the workout.

26-If you start feeling pain or dizziness while training: STOP IMMEDIATELY.

27-You must preserve the original packaging with its protections, manual and components during the guarantee period.

28-The accessories can be different to the other models.


29-This electronic product can't be thrown under any circumstances into the municipal rubbish bins. With the aim of preserving the environment, this product must be recycled according to the applicable law of your country. Please contact your town council to know more about this procedure.

30-Should you need technical assistance or advise with the installation of pieces, You can get in touch with us .

YOU MUST KEEP THE PURCHASE RECEIPT IN ORDER TO HAVE ACCESS TO THIS SERVICE

KEEP THESE ADVISES FOR FUTURE REFERENCES

II.MAIN TECHNICAL FEATURES

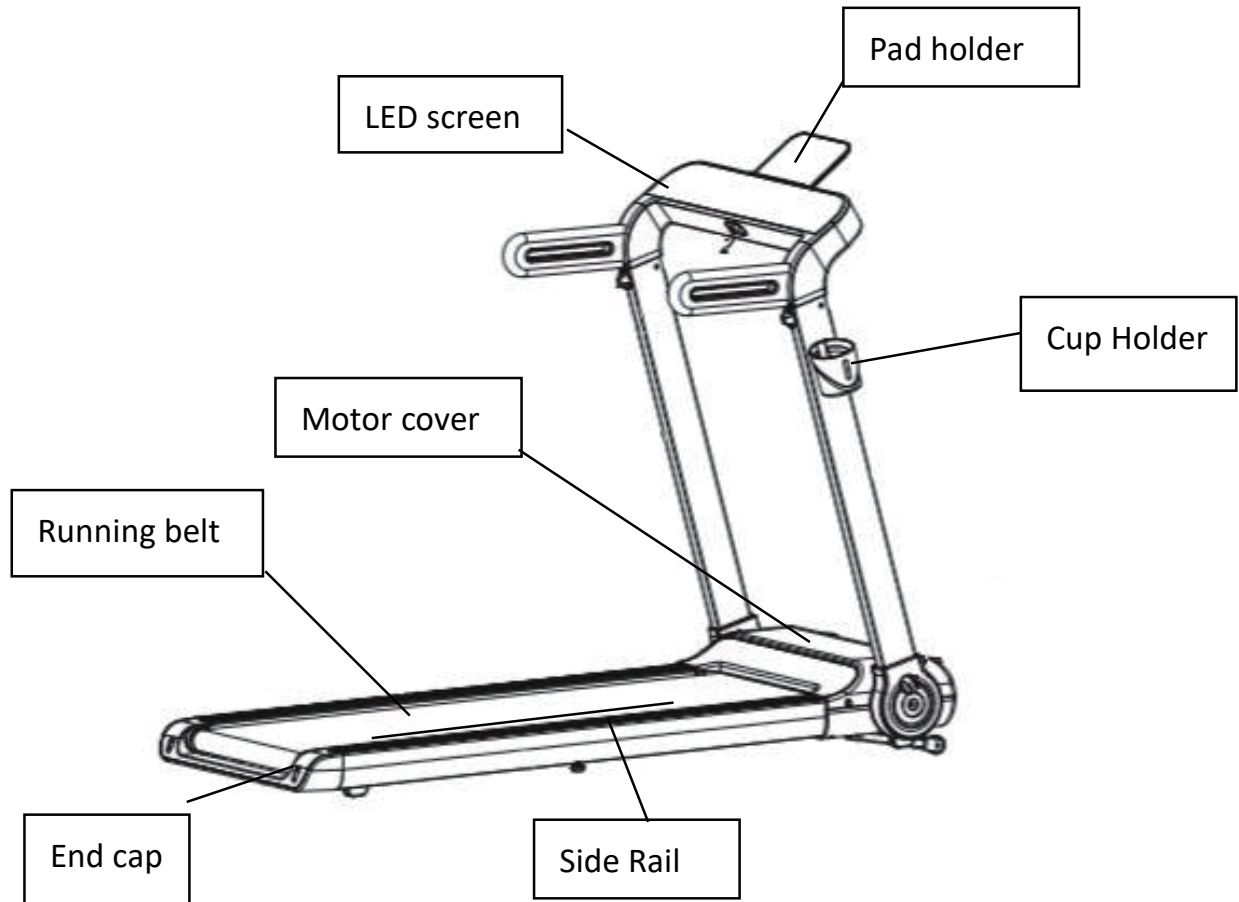

Input Voltage	220V±10%
Frequency	50/60 Hz
Running area	1220X460mm
Function	Time, Speed, distance, Calorie, heart rate, USB input(charging only)
Speed Range	1.0-15km/h
Incline	No incline
Max user weight	100kgs
Power	735W

III.ASSEMBLY




NOTICE: ASSEMBLY REQUIRES TWO PERSONS

Main part	Name		Q'ty		
	1.Main frame		1set		
No.	Fittings	Qty	No.	Fittings	Qty
①	M8 Knob	2	⑦	Multi Wrench	1
②	M10 Knob	2	⑧	6mm Wrench	1
③	M6*15	2	⑨	Silicone oil	1
④	ST4.2*16	1	⑩	Safety Key	1
⑤	Cup Holder	1	†	User's Manual	1
⑥	Ipad Holder	1			


STEP 1

1. Carry out the machine from the package by two persons and place it lightly on flat floor, and put other fittings beside the machine.
2. Lift up the upright tube according to the picture and lock it with 2pcs M10 knob screws at two sides.

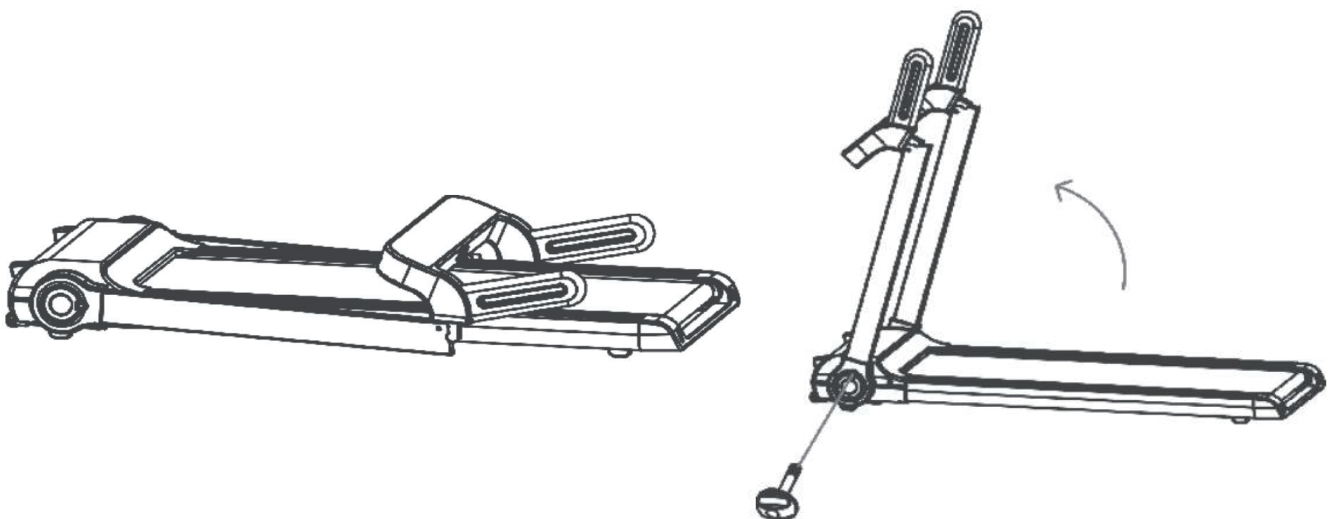


STEP 2

1. Put the console at right place as below picture shows, and lock it with 2pcs M8 knob screws at two sides.

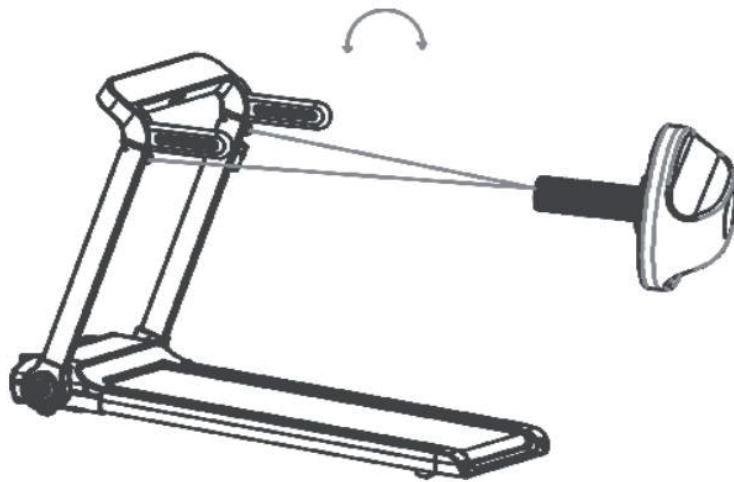


STEP 3

1. use 6mm wrench to fix the Ipad holder with the 2pcs M6x15 in the position shown in the figure.
2. Use multi wrench to fix the cup holder to the right column with 1pc screw ST4.2x16.
3. put safety key to right place, then can start to use treadmill.

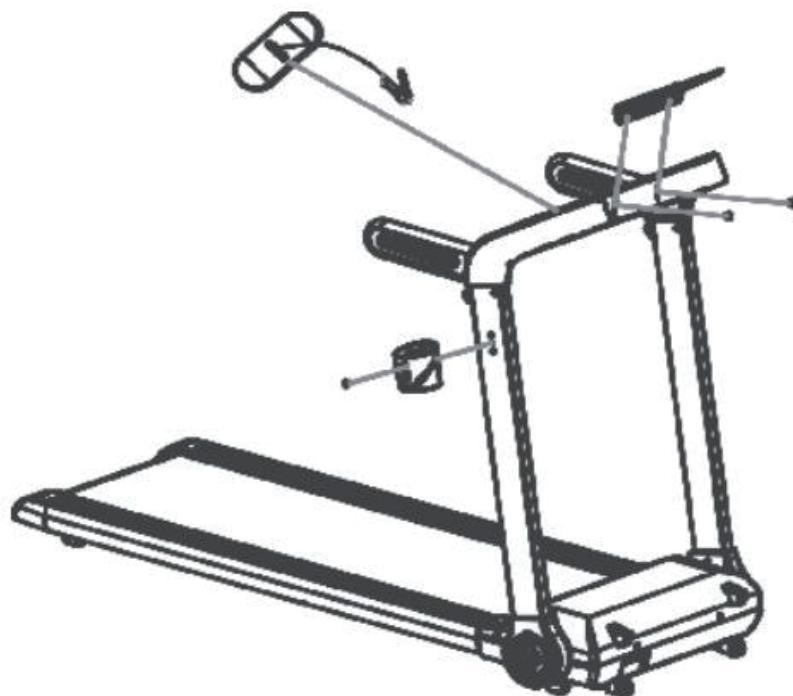


STEP 4

When you not use treadmill, just unlock the 4pcs knob screws, fall down upright tube, lay flat as below picture shows, and lock again 2pcs M10 knob screws at two sides.

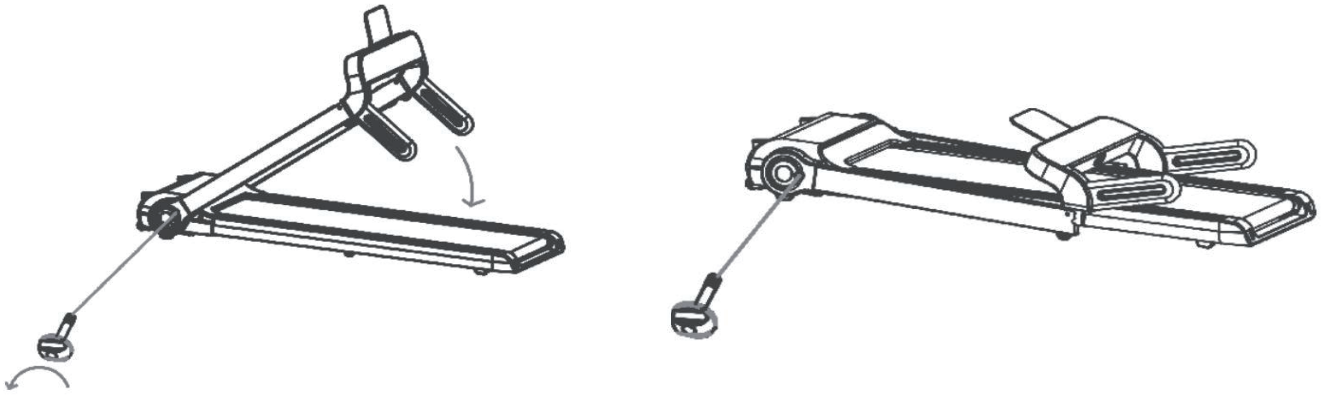


STEP 5

1. Fold up the treadmill, turn around the supporting frame locker to horizontal place, the supporting frame will extend automatically.
2. When need to use treadmill, collect the supporting frame back with foot and lock it with the locker at vertical place, then fall down to floor, repeat the steps as above.

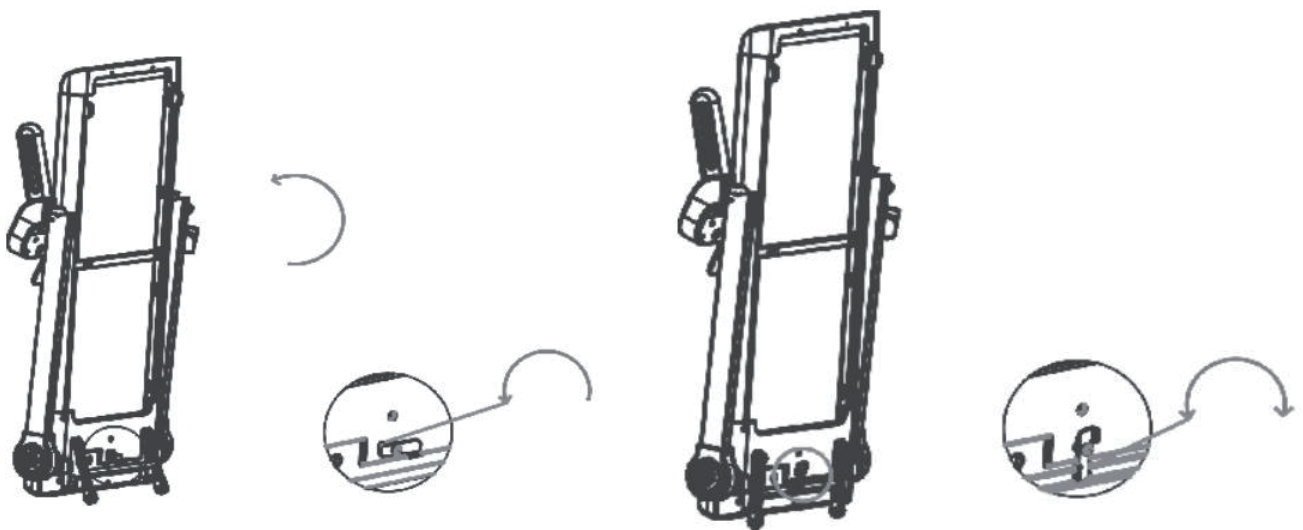

IV. WORKOUT GUIDELINES

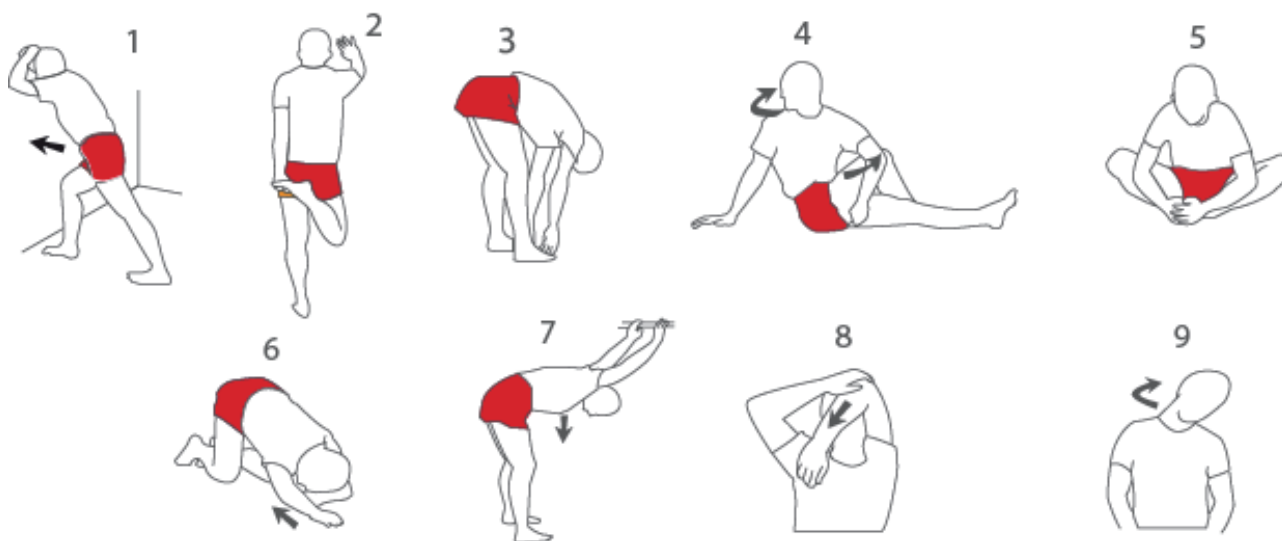

BEWARE: Before starting to use this or any exercise programs, consult your doctor. This is especially important for people older than 35 years old, or for people with health problems.

If your equipment is provided with a pulse sensor, you must keep in mind this isn't a medical instrument. Several factors can vary the accuracy of the heart rate interpretations. The pulse sensor is just a help for the work outs, determining the general tendencies of the heart rate.

PROGRAMM WITH WARM UP WORKOUTS:

Warm up: Start stretching and slightly activating the muscles between 5 and 10 minutes. The warmup will increase your corporal temperature, your heart rate and your blood flow, making you ready for the workouts.

- **Workout focused on the training area:** Do some exercises during 20-30 minutes with your heart rate (do not maintain your heart rate more than 20 minutes during the first weeks of the exercise program). Breath constantly and deeply during the workout (never hold your breath).

- **Cool down:** Finish with stretching exercises for 5-10 minutes. Stretching increases the flexibility of your muscles and help you to avoid injuries after the workouts.


Frequency of the workout: In order to be fit or improve your shape, complete three workout sessions each week, with a rest day between the workouts. After some moths of regular training, you will be able of completing up to five workouts a week.

V.TREADMILL OPERATION


COMPUTER




MANUAL

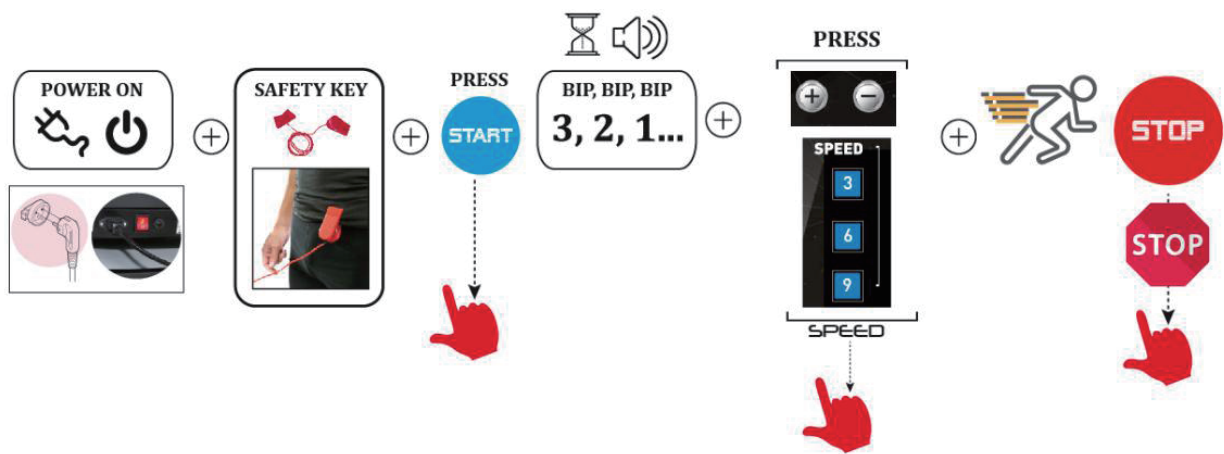

VI. MAINTENANCE

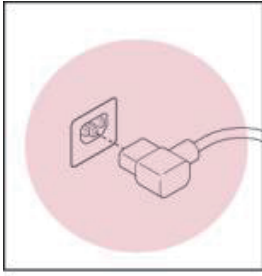


This product must be earthed. If the power cord is damaged, it must be replaced with a manufacturer recommended power cord.

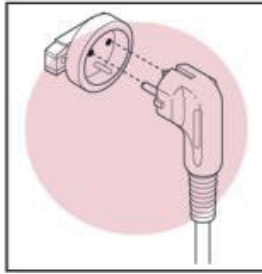

DO NOT TANGLE THE POWER CORD

REGULAR MAINTENANCE OF THE TREADMILL

- **STORAGE:** Keep your equipment in a enclosed place, away from dust or humidity. Don't store it neither in a garage or in a indoor backyard, or near the water. Humidity, dust and water could damage it and have an effect on its functionality.
- **ELECTRIC CABLE:** Make sure that the cable and plug are in perfect conditions. Electric cables must be away from hot surfaces.
- **SCREWS AND CONNECTING CABLES:** Supervise and tighten the screws on a regular basis, because due to the vibration the screws and nuts tend to loosen.
- **LUBRICATION:** It's a correct lubrication of the treadmill with silicon oil or teflon is really important. This lubrication must be performed regularly depending on its use even before the first use.
 - a) The step to lubricate the running board is as follows: (see the above figure)
 - b) Stop the running belt and fold the treadmill.
 - c) Turn over the running belt at the back of the main frame. Insert the lubricant pot as deep as possible into the middle of the running belt. Apply the lubricant onto the inner side of the running belt. Lubricate both sides of the running belt.

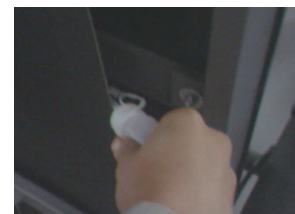


After the lubrication is completed, start the machine at 1km/h to let the running belt bring silicon all over the board.

After running for a period of time, the treadmill must be configured with special cymene silicone oil for lubrication.

Suggestion:


< 3 hours/week	2 months
4 – 7 hours/week	1 month
> 8 hours/week	15 days

• **ALIGN AND TIGHTEN THE BELT OF THE TREADMILL**

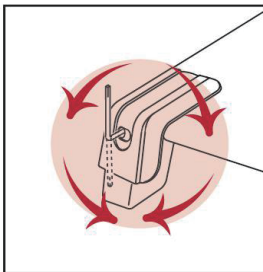


LEFT BOLT RIGHT BOLT


• **ALIGN THE BELT:** Due to its use, the belt can move off center. If the belt has moved to the left, start treadmill, and increase the speed to 3MPH. Use the 6mm Wrench to turn the fixed left bolt clockwise or turn the fixed right bolt counterclockwise. Do not tighten the belt too much in order to be able to walk. Repeat this procedure until the belt is properly aligned.

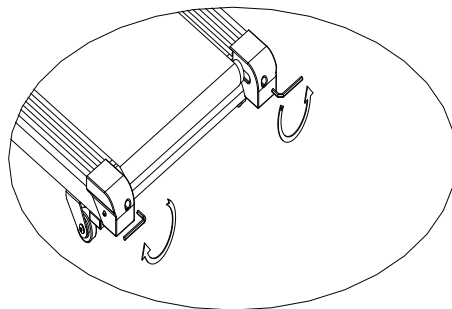


If deviate to the left, then adjust the screw on the left side clockwise or the screw on the right side anticlockwise.

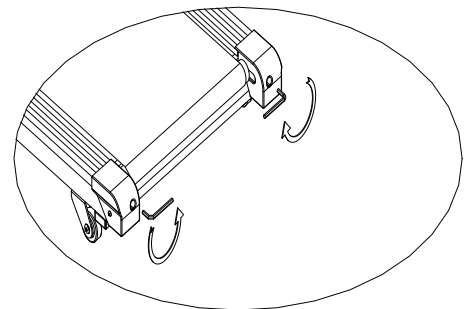


If deviate to the right, then adjust the screw on the right side clockwise or the screw on the left side anticlockwise.

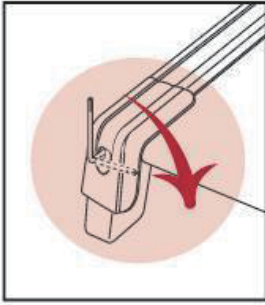


• **TIGHTEN THE BELT:** (if the belt slips on the treadmill when walking). Start treadmill and increase the speed to 3MPH. Using the 6 mm Wrench, turn both bolts 1/4 clockwise. If the belt is properly tight to walk, you must be able to pull up each side of the belt 5 or 7 cm off the platform. Be careful and maintain the belt aligned. Repeat this procedure until the belt is properly tightened.

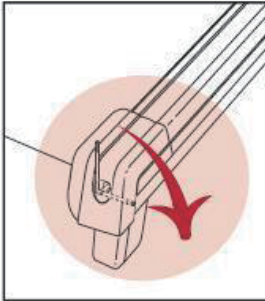

LEFT BOLT RIGHT BOLT

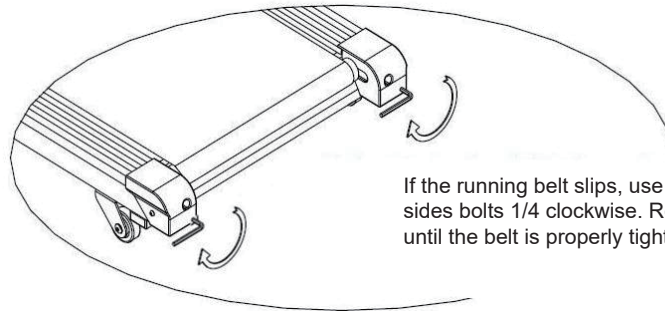

If the running belt slips, use 6mm wrench, turn both sides bolts 1/4 clockwise. Repeat this procedure until the belt is properly tightened.

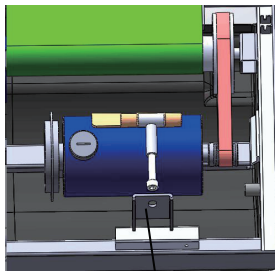

Adjusting bolt


• **TIGHTEN THE DRIVE BELT:** If the drive belt becomes loose after using for a period, you need to:

- (1) Open the motor cover .
- (2) Use the 6mm wrench to turn the adjusting bolt clockwise.

Repeat this procedure until the drive belt is not slippery anymore.

- **CLEANING:** Don't use abrasive products. A damp cloth is enough.
- **LEVELING:** If your unit is provided with leveling wheels, please adjust them to avoid vibrations and therefore malfunctions.
- **KEEP THESE MAINTENANCE ADVISES FOR FUTURE REFERENCES**


VII. RECYCLING INFORMATION

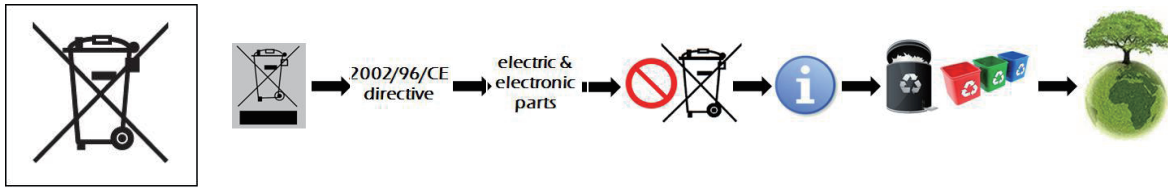

This electronic product must not be disposed of in municipal waste. To preserve the environment, this product must be recycled after its useful life as required by law.

VIII. COMMON ERRORS:

ERRO CODE	REASON	HOW TO SOLVE
E01	A) signal wire not well connected	Re-connect signal wire
	B) signal wire broken	Change new signal wire
E02	A) Over current protection	Turn off machine and restart
	B) Motor burnt	Change new motor
	C) PCB burnt	Chang new PCB
	D) Input voltage too low	Check input voltage
E03	Over load protection	Turn off machine to have a rest and restart
E04	A) Sudden big current protection	Turn off machine and restart
	B) PCB burnt	Chang new PCB
E05	A) Explosion-proof protection	Check input voltage
	B) PCB burnt	Chang new PCB
	C) Motor wire not well connected	Re-connect motor wire
E06	Motor wire not well connected or broken	Re-connect or change new motor wire
---	Safety key off	Re-put safety key

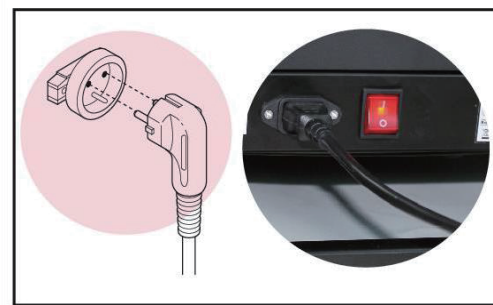

A correct lubrication of the treadmill with silicon oil or Teflon is REALLY IMPORTANT. This lubrication must be performed regularly depending on each person, even before its first use.

